

Overview of Programs

Type of laundry Note care labels!	max. Load up to:	Care Symbols	Program	Program duration in min. (approx.) *				
				Without additional functions	With Power Wash	With Quick Wash **	With Rinse Plus	With Reduced ironing
Regular / Cotton								
Colorfast and white cotton and linen (e. g. towels, sheets)	full load		5 Power temp. boost	70	95	55	80	72
			4 Temp. boost	65	95	50	75	67
			3 Hot	50	95	45	60	52
Non-colorfast cotton and linen			2 Warm	50	95	45	60	52
			1 Cold	50	95	45	60	52
Permanent Press								
Colorfast permanent press (e. g. dress, shirt, pants, poly, cotton blend)	½ load		3 Hot	45	70	40	55	49
Non-colorfast permanent press (e. g. dress, shirt, pants, poly, cotton blend)			2 Warm	45	70	40	55	49
			1 Cold	45	70	40	55	49
Delicates								
Delicates and knitted fabrics	⅓ load		2 Warm	30	50	30	36	33
			1 Cold	30	50	30	36	33
Hand Washables								
Hand washables and woolens (e. g. silk) 	⅓ load		2 Warm	26	47	26	33	26
			1 Cold	26	47	26	33	26

Additional programs

Program selector	Notes / Application	Program duration in min. (approx.) *
Spin	Spin cycle for spinning hand-washed laundry. Water is drained before the spin cycle. Please comply with the maximum spin speeds as specified in the operating and installation manuals.	11
Soak	The Soak setting is used to pre-treat heavily stained items. Please comply with the maximum spin speeds as specified in the operating and installation manuals.	120
Drain	Drains water after a wash program with the No final spin setting for gentle treatment of delicate laundry.	3

* The program duration varies from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of washing and amount, detergent, fluctuations in the mains voltage and selected additional options.

** Recommended for ½ load only.

Further information can be found in the operating and installation manual.
Please read the manual carefully and comply with the safety instructions.