

Accessories use tips

Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

 
Accessory	Functions	Level
	☒ Air fry ☒ Dehydrate	1 1
	☒ Toast ☒ Bake ☒ Broil	0 / 1 0 / 1 0 / 1 / 2
	☒ Air baking ☒ Roast ☒ Broil ☒ Bake	1 1 0 / 1 / 2 0 / 1

* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

Level:



Hot Caliente



Level:



IMPORTANT: Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.

IMPORTANTE: No use los accesorios incluidos ni otros utensilios de cocina metálicos con las funciones de microondas, como recalentar, descongelar, ablandar, derretir, mantener caliente y cocinar.

Consejos de uso de accesorios

Colocar los accesorios en el nivel correcto logrará un mejor rendimiento de cocción. Consulte las recetas en la guía de control en línea.

Accesorio	Funciones	Nivel
	☒ Freír con aire ☒ Deshidratar	1 1
	☒ Tostar ☒ Hornear ☒ Asar a la parrilla	0 / 1 0 / 1 0 / 1 / 2
	☒ Horneado al aire ☒ Asar ☒ Asar a la parrilla ☒ Hornear	1 1 0 / 1 / 2 0 / 1

* Cuando cocine alimentos aceitosos o jugosos, coloque una placa para hornear resistente en la parte inferior del horno para recoger las gotas.

P/N : W11582096B