

CONTROL PANEL AND FEATURES

WARNING

Fire Hazard


No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.



Normal — Quick Dry 15 min

Bulky Items — 45 min Dry

Delicates — 60 min Dry


usual — 90 min Dry

eam Refresh — Air Only 90 min

Timed Cycles

 Hold to Start

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

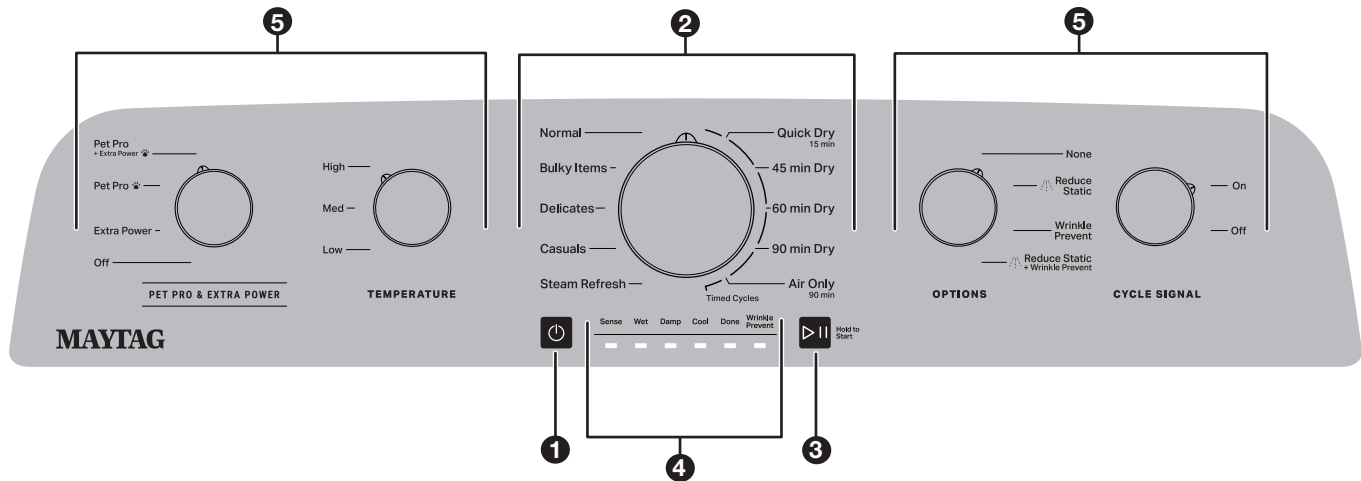

**Not all features, cycles, and options are available on all models. Appearance may vary.*

Press to turn On/Off or to stop/cancel a cycle.

Turn knob to select desired cycle. When using an Automatic Dry cycle the sensors will monitor moisture and heat levels and automatically stop the cycle at the right time. When using a Timed Cycle, user can choose the length of time for the cycle to run by selecting the Time option (15, 45, 60, and 90 minutes).

Press and hold the **START/PAUSE** for at least one second to start cycle.

Press **START/PAUSE** during a cycle to pause it. Touch again to resume.

Monitors and displays the cycle progress from Sensing to done.

Pet Pro

Select this option to improve filtering performance from pet hair. You can use this mode at any time, but it is specially adapted to loads with large amounts of pet hair. Turn this modifier on or off at the turn of a knob.

NOTE: The Pet Pro Modifier is used to remove Pet hair from clothing. Do not put your pets in the Appliance.

Your dryer comes with two types of cycles - sensor drying cycles and timed drying cycles.

Sensor drying cycles - Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

Timed Drying cycles - In these cycles, you can specify the drying time. Time options available are 15, 45, 60 and 90 minutes. For a complete list of all cycles, please refer to the online cycle guide document.

NOTE: These clothes dryer's Government energy certifications were based on the Timed Dry Cycle and Maximum Drying Temperature Setting. The as - shipped defaults of Normal Dryness, Wrinkle Prevent off, were used.

NOTE: If loads do not seem as dry as you would like, select Extra Power or increase temperature the next time you dry a similar load. If loads seem too dry, per your liking, select a lower temperature the next time you dry a similar load.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the "Owner's Manual" included with your machine.

NOTE: If you accidentally select the wrong language during start-up and/or you want to get back to Factory settings then perform Factory Reset. To do this - Press & hold both TEMP and WRINKLE PREVENT keys until display count-down has completed.

Find your QR code on your product's serial tag, as shown in the diagram.

YOUR QR CODE UNLOCKS... product registration and warranty information, installation instructions, product guide, cycle guide, how-to videos, and additional accessories to get the most out of your product. If you purchased a smart appliance, your QR code will provide instructions on how to download the app and connect. You can access the full Installation, User Maintenance and Operating Instructions, Warranty details, and more by visiting our website at www.maytag.com/owners or www.maytag.ca/owners. This may save you the cost of a service call. To receive a free printed copy of the information online, call us at **1-800-344-1274 (U.S.A.) / 1-800-807-6777 (Canada)** or write to us at:

Maytag Customer Service
PO Box #8
St. Joseph, MI 49085

Maytag Brand Appliances
Customer eXperience Center Unit
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

Register to access warranty information and receive important notifications related to your product. Scan the Photo Registration Card or QR code to register your product.

