# WM5800H\_A



# 5.0 cu. ft. Mega Capacity Smart Front Load Washer with TurboWash® 360° and AI DD® Built-In Intelligence

5.0 cu. ft. Mega Capacity

Built-In Intelligence: AI Fabric Sensor / Smart Pairing™

TurboWash® 360° Technology

Allergiene® Cycle Pet Care Cycle





**SUMMARY** 

Matching Electric Dryer

Matching Heat Pump Dryer

Matching Gas Drver

WASH PROGRAMS

No. of Programs

Wash Programs

No. of Options

WASH DETAILS

Wash/ Rince Temps

No. of Spin Speed

Spin Speeds

Water Levels

No. of Soil Levels

Max RPM

No. of Wash/Rinse Temps

Options

Type

Capacity







## Enjoy new ways to control your home with LG smart appliances

- Use the ThinQ® app to start the laundry while you're out
- Get alerts when the cycle is finished

Front Load Washer

Graphite Steel (V)

Alphine White (A)

Normal, AI Wash, Bedding,

Heavy Duty, Allergiene™

Perm. Press, Tub Clean,

BrightWhites™, Sanitary, Rinse & Spin, Spin Only,

Hand/Wool, Activewear,

Dresses, Color Care,

Large Load, XL Load

Swimwear, Kids Wear, Jeans,

Sweat Stains, Small Load,

TurboWash®, Steam, Fresh Care, Pre-wash, Remote Start, Delay,

Wi-Fi, Extra Rinse, Control Lock

Extra Hot/ Hot/ Warm/ Cold/

Extra High/ High/ Medium/ Low/

No Spin

Load Sensing

1300

Drum Light, Soak, Signal, "More Cycles" Edit, Overnight Wash

ColdWash™, Pet Care,

Microplastics care,

Delicates, Towels, Quick Wash,

DLEX5800X


DLGX5801X

29

 $\bullet$  With Smart Pairing  $\mbox{^{TM}},$  the washer can tell the dryer to select a compatible drying cycle





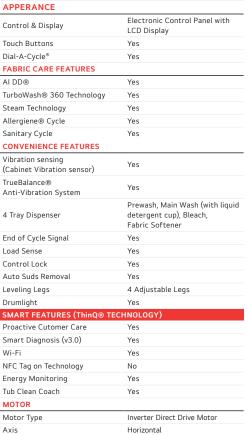





NeveRust® Stainless Steel Drum	Yes
Cabinet	Painted Steel (One Unit)
Control Panel	
Top Plate	Painted Steel
Door/Rim	Glass/Chrome
Door Cover	Tempered Glass Door
All Available Colors	Graphite Steel (V) Alpine White (A)
ENERGY	
ENERGY STAR® Most Efficient	Yes
ENERGY STAR®Certified	Yes
CEE Tier	Tier 3
IMEF	3.1
IWF	2.9
POWER SOURCE	
Ratings	UL Listed
Electrical Requirements	120 V, 60 Hz, 10 A
Туре	Electric
OPTIONS/ ACCESSORIES	
Pedestal	WDP6V, WDP6A
Pedestal (WxHxD)	27" x 13 5/8" x 28" (43 7/8" D with door open)
LG Sidekick® Pedestal Washer	WD300CV, WD300CA
LG Sidekick® Pedestal Washer (WxHxD)	27" x 14 1/8" x 30 3/4" (50 1/2 with drawer open)
Stacking Kit	KSTK4
LIMITED WARRANTY	
Parts & Labor	1 Year
Drum	3 Years
Direct Drive Motor	10 Years
UPC CODES	
WM5800HVA (Graphite Steel)	048231349796
WM5800HAA (Alphine White)	195174122358

# WM5800H\_A



#### **DIMENSION / CLEARANCES**

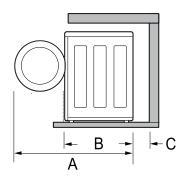


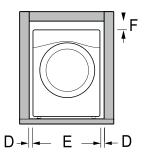

DIMENSIONS	
Product (WxHxD)	27" x 39" × 33 1/8"
Depth with Door Open	57 3/4"
Carton Dimensions (WxHxD)	29 1/8" x 41 7/8" x 33 3/8"
Approx. Weight (Product / Carton)	203.9 lbs / 224.9 lbs
A	57 3/4" (146.6cm)
В	33 1/8" (84cm)
C	4" (10cm)
D	1" (2.5cm)
E	27" (70cm)
F	1/4" (0.5cm)

### **DIMENSION / CLEARANCES**

To ensure sufficient clearance for water inlet hoses, drain hose and airflow, allow minimum clearances of at least 1" (2.5 cm) at the sides and 4" (10 cm) behind the appliance. Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

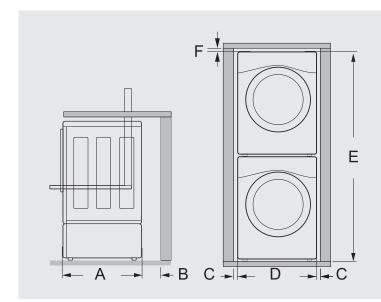

# Stacking or Pedestal Installation

 
The washer can be stacked under a dryer or on top of a pedestal or pedestal washer.

- Refer to the instructions packaged with the optional pedestal kit before stacking appliance on pedestal.
- Do not use a drain pan with a pedestal or pedestal washer installation as it can block the drawer. Using a drain pan may result in increased vibration and noise during operation.

DIMENSIONS	
A	33 1/8" (84cm)
В	4" (10cm)
С	1" (2.5cm)
D	27" (70cm0
E	77 1/2" (196.8cm)
F	1/4" (0.5cm)

## CONNECTING THE WATER INLET HOSE

- Check the fittings and seals. Inspect the threaded fitting on each hose and make sure there is a rubber seal (1) in place in both ends of each hose to prevent leaking.
- Connect the water inlet hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.
- Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.





Flush out the inlet hoses.

- After the hoses are connected, turn on the water faucets and flush out any foreign substances such as dirt, sand, or sawdust. Foreign substances can damage washer inlets and lead to leakage.
- Let the water drain into a bucket, and check the water temperature to make sure you've connected the hoses to the correct faucets.

Attach the inlet hoses to the back of the washer.

- Attach the hot water inlet hose to the hot water inlet on the back of the washer. Attach the cold water inlet hose to the cold water inlet on the back of the washer.
- Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses.



