 

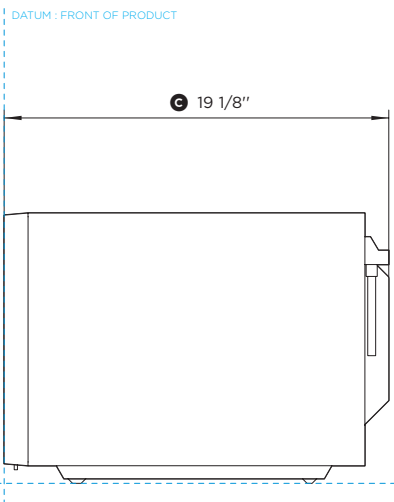
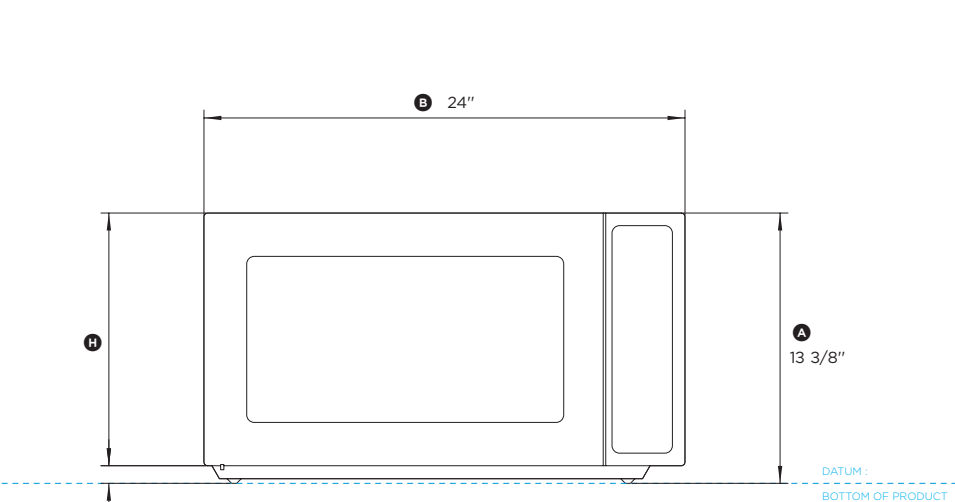


DATA SHEET

24" MICROWAVE OVEN

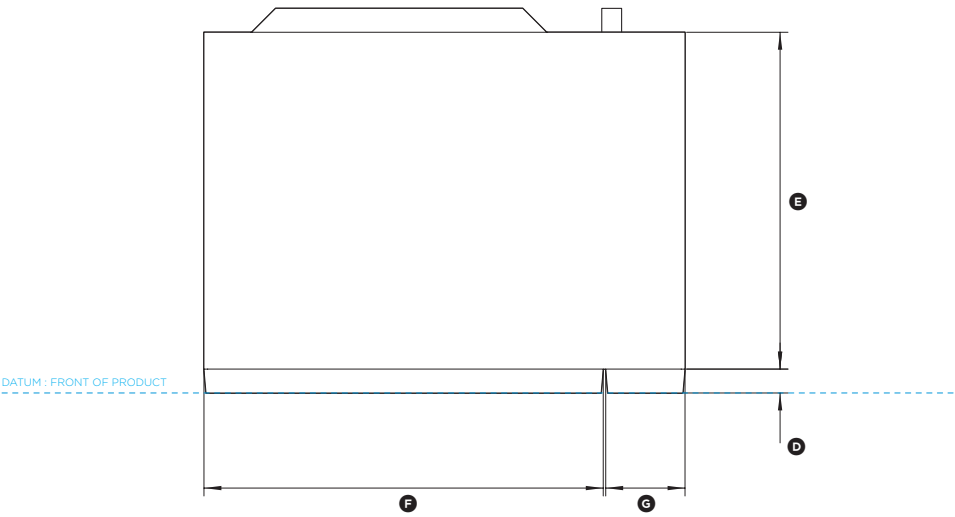





Model no:
MO24SS2 (refer page 2 for metric measurements)

Product Dimensions	in
Ⓐ Overall height of microwave	13 3/8"
Ⓑ Overall width of microwave	24"
Ⓒ Overall depth of microwave	19 1/8"
Ⓓ Depth of front panel	1 3/16"
Ⓔ Depth of chassis	16 3/4"
Ⓕ Width of door	19 7/8"
Ⓖ Width of control panel	4"
Ⓜ Height of chassis	12 9/16"
Ⓨ Height from bottom of chassis to bottom of product	13/16"

INDICATES PRODUCT / CABINETRY DATUM -----

DATE: **20.08.2015**

 IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com

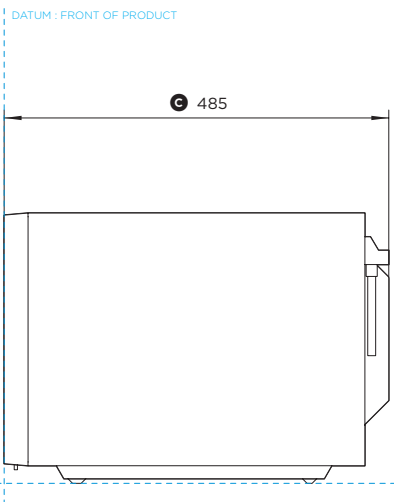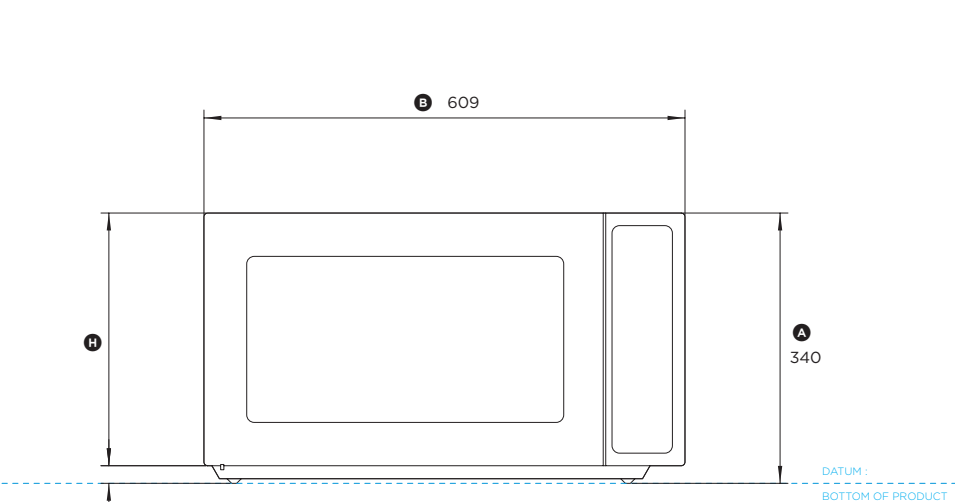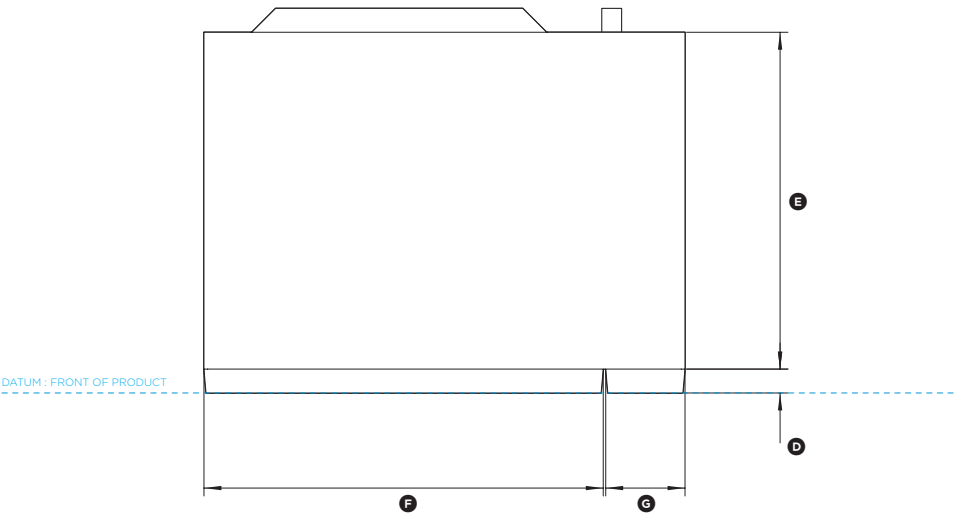

Model no:
MO24SS2 (refer page 1 for imperial measurements)

Product Dimensions	mm
Ⓐ Overall height of microwave	340
Ⓑ Overall width of microwave	608
Ⓒ Overall depth of microwave	485
Ⓓ Depth of front panel	30
Ⓔ Depth of chassis	425
Ⓕ Width of door	505
Ⓖ Width of control panel	100
Ⓜ Height of chassis	319
Ⓨ Height from bottom of chassis to bottom of product	21

INDICATES PRODUCT / CABINETRY DATUM -----

DATE: **20.08.2015**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. www.fisherpaykel.com