



FISHER & PAYKEL

DATA SHEET Warmer Drawer, 30" - Minimal style

Model no:

WB30SDEB2


(refer page 2 for metric measurements)

| Product Dimensions | in |
|---|-----------|
| Overall height of warmer drawer | 10 11/16" |
| Overall width of warmer drawer | 29 15/16" |
| © Overall depth of drawer (includes front panel & power plug) | 22 5/16" |
| Height of drawer front panel | 10 1/2" |
| © Width of chassis | 27 13/16" |
| © Depth of drawer front panel and flange | 13/16" |
| Depth of chassis (includes power plug, excludes flange) | 21 9/16" |
| Distance from side of chassis to side of drawer front | 1 1/16" |
| ① Depth of open drawer (measured from front of drawer panel) | 16 1/2" |
| Height from bottom of chassis to bottom of front panel | 1/16" |
| | |

| in |
|----------|
| 10 3/4′ |
| 28 1/2' |
| 22 1/16′ |
| 30 1/16′ |
| 1/8′ |
| 1/16′ |
| |

DATE: 07.04.2021

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

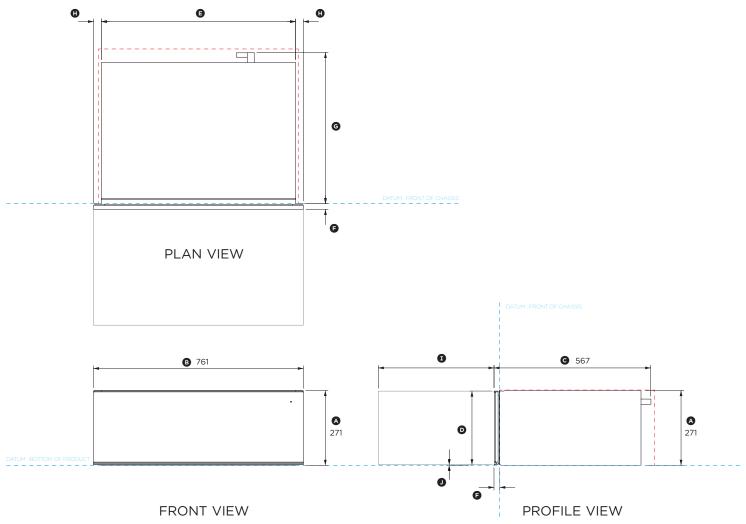



FISHER & PAYKEL

DATA SHEET Warmer Drawer, 30" - Minimal style

Model no:

WB30SDEB2

(refer page 1 for imperial measurements)

| Product Dimensions | mm |
|--|-----|
| Overall height of warmer drawer | 271 |
| Overall width of warmer drawer | 761 |
| © Overall depth of drawer (incl. front panel & power plug) | 567 |
| Height of drawer front panel | 267 |
| © Width of chassis | 707 |
| Depth of drawer front panel and flange | 20 |
| Depth of chassis (incl. power plug) | 547 |
| Distance from side of chassis to side of drawer front | 27 |
| Depth of open drawer (measured from front of drawer panel) | 419 |
| Height from bottom of chassis to bottom of front panel | 2 |

| Clearance Dimensions | mm |
|---|-----|
| Minimum inside height of cavity | 273 |
| Minimum inside width of cavity | 724 |
| Minimum inside depth of cavity | 560 |
| Overall width of cabinetry | 764 |
| Minimum clearance between top of front panel and upper cabinetry panel | 3 |
| Minimum clearance between bottom of front panel and lower cabinetry panel | |

DATE: 07.04.2021

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com