SHARP | Simply Better Living ALEXA COMMAND GUIDE

Smart Radiant Rangetop with Microwave Drawer™ Oven

STR3065HS

Pair with your Amazon Alexa App and enjoy hands-free cooking with Alexa.

Menu Item	Command	Quantity Range
Open	Alexa, open the microwave.	-
+ 30 Seconds	Alexa, add 30 seconds to the microwave.	100% Power
Add Time	Alexa, add X minutes to the microwave. Alexa, add Y seconds to the microwave.	X = 01:00 - 60:00 Y = 00:01 - 00:59
Pause Time	Alexa, pause the microwave.	-
Resume Time	Alexa, resume the microwave.	-
Stop Time	Alexa, stop the microwave.	-
Time Cook	Alexa, microwave/cook for X minutes and Y seconds. Alexa, reheat for X minutes and Y seconds.	X = 01:00 - 60:00 Y = 00:01 - 00:59
Time Cook (Time & Power Level)	Alexa, microwave/cook for X minutes at level Y .	X = 01:00 - 60:00 Y = 1 - 10
Time Defrost	Alexa, defrost for X minutes. Alexa, defrost for Y seconds.	X = 01:00 - 60:00 Y = 00:01 - 00:59
Popcorn	Alexa, microwave/cook popcorn. Alexa, microwave/cook X popcorn.	X = Regular / Mini
Reheat	Alexa, reheat leftovers. Alexa, reheat dinner plate.	-
Fish	Alexa, microwave/cook fish.	-
Fresh Vegetables	Alexa, microwave/cook fresh vegetables.	Quick Fresh / Longer Fresh Vegetables

ALEXA COMMAND GUIDE Smart Radiant Rangetop with Microwave Drawer™ Oven

Menu Item	Command	Quantity Range
Frozen Entrée	Alexa, microwave/cook frozen entrée.	-
Frozen Vegetables	Alexa, microwave/cook frozen vegetables.	-
Ground Meat	Alexa, microwave/cook ground meat.	-
Potatoes	Alexa, microwave/cook potatoes. Alexa, microwave/cook baked potatoes. Alexa, microwave/cook sweet potatoes.	Baked / Sweet Potatoes
Rice	Alexa, microwave/cook rice. Alexa, microwave/cook brown rice. Alexa, microwave/cook white rice.	Brown / White Rice
Seafood	Alexa, microwave/cook seafood.	-
Steamer Bags	Alexa, microwave/cook steamer bags.	-
Bone-In Poultry (Defrost)	Alexa, defrost bone-in poultry.	X = 0.5 - 3.0 lbs.
Boneless Poultry (Defrost)	Alexa, defrost boneless poultry.	X = 0.5 - 2.0 lbs.
Casserole (Defrost)	Alexa, defrost casserole. Alexa, defrost X cups of casserole.	X = 2 - 6 cups
Chops (Defrost)	Alexa, defrost chops. Alexa, defrost X pounds of chops.	X = 0.5 - 3.0 lbs.
Ground Meat (Defrost)	Alexa, defrost ground meat. Alexa, defrost X pounds of ground meat.	X = 0.5 - 2.0 lbs.
Roast (Defrost)	Alexa, defrost roast. Alexa, defrost X pounds of roast.	X = 2.0 - 4.0 lbs.
Steaks (Defrost)	Alexa, defrost steaks. Alexa, defrost X pounds of steaks.	X = 0.5 - 3.0 lbs.

ALEXA COMMAND GUIDE

Smart Radiant Rangetop with Microwave Drawer™ Oven

STR3065HS

Menu Item	Command	Quantity Range
Soup (Defrost)	Alexa, defrost X cups of soup.	X = 1 - 6 cups
Beverage (Reheat)	Alexa, reheat beverage. Alexa, reheat X cups of beverage.	X = 0.5 - 2 cups
Hot Cereal	Alexa, microwave/cook hot cereal. Alexa, microwave/cook X hot cereal.	X = 1 - 6 servings
Hot Water	Alexa, microwave/cook hot water. Alexa, microwave/cook X cups of hot water.	X = 1 - 6 cups
Butter (Melt)	Alexa, melt X tablespoons of butter.	X = 2 or 8 tbsp.
Chocolate (Melt)	Alexa, melt X oz. of chocolate.	X = 1 or 8 oz.
Cream Cheese (Soften)	Alexa, soften cream cheese. Alexa, soften X oz. of cream cheese.	X = 2 or 8 oz.
Ice Cream (Soften)	Alexa, soften ice cream. Alexa, soften X cups of ice cream.	X = 2 or 6 cups
Dessert Topping (Warm)	Alexa, warm dessert topping. Alexa, warm X cups of dessert topping.	X = 0.25 or 0.5 cups
Syrup (Warm)	Alexa, warm syrup. Alexa, warm X cups of syrup.	X = 0.25 or 0.5 cups