



Microwave Oven

INSTRUCTION MANUAL

Model:
SMBI27/LMOBI27/
SMBI30/SMBI24/
SMO27BI

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES
AND OPERATING INSTRUCTIONS AS SHOWN IN THIS MANUAL.

Write Model and Serial Numbers here:

Model: _____

Serial No: _____

Felix Storch, Inc.
An ISO 9001:2015 registered company
770 Garrison Ave
Bronx, New York 10474
www.summitappliance.com

TABLE OF CONTENTS

| | |
|--|---------|
| Precautions to Avoid Possible Exposure to Excessive Microwave Energy | 2 |
| Specifications | 2 |
| Important Safety Instructions | 3 – 4 |
| Grounding Instructions | 5 |
| Radio Interference | 6 |
| Utensils | 7 - 8 |
| Names of Oven Parts and Accessories | 9 |
| <i>Control Panel</i> | 10 |
| Installation | 11 – 12 |
| <i>Countertop Installation</i> | 11 |
| <i>Turntable Installation</i> | 12 |
| Operation | 13 – 18 |
| <i>Safety Lock</i> | 13 |
| <i>Setting the Clock</i> | 14 |
| <i>Setting the Kitchen Timer</i> | 14 |
| <i>Microwave Cooking</i> | 14 |
| <i>Speedy Cooking</i> | 15 |
| <i>Defrost by Weight</i> | 15 |
| <i>Defrost by Time</i> | 15 |
| <i>Multi-Stage Cooking</i> | 16 |
| <i>Memory Function</i> | 16 |
| <i>Auto Menu</i> | 17 |
| <i>Sensor Cook</i> | 18 |
| <i>Inquiring Function</i> | 18 |
| <i>Lock Function for Children</i> | 18 |
| Troubleshooting | 19 |
| Limited Warranty | 21 |

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.
It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allows soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1) DOOR (bent)
 - (2) HINGES AND LATCHES (broken or loosened)
 - (3) DOOR SEALS AND SEALING SURFACES
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

Specifications

| | |
|-------------------------|--------------------------------------|
| Model | SMBI27/LMOBI27/SMBI30/SMBI24/SMO27BI |
| Rated Voltage/Frequency | 120VAC, 60Hz |
| Microwave Input | 1700 W |
| Microwave Output | 1200 W |

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 2.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 5.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE. Use caution when removing hot items.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surface.
14. Do not let cord hang over edge of table or counter.
15. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.
16. To reduce the risk of fire in the oven cavity:
 - 1). Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - 2). Remove wire twist-ties from paper or plastic bag before placing bag in oven.
 - 3). If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - 4). Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

17. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.
THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

To reduce the risk of injury to persons:

- 1) Do not overheat the liquid.
- 2) Stir the liquid both before and halfway through heating it.
- 3) Do not use straight-sided containers with narrow necks.
- 4) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- 5) Use extreme care when inserting a spoon or other utensil into the container.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)**

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

DANGER - Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING - Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - 1) Clean door and sealing surface of the oven
 - 2) Reorient the receiving antenna of radio or television.
 - 3) Relocate the microwave oven with respect to the receiver.
 - 4) Move the microwave oven away from the receiver.
 - 5) Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
3. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - 1) Reorient or relocate the receiving antenna.
 - 2) Increase the separation between the equipment and receiver.
 - 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - 4) Consult the dealer or an experienced radio/TV technician for help.)

This device complies with part 18 of the FCC Rules.

UTENSILS

CAUTION - Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

| Utensils | Remarks |
|-----------------------|--|
| Browning dish | Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. |
| Dinnerware | Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. |
| Glass jars | Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. |
| Glassware | Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. |
| Oven cooking bags | Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. |
| Paper plates and cups | Use for short-term cooking/warming only. Do not leave oven unattended while cooking. |
| Paper towels | Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. |
| Parchment paper | Use as a cover to prevent splattering or a wrap for steaming. |
| Plastic | Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. |
| Plastic wrap | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. |
| Thermometers | Microwave-safe only (meat and candy thermometers). |
| Wax paper | Use as a cover to prevent splattering and retain moisture. |


Materials to be avoided in microwave oven

| Utensils | Remarks |
|---------------------------------|--|
| Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |
| Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |
| Metal twist ties | May cause arcing and could cause a fire in the oven. |
| Paper bags | May cause a fire in the oven. |
| Plastic foam | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood | Wood will dry out when used in the microwave oven and may split or crack. |

NAMES OF OVEN PARTS AND ACCESSORIES

(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)


Remove the oven and all materials from the carton and oven cavity.
Your oven comes with the following accessories:

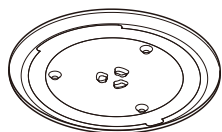

Glass Tray



 
Turntable Ring Assembly

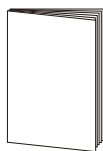

Instruction Manual




Turntable Shaft

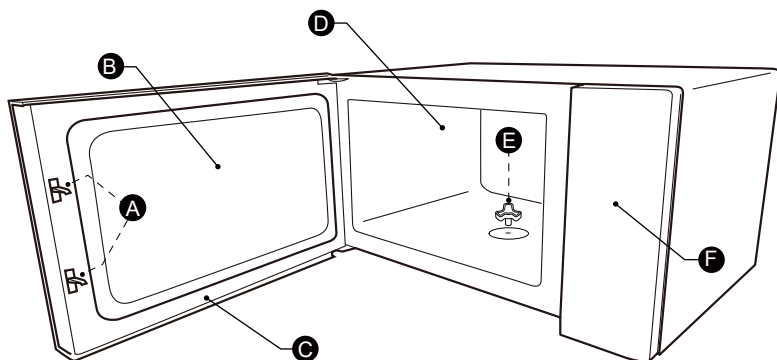

- A) Safety interlock system
- B) Observation window
- C) Door assembly

- D) Oven cavity
- E) Turntable shaft
- F) Control panel

CONTROL PANEL

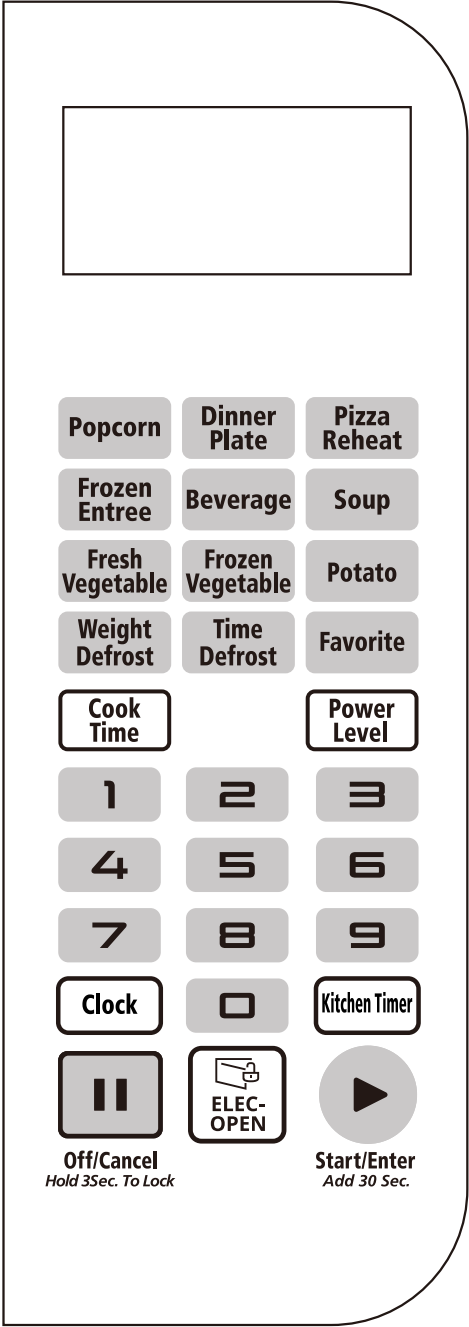


Installation

Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

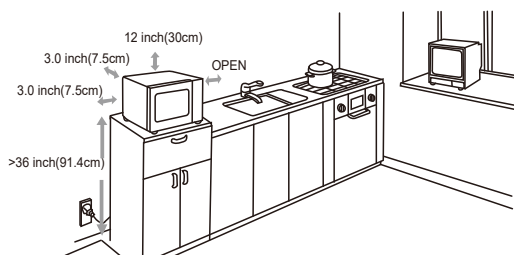

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open. The minimum installation height is 36 inches (91.4cm).

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.

- (3) Blocking the intake and/or outlet openings can damage the oven.
 - (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.


The accessible surface may be hot during operation.



Turntable Installation


Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to fit the turntable in place:

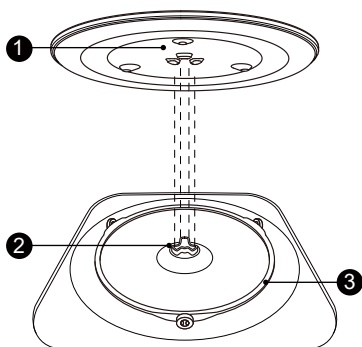

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.

2. Place the glass tray ① on the turntable ring assembly ③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

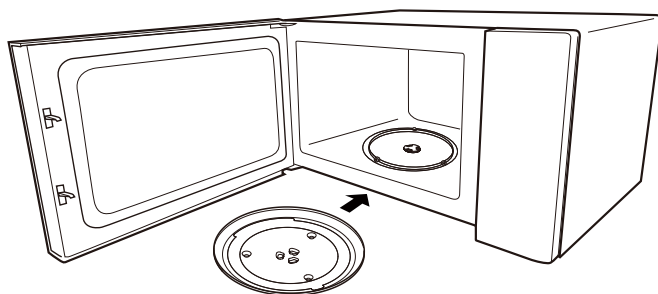

Notes:

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

OPERATION

1. Safety Lock


The Safety Lock is a system that safeguards against unintended activation of the oven, providing a protective measure to ensure child safety.


(1) How the Safety Lock Feature Works

Initiating the cooking process activates the door lock. It also engages if the door remains unlocked for 30 minutes after cooking is complete.

The Safety Lock feature is active by default. It will only be deactivated if the user chooses to do so manually. Even in the event of a power disconnection, the oven will preserve the state of the safety lock, whether it is activated or deactivated.


(2) Unlock the Door


Press  during operation and open the door within 10 seconds, or the safety lock will re-engage. The door will stay unlocked until cooking is initiated.

Or:
Press  within 30 minutes after cooking is complete to manually disable the door lock and switch to standby mode. If no key is pressed, the safety lock will automatically disengage after 30 minutes.


(3) Deactivate the Safety Lock

If there are no children in the house, you can choose to permanently deactivate the safety lock function.

Press and hold  for three seconds. Next, press “7” then “9” in consecutive order within 30 seconds. The screen will display “ULoc”, indicating the successful deactivation of the safety lock.

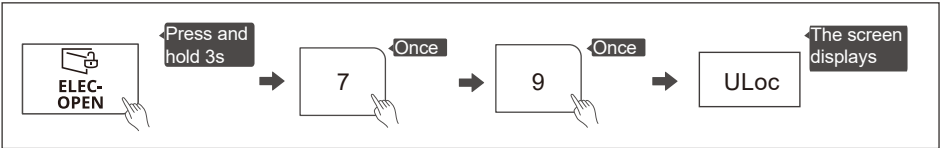

(4) Re-Activate the Safety Lock

Press and hold  for three seconds. Next, press “7” then “9” in consecutive order within 30 seconds, the screen will display “Loc”, indicating the successful re-activation of the safety lock.


2. Setting the Clock

- (1) Press **Clock** once, the screen will display "00:00".
- (2) Press the number keys to enter the current time.
For example, time is 12:10 now, please press "1,2,1,0" in turn.
- (3) Press **Clock** to confirm. The clock is set.

Notes:

- (1) To reset the clock, please repeat step 1 to step 3.
- (2) The clock is a 12-hour display. If the clock is not set, it will not work when powered.

3. Setting the Kitchen Timer

- (1) Press **KitchenTimer** once, the screen will display "00:00".
- (2) Press the number keys to set the desired time. The maximum time value is "99:99".
- (3) Press  to confirm. The timer starts counting down.


Start/Enter
Add 30 Sec.

Note: The kitchen timer is a timer.

4. Microwave Cooking

10 power levels are available.

| Level | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
|---------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Power | 100% | 90% | 80% | 70% | 60% | 50% | 40% | 30% | 20% | 10% |
| Display | PL10 | PL9 | PL8 | PL7 | PL6 | PL5 | PL4 | PL3 | PL2 | PL1 |



- (1) Press **Cook Time** once, the screen will display "00:00".
- (2) Press the number keys to set the cooking time. The maximum time value is "99:99".
- (3) Press **Power Level** once, and "PL10" will display. Then press the number keys to set the power level. The 10 power levels are available.
- (4) Press  to start cooking.


Start/Enter
Add 30 Sec.

Note: Opening the oven door or pressing  during operation will interrupt the current mode.


Off/Cancel
Hold 3Sec. To Lock

5. Speedy Cooking


- (1) In standby mode, pressing number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press  to increase the cooking time. The maximum time value is "99:99".
- (2) In standby mode, press  to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".

Note: In the cooking state and defrosting by time state, each more press on  can increase the cooking time by 30 seconds (except for defrosting by weight, and the auto menu).

6. Defrost by Weight

- (1) Press **Weight Defrost** once, "0.0" will display.
- (2) Press the number keys to set the weight of the food. The range of weight is 0.3 to 6.3lbs.
- (3) Press  to start defrosting.

7. Defrost by Time

- (1) Press **Time Defrost** once and then the screen will display "00:00".
- (2) Press the number keys to set the desired defrost time. The maximum time value is "99:99".
- (3) Press  to start defrosting.

Note: The defrost power is PL3 and it cannot be changed.


8. Multi-Stage Cooking

Notes: (1) Two cooking stages can be set in multi-stage cooking.

(2) If you set the defrost function, it will work automatically in the first stage.



(3) The auto menu cannot be set as one of the multi-stage.

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.


- (1) Press **Time Defrost** once and then the screen will display "00:00".
- (2) Press "5", "0", and "0" to set the desired defrost time to 5 minutes.
- (3) Press **Cook Time** once and then press "7", "0", and "0" to set the cooking time.
- (4) Press **Power Level** once and then "PL10" will display.
- (5) Press "8" to set the power level to PL8.
- (6) Press  **Start/Enter**
Add 30 Sec. to start cooking.

9. Memory Function

You can save the settings for a dish in the memory and call it up again.

- (1) Press **Favorite** repeatedly to select memory 1-3 procedure. "1", "2" and "3" will display in order.
- (2) If the procedure has been set, press  **Start/Enter**
Add 30 Sec. to start working. Otherwise, please continue to set.
- (3) After finishing the setting, press **Favorite** once to save the procedure.
Or press  **Start/Enter**
Add 30 Sec. once to save the procedure and start cooking.

Example: Set memory 2 (cook food with 80% microwave power for 3 minutes).

- (1) In standby mode, press **Favorite** twice.
- (2) Press **Cook Time** and then press the number keys "3", "0", and "0" in order.
- (3) Press **Power Level** and then press the number key "8".
- (4) Press  **Start/Enter**
Add 30 Sec. to save the setting and start cooking.

Notes:

- (1) Whether the power is not cut off, the setting of the safety lock will be saved all the time.
- (2) The auto menu and the defrosting cannot be set as a memory function.

10. Auto Menu

- (1) Press the corresponding menu key once, the default weight of the food will display.
- (2) Press the corresponding menu key repeatedly or press the number key to select the weight of the food you want.

- (3) Press  to start cooking.


Start/Enter
Add 30 Sec.

Auto Menu Chart

| Menu | Number key | Weight | Display | Power |
|----------------------|------------|-----------------|---------|----------|
| Popcorn | 1 | 1.75Oz | 1.75Oz | PL8/PL10 |
| | 2 | 3.0Oz | 3.0Oz | |
| | 3 | 3.3Oz | 3.3Oz | |
| Pizza Reheat | 1 | 1 Slice | 1 | PL5 |
| | 2 | 2 Slices | 2 | |
| | 3 | 3 Slices | 3 | |
| Frozen Entree | 1 | 10.0Oz | 10.0Oz | PL10/PL5 |
| | 2 | 20.0Oz | 20.0Oz | |
| Beverage | 1 | 1 Cup (8.8Oz) | 1 | PL10 |
| | 2 | 2 Cups (17.6Oz) | 2 | |
| Soup | 1 | 1 Cup | 1 | PL7 |
| | 2 | 2 Cups | 2 | |
| | 3 | 3 Cups | 3 | |
| | 4 | 4 Cups | 4 | |
| Potato | 1 | 1 (8Oz) | 1 | PL10 |
| | 2 | 2 (16Oz) | 2 | |
| | 3 | 3 (24Oz) | 3 | |
| | 4 | 4 (32Oz) | 4 | |

11. Sensor Cook

Sensor Cook allows you to cook many of your favorite foods without selecting a cooking time and power level. The microwave oven automatically determines the required cooking time for each food item.

- (1) Press the corresponding sensor menu key once to select the type of the food you want.
- (2) Press  to start sensing.
- (3) When the sensing is complete, the calculated cooking time will start to count down.

Sensor Menu Chart

| Menu | Weight | Power |
|------------------|---------|-------|
| Dinner Plate | 8-16 Oz | PL10 |
| Fresh Vegetable | 4-16 Oz | PL10 |
| Frozen Vegetable | 4-16 Oz | PL10 |

12. Inquiring Function

- (1) If the clock has been set, the current time will display for three seconds by pressing **Clock** in the cooking state.
- (2) In the microwave cooking state, press **Power Level** to inquire about the power level. It will display for three seconds.

13. Lock Function for Children

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

To activate the lock:

In standby mode, press and hold  for three seconds. A beep sounds and the locked icon will display.

To deactivate the lock:

In a locked state, press and hold  for three seconds. A beep sounds.

TROUBLESHOOTING

You can solve many common problems easily, possibly saving you the cost of a service call. Try the suggestions below to see if you can solve the problem before calling the servicer. If the microwave oven still does not work properly, contact the nearest authorized service center.

| TROUBLE | POSSIBLE CAUSE | POSSIBLE REMEDY |
|-----------------------|---|---|
| Oven will not start | <ul style="list-style-type: none"> a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set. | <ul style="list-style-type: none"> a. Plug into the outlet. b. Close the door and try again. c. Check instructions. |
| Arcing or sparking | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity. | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel. |
| Unevenly cooked foods | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred. | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food. |
| Overcooked foods | Cooking time, power level is not suitable. | Use correct cooking time, power level. |
| Undercooked foods | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable. | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level. |
| Improper defrosting | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred. | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food. |

If you've checked the table above and find that you still need help with your appliance, call our Customer Service facility at **800-932-4267** (Ext. **513**) or visit **summitappliance.com/support** between 9:00 AM and 5:00 PM ET. We will do our best to answer your questions.

NOTES

LIMITED WARRANTY

ONE YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards and are not covered from damage during handling or breakage.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



WARNING: This product can expose you to chemicals including Nickel (Metallic) which is known to the State of California to cause cancer.

For more information go to www.P65Warnings.ca.gov

Note: Nickel is a component in all stainless steel and some other metallic compositions.

Summit Appliance
Division of Felix Storch, Inc.
An ISO 9001:2015 registered company
770 Garrison Avenue
Bronx, NY 10474
www.summitappliance.com

SUMMIT
APPLIANCE

For parts and accessory ordering, troubleshooting, and helpful hints, visit:
www.summitappliance.com/support

Revised 07/16/2024
Printed in China