



# LET'S GET CONNECTED

Your wall oven comes with an app;  
experience cooking in a new way.

**Step 1** Download our free  
Electrolux app.



**Step 2** Open the app and  
follow the prompts.

- Have your home Wi-Fi and password ready.
- Press ON/OFF on your oven. Select Menu Options by tapping the (≡) icon.
- Select Connectivity. Make sure the Connect option is turned on.
- Follow the steps in the app to connect your wall oven to your home Wi-Fi.
- Complete your registration in the app.



**Step 3** Go back to your oven  
and select Menu Options (≡),  
then select Connectivity.

- Turn on Remote Operation to allow for remote control of the oven.
- The remote icon (📶) will appear on the oven control screen once the oven is connected and remote enabled.

Some controls may vary slightly. Check your Use & Care Manual.

**Step 4** Enjoy the convenience to control and  
monitor your wall oven from anywhere!

## WE'RE READY TO ASSIST

### CONNECTION CHECKLIST

- The app requires Apple iOS 11.X or Android 5.X or later.
- You'll need a secure, password-protected 2.4 GHz internet connection on a WPA/WPA2 compliant network.
- Your Wi-Fi router should support IEEE 802.11 b/g/n.
- When setting up your connection, make sure you are close to the appliance.
- Always use a valid email address.



### HAVING TROUBLE?



Check out our Owner Support and FAQs on [ElectroluxAppliances.com](https://ElectroluxAppliances.com) or [ElectroluxAppliances.ca](https://ElectroluxAppliances.ca)



Call us at 1-877-435-3287 (US) or 1-800-265-8352 (CA)



Email us: [SmartHelp.US@electrolux.com](mailto:SmartHelp.US@electrolux.com) anytime!



**Electrolux**