


## A Quick Guide to Getting Started

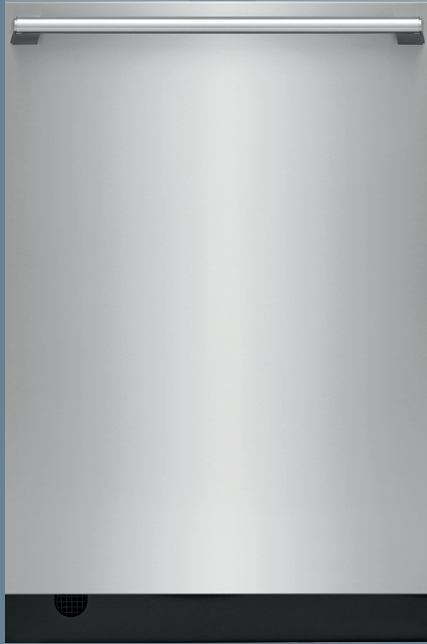

### **Before you begin**

- **Before starting your dishwasher**

Check that all plastic ties, packing, and literature are removed from the wash arms, baskets and dispenser. Make sure your top rack, bottom rack, and silverware basket are in place. Check your Use & Care Manual. If dishwasher is connected to a food disposal, check that the knock-out plug is removed or it will prevent proper draining.

- **Fill Rinse Aid Dispenser**

Rinse aid greatly improves drying and reduces water spots. Twist off the rinse aid dispenser cap and fill until the indicator reaches full, then replace cap.

### **Care and cleaning**

- Clean stainless steel door and handles with warm soapy water and a dishcloth. Rinse and dry thoroughly using a soft cloth.
- Keep odors at bay and clean the inside of your dishwasher. See your Use & Care Manual to learn how.



#### **We Recommend:**

Occasionally cleaning the cylinder filters to maximize wash and draining performance.

### **FAQs**


- **Why hasn't the dishwasher run?**

The start of the cycle times out if the door is not closed immediately (within 4 seconds) after pressing START.

**Note:** If a running cycle is paused, the floor light indicator stays ON until the door is opened. The floor light indicator turns off if the door is closed without pressing START.

- **How do I know when the dishwasher cycle is complete?**

During a running cycle, the blue LED shines on the floor. You'll know that the cycle is complete if you see the white LED light shining on the floor.

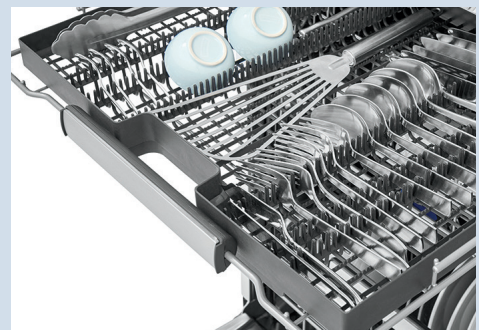

**The versatile racking system provides the utmost in flexibility.**



## Getting Started

Select the wash cycle and dry options appropriate for your load. Note that the LEDs illuminate your selections.

- Open the door and select the wash cycle and options.
- Press START and immediately close the dishwasher door to start the cycle. The door must be closed immediately after pressing START, otherwise you will need to make your selections again. This also applies if you need to add a forgotten item.



## Select Cycle & Options



### FAVORITE

Allows you to save your preferred cycle and options into one button. See the Use & Care guide for more information on setting this cycle.

### NORMAL

For regularly soiled dishes and silverware.

### FAST

Washes a lightly soiled and pre-rinsed load of dishes in approximately 30 minutes.

### ECO

For lightly soiled and pre-rinsed dishes and silverware.

### DELICATE

For delicate China, Crystal, wine and cocktail glasses.

### HEAVY

For pots, pans, casserole dishes and dinnerware with dried-on or baked-on soils.

### SANITIZE

When SANITIZE is selected, the final rinse water temperature is heated to 157°F (69.4°C) for 7 minutes.

### RINSE

For rinsing dishes that will be washed later.

### AIR DRY

Reduces energy consumption by not utilizing the heating element during the drying cycle.

### MAX DRY

The Max dry option utilizes the heating element during the drying cycle.

### DELAY

The delay option allows a delay from 1-12 hours before starting the dishwasher.

### STATUS WINDOW

See the Use & Care guide for all activities displayed on the status window.

### START

Press and immediately close the dishwasher door to start the wash cycle.

### CANCEL

Press to cancel selected cycle and options.

### CONTROL LOCK

Press and hold CONTROL LOCK until the LED above this option is lit to lock the controls. Press again until to unlock the controls.



## Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



## Sustainability, together

LuxCare® Wash Arm tackles the toughest dishes without wasting valuable resources.



## Peace of Mind & Protection

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

electroluxappliances.com  
(877) 435-3287  
10200 David Taylor Drive  
Charlotte, NC 28262

electroluxappliances.ca  
(800) 265-8352  
5855 Terry Fox Way  
Mississauga, ON L5V 3E4