

LG SIDEKICK® CYCLE & FABRIC CARE GUIDE

Wash small loads that just can't wait while cleaning larger loads above. Choose from 7 cycles and warm and cold settings that you can control, either from the panel on the drawer lip or via the main washer's touch panel.



Each cycle is designed to deliver a thorough clean and proper fabric care.

WASH CYCLES

CYCLE DESCRIPTION

Normal Mixed Loads and cotton or linen fabrics

Intimates Lingerie, sheer or easily damaged fabrics

Hand Wash Shrinkable wool or hand-washable items

Active Wear* Special or treated fabrics for sports or outerwear

WASH CYCLES

CYCLE DESCRIPTION

Rinse+Spin Rinses and spins items only

Spin Only** Drains and spins with no wash or rinse

Tub Clean Designed to clean the inside of the washer

**To activate Spin Only, do not select a washing cycle and do not add detergent or softener.

Select Rinse+Spin and press Rinse repeatedly until the display shows 0 and the Rinse icon is no longer illuminated on the panel. Then press the Start/Pause button.

*Indicates a bonus cycle you can download using the ThinQ® app on your smartphone.

Elevate your possibilities—and elevate your washer for easier loading and unloading—with the LG SideKick® 29" pedestal washer.

EASY-TO-USE CONTROLS

Seamlessly integrates with the main washer controls, or use the panel for a quick start.



1

POWER IT ON

Touch Power to turn on your LG SIGNATURE SideKick.®

2

SELECT YOUR CYCLE

Choose just the right cycle for your small, custom-care laundry loads.

3

PRESS START

Touch and hold Start to begin the selected cycle.