

Program overview

Program	Temperature	Max. ⌘	Speed	Load
Normal Cotton, linen, and mixed-fiber fabrics made of both cotton and linen.	Hot+, Hot, Warm+ , Warm, Cold	Max. ⌘		Full load (17.6 lb/8 kg)
Delicates For delicate fabrics made from synthetic fibers.	Hot+, Hot, Warm+ , Warm, Cold	Med. Slow, ⌘, ⌘		Small load (6.6 lb/3 kg)
Sanitize Cotton or linen fabrics with direct skin contact or for which special hygiene requirements apply.	Sani Warm+ , Warm, Cold	Max. High, ⌘, ⌘		Full load (17.6 lb/8 kg)
Handwash For delicate fabrics which are only suitable for hand washing.	Warm+ , Warm, Cold	High. Med, Slow, ⌘, ⌘		Small load (4.4 lb/2 kg)
Dress Shirts Pre-treat collars and cuffs depending on the level of soiling.	Hot+, Hot, Warm+ , Warm, Cold	Med. Slow, ⌘, ⌘		Small load (4.4 lb/2 kg)
Darks/Denims Black and dark garments made from cotton, mixed fibers, and denim.	Warm+ , Warm, Cold	High. Med, Slow, ⌘, ⌘		Small load (4.4 lb/2 kg)
MobileStart The Miele app is used to select programs and operate the appliance.				
Express Cotton fabrics that have hardly been worn or are only very lightly soiled.	Warm+ , Warm, Cold	High. Med, Slow, ⌘, ⌘		Half load (7.7 lb/3.5 kg)
Extra White For white fabrics made of cotton or linen without special hygiene requirements.	Hot+	Max. High, ⌘, ⌘		Full load (17.6 lb/8 kg)
Outdoor Performance outerwear (e.g., jackets and pants) made from membrane fabric such as Gore-Tex®, SYMPATEX®, WINDSTOPPER®, etc.	Warm+ , Warm, Cold	Med. Slow, ⌘, ⌘		Small load (5.5 lb/2.5 kg)
Proofing Treating microfibre fabric, ski wear, or table linens/drapes made from mainly synthetic fibers to provide a finish which is resistant to water and dirt.	Warm+ , Warm, Cold	High, Med. Slow, ⌘, ⌘		Small load (5.5 lb/2.5 kg)
Drain/Spin Drain only: set spin speed to ⌘. Make sure you select the appropriate spin speed.	Cold	Max. Med, Slow, ⌘		Full load (17.6 lb/8 kg)

fold here

Detergent

	Miele Detergents		Miele Capsules		
	UltraWhite	UltraColor	☼	☼	☼
Normal	✓	✓	-	✓	✓
Delicates	-	✓	✓	✓	-
Sanitize	✓	-	-	✓	✓
Handwash	-	-	✓	✓	-
Dress Shirts	✓	✓	-	✓	✓
Darks/Denims	-	✓	-	✓	-
Express	-	✓	-	✓	-
Extra White	✓	✓	-	✓	✓
Outdoor	-	-	✓	-	-
Proofing	-	-	-	✓	-
✓	Recommendation		☼	Special-purpose detergents (e.g., WoolCare)	
-	No recommendation		☼	Fabric care (e.g., fabric softener)	
			☼	Additives (e.g., booster)	

PROGRAM OVERVIEW

fold here

Cleaning and care

Cleaning the detergent drawer

Washing at low temperatures and the use of liquid detergent can lead to a build-up of bacteria in the detergent drawer.

- Clean the entire drawer at regular intervals for hygiene reasons, even if you are using the TwinDos system exclusively.

- Pull out the detergent drawer until a resistance is felt.

- Press down the release button and, at the same time, pull the drawer completely out of the machine.

Removing and cleaning the insert for liquid detergents

An insert for liquid detergents is located in the compartment of the detergent drawer.

- Remove the insert. Clean the insert thoroughly with warm water.

Cleaning the siphon inside the compartment

Compartment 1 has a siphon for better dispensing of the chlorine bleach.

- Remove the release catch.

- Remove the siphon and clean under warm running water.

Cleaning the siphon inside the compartment

- Remove the siphon from the compartment and clean under warm running water.

- Clean all compartments with warm water.

Cleaning the detergent-drawer housing

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent-drawer housing.

- Replace the detergent drawer.

Tip: Leave the detergent drawer slightly open to allow it to dry.

Sanitize info (cleaning the drum)

Washing at low temperatures and/or using liquid detergent can cause bacteria and unpleasant odors to build up in the washing machine. Use the *Sanitize* program to clean the washing machine. Clean the drum no later than the point at which the indicator light and light up on the time display.

CLEANING AND CARE

fold here

Frequently asked questions ...

Problem	Possible cause and solution
The control field remains dark.	- There is no power to the machine. - Check whether the plug is plugged in. - Check whether the fuse has tripped. The washing machine has switched off automatically to save energy. - Switch the washing machine on again by turning the program selector.
F and 34 alternate on the time display.	The door is not closed properly. The door lock could not engage. - Close the door again. - Start the program again. If the fault message appears again, contact Miele Service.
After the appliance is switched on, UP appears on the time display.	An update is available for the washing machine. See "Programmable functions – P99 RemoteUpdate" for more information.
The fault indicator light lights up. F and l alternate on the time display and the buzzer sounds.	The drain is blocked or restricted. The drain hose has been fixed too high. - Clean the drain filter and the drain pump. - The maximum drain height is 1 m.
The fault indicator light lights up. F and l alternate on the time display and the buzzer sounds.	The water intake is blocked or restricted. - Check whether the faucet is turned on properly. - Check whether the inlet hose is kinked. - Check whether there is sufficient water pressure. The filter in the water intake is blocked. - Clean the filter.
The fault indicator light lights up. F and l alternate on the time display and the buzzer sounds.	The water protection system has reacted. - Close the faucet. - Contact Miele Service.

fold here

Problem	Possible cause and solution
F and XXX alternate on the time display and the buzzer sounds.	There is a fault. - Disconnect the washing machine from the power supply. Unplug the appliance or switch off the breaker. - Wait at least 2 minutes before reconnecting the washing machine to the power supply. - Switch the washing machine on again. - Restart the program. If the fault message appears again, contact Miele Service.
-D- lights up on the time display.	The program selector was moved to a different position after the program had started. Turn the program selector back to the original position.
The indicator light lights up.	Excessive foam has built up during washing. Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.
The i indicator light lights up and l appears on the time display.	When washing, a wash program using a temperature of <i>Hot+</i> has not been run for a long time. Run the <i>Sanitize</i> program using the Miele Machine Cleaner or a universal powder detergent. The washing machine is cleaned which prevents bacteria and odor buildup.
F and 37 alternate on the time display.	The <i>SoftSteam</i> option which runs at the end of the program could not be carried out properly. - Check whether the washing machine is aligned correctly (see "Installation – Leveling the machine"). - Check whether the maximum drain height of 3.3 ft (1 m) has been exceeded. If the fault message appears again, contact Miele Service. The washing machine can still be used, but without the <i>SoftSteam</i> option.

FREQUENTLY ASKED QUESTIONS ...

fold here



Quick Start Guide
Washing machine



This Quick Start Guide is not a substitute for the operating instructions supplied with the appliance! It is essential to familiarize yourself with the washing machine before using it for the first time. Please read the operating instructions carefully and pay particular attention to the IMPORTANT SAFETY INSTRUCTIONS.