


USER GUIDE

Parts

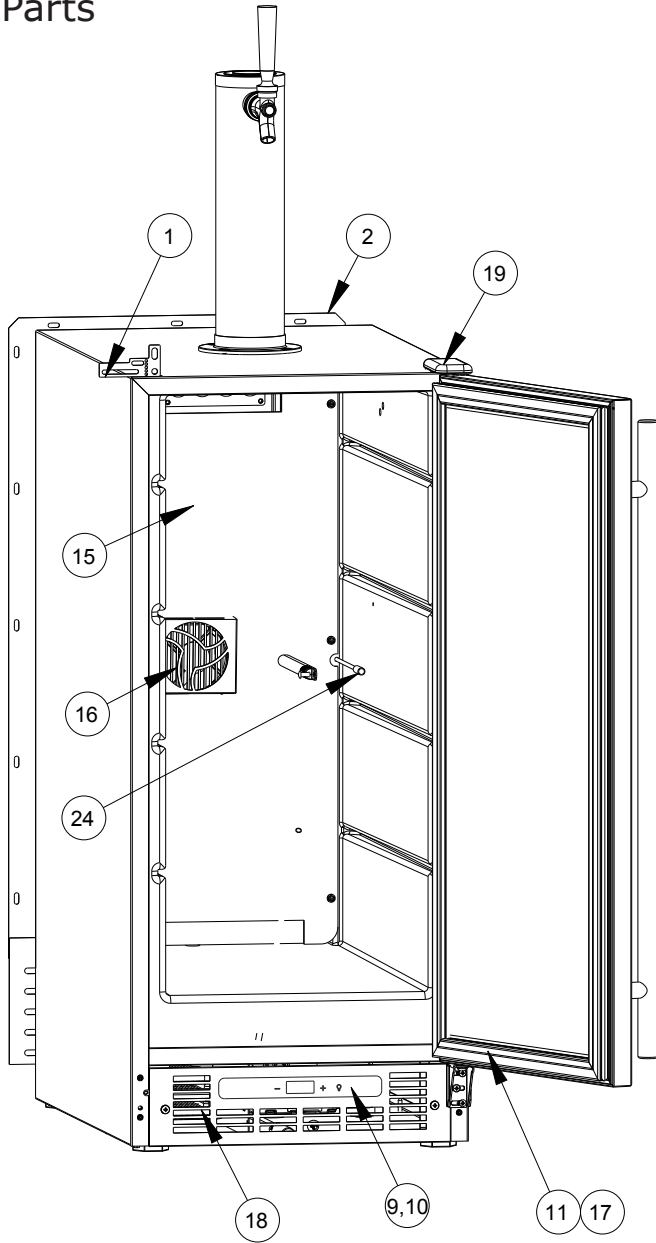

VCDE215-SSA1A		
1	ANTI TIP BRACKET	80-54221-00
2	BACK PANEL	80-55350-05
3	CASTER, 3" NON-LOCKING *	80-55674-00
4	CASTER, 3" LOCKING *	80-55674-01
5	COFFEE DISPENSER CLEANER *	ULACOFFEECLEAN
6	COMPRESSOR ASSEMBLY	80-55548-00
7	CONDENSER ASSEMBLY	80-55453-01
8	CONDENSER FAN	80-54014-00
9	CONTROL ASSEMBLY	80-55552-00
10	DISPLAY, UI, MAIN BOARD	80-55507-01
11	DOOR ASSEMBLY	80-55560-02
12	DRAIN PAN	80-54524-00
13	DRAIN TROUGH *	80-55484-00
14	DRIER	80-54055-00
15	EVAPORATOR ASSEMBLY	80-55458-00
16	EVAP FAN & COVER	80-54151-03
17	GASKET, DOOR	80-54213-00
18	GRILLE ASSEMBLY	80-55555-03
19	HINGE ASSEMBLY	80-55556-00
20	MAIN BOARD	80-55507-00
21	PACKAGING *	80-55563-00
22	POWER CORD, EXTERNAL *	80-55278-00
23	POWER CORD, INTERNAL *	80-55553-00
24	THERMISTOR	80-54006-00
25	WIRE HARNESS *	80-55402-00

* NOT PICTURED

