

# FISHER & PAYKEL

## DATA SHEET Warmer Drawer, 30" - Integrated style

Model no:  
**WB30SDE11**  
(refer page 2 for metric measurements)

Product Dimensions	in
Ⓐ Overall height of warmer drawer	10 11/16"
Ⓑ Overall width of warmer drawer (incl. side brackets, excl. custom panel)*	28 9/16" - 28 3/4"
Ⓒ Overall depth of warmer drawer (Incl. power plug, excl. custom panel)	22 3/16"
Ⓓ Height of door frame (excl. custom panel)	10 1/2"
Ⓔ Width of chassis	27 13/16"
Ⓕ Distance from front of door frame to rear of chassis flange	11/16"
Ⓖ Distance from rear of chassis flange to rear of product (incl. power plug)	21 9/16"
Ⓗ Distance from side of chassis to side of side bracket*	3/8" - 7/16"
Ⓘ Height from bottom of chassis to bottom of door frame	1/16"
Ⓢ Depth of open drawer (excl. custom panel)	16 1/2"

\* NOTE: Brackets are adjustable to fit cavity width.

Custom Panel Dimensions	in
Ⓙ Minimum height of custom panel	10 1/2"
Ⓚ Minimum width of custom panel	29 15/16"
Ⓛ Depth of custom panel	5/8" - 13/16"


Clearance Dimensions	in
Minimum inside height of cavity**	10 3/4"
Inside width of cavity	28 9/16" - 28 3/4"
Minimum inside depth of cavity	22 5/16"
Overall width of cabinetry	30 1/16"
Minimum clearance between top of front panel and upper cabinetry panel	1/8"
Minimum clearance between bottom of front panel and lower cabinetry panel	1/16"

\*\* NOTE: Ovens and Companion products can be placed directly on top of warmer drawer.

INDICATES CABINETRY / PRODUCT DATUM -----  
INDICATES CABINETRY CLEARANCES - - - - -

DATE: 12.04.2021

IMPORTANT NOTE: Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

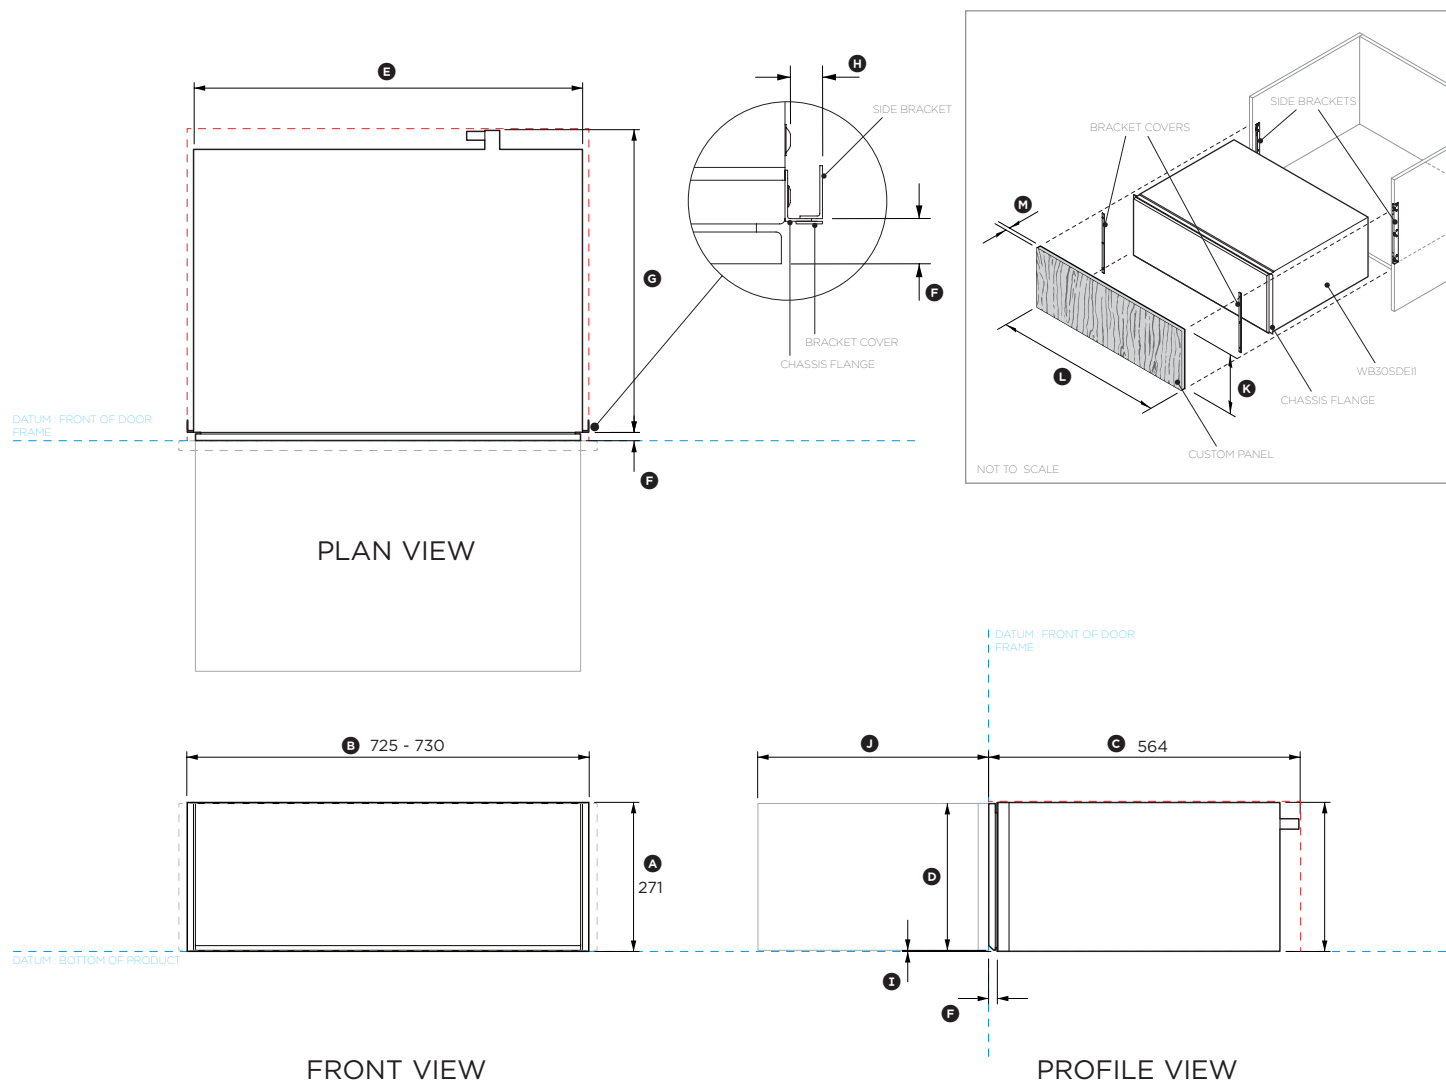

# FISHER & PAYKEL

## DATA SHEET Warmer Drawer, 30" - Integrated style

Model no:  
**WB30SDE11**  
(refer page 1 for imperial measurements)


Product Dimensions	mm
Ⓐ Overall height of warmer drawer	271
Ⓑ Overall width of warmer drawer (incl. side brackets, excl. custom panel)*	725 - 730
Ⓒ Overall depth of warmer drawer (Incl. power plug, excl. custom panel)	564
Ⓓ Height of door frame (excl. custom panel)	267
Ⓔ Width of chassis	707
Ⓕ Distance from front of door frame to rear of chassis flange	17
Ⓖ Distance from rear of chassis flange to rear of product (incl. power plug)	547
Ⓜ Distance from side of chassis to side of side bracket*	9 - 12
Ⓢ Height from bottom of chassis to bottom of door frame	2
Ⓣ Depth of open drawer (excl. custom panel)	419

\* NOTE: Side brackets are adjustable to fit cavity width.

Custom Panel Dimensions	mm
ⓧ Minimum height of custom panel	267
Ⓢ Minimum width of custom panel	760
Ⓣ Depth of custom panel	16 - 20

Clearance Dimensions	mm
Minimum inside height of cavity**	273
Inside width of cavity	725 - 730
Minimum inside depth of cavity	567
Overall width of cabinetry	764
Minimum clearance between top of front panel and upper cabinetry panel	3
Minimum clearance between bottom of front panel and lower cabinetry panel	2

\*\* NOTE: Ovens and Companion products can be placed directly on top of warmer drawer.

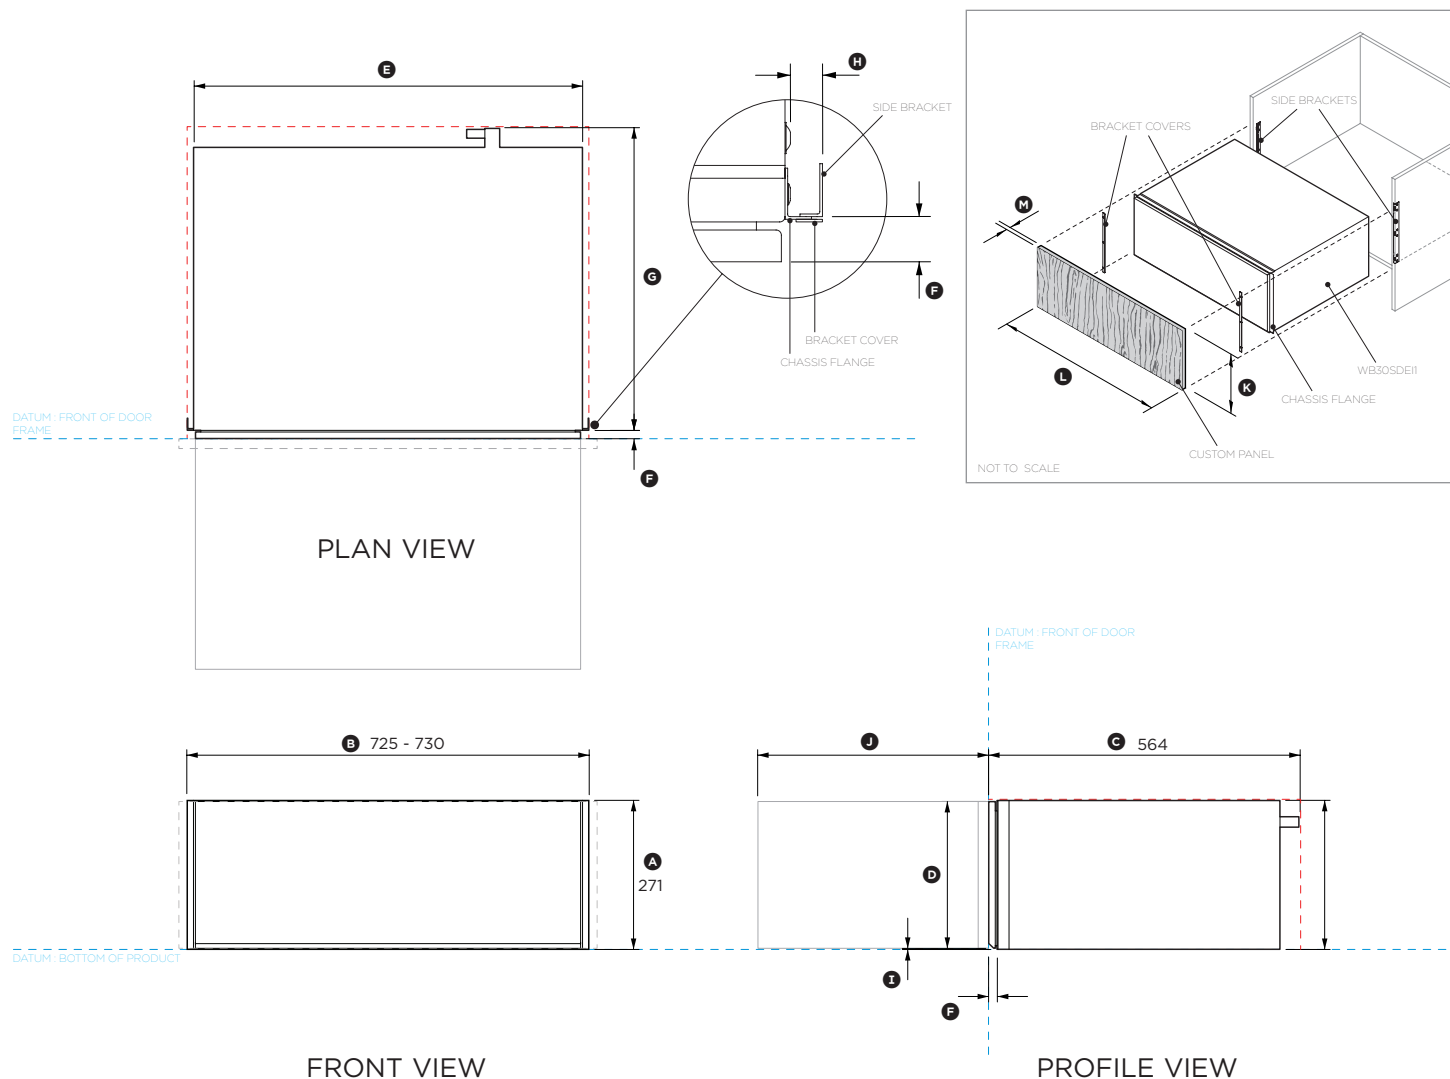

INDICATES CABINETRY / PRODUCT DATUM -----  
INDICATES CABINETRY CLEARANCES -----

DATE: 12.04.2021

IMPORTANT NOTE: Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)