



SIMPLE MANUAL Wireless Soundbar

S70TY



COV30939504

www.lg.com

2507_Rev01

Limited Warranty - USA

ARBITRATION NOTICE: THIS LIMITED WARRANTY CONTAINS AN ARBITRATION PROVISION THAT REQUIRES YOU AND LG ELECTRONICS ("LG") TO RESOLVE DISPUTES BY BINDING ARBITRATION INSTEAD OF IN COURT, UNLESS YOU CHOOSE TO OPT OUT. IN ARBITRATION, CLASS ACTIONS AND JURY TRIALS ARE NOT PERMITTED. PLEASE SEE THE SECTION TITLED "PROCEDURE FOR RESOLVING DISPUTES" BELOW.

Should your LG Wireless Soundbar ("Product") fail due to a defect in material or workmanship under normal use, during the warranty period ("Warranty Period") set forth below, LG will, at its option either repair or replace the Product upon receipt of original Proof of Purchase ("POP"). This limited warranty is valid only to the original retail purchaser of the Product ("Customer" or "You") and applies only when purchased and used within the continental United States, Alaska, Hawaii, and U.S. Territories.

WARRANTY PERIOD:

Parts and Labor: One (1) Year from date of delivery of Original Purchase (Internal/functional parts only)

NOTE

- Repaired or Replacement Products and parts are warranted for the remaining portion of the original warranty period or ninety (90) days, whichever is greater.
- Replacement Products and parts may be new, reconditioned, refurbished, or otherwise factory remanufactured.
- Replaced Product or part(s) will be the property of LG.
- If the original date of purchase cannot be verified, the warranty will begin on the 1st day of the manufacture month.

Shipping Costs
In-bound and out-bound shipping will be paid by LG during the Warranty Period.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THE PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE LIMITED WARRANTY. UNDER NO CIRCUMSTANCE SHALL LG BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, LOST GOODWILL, LOST REVENUE OR PROFITS, WORK STOPPAGE, PRODUCT FAILURE, IMPAIRMENT OF OTHER GOODS, LOSS OR CORRUPTION OF PROGRAMMING OR DATA, LOSS OF USE, INJURY TO PERSONS OR PROPERTY ARISING OUT OF OR RELATED TO THE PRODUCT. LG'S TOTAL LIABILITY, IF ANY, DAMAGES OR OTHERWISE, SHALL NOT EXCEED THE INVOICE VALUE PAID BY YOU FOR THE PRODUCT FURNISHED, WHICH IS THE SUBJECT OF A CLAIM OR DISPUTE.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

Notice of Dispute. In the event you intend to commence an arbitration proceeding, you must first notify LG in writing at least 30 days in advance of initiating the arbitration by sending a letter to LG at LG Electronics, USA, Inc. Attn: Legal Department-Arbitration 111 Sylvan Avenue, Englewood Cliffs, NJ 07632. You and LG agree to engage in good faith discussions in an attempt to amicably resolve your claim. The notice must provide your name, address, and telephone number; identify the product that is the subject of the claim; and describe the nature of the claim and the relief being sought. If you and LG are unable to resolve the dispute within 30 days, either party may proceed to file a claim for arbitration.

Agreement to Binding Arbitration and Class Action Waiver. Upon failure to resolve the dispute during the 30-day period after sending written notice to LG, you and LG agree to resolve any claims between us only by binding arbitration on an individual basis, unless you opt out as provided below. Any dispute between you and LG shall not be combined or consolidated with a dispute involving any other person's or entity's product or claim. More specifically, without limitation of the foregoing, any dispute between you and LG shall not under any circumstances proceed as part of a class or representative action. Instead of arbitration, either party may bring an individual action in small claims court, but that small claims court action may not be brought on a class or representative basis.

Arbitration Rules and Procedures. To begin arbitration of a claim, either you or LG must make a written demand for arbitration. The arbitration will be administered by the American Arbitration Association ("AAA") and will be conducted before a single arbitrator under the AAA's Consumer Arbitration Rules that are in effect at the time

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Service trips to deliver, pick up, install, educate on how to operate, correct wiring or for unauthorized repairs.
- Damage or failure of the Product caused by power failures, interruptions, or inadequate electrical service.
- Damage or failure resulting from operating or using the Product in any way contrary to the instructions, use other than the Product's intended purpose, or use in conditions contrary to those recommended or outlined in the Product's Owner's Manual.
- Damage or failure of the Product caused by transportation and/or handling, including scratches, dents, chips, and/or other damage to the finish of your Product, unless such damage results from a defect in materials or workmanship and is reported within one (1) week of delivery (Call: 1-800-243-0000).
- Damage or failure resulting from improper installation, repair, maintenance, or foreign objects placed in or connected to the Product. Improper repair includes use of parts not approved or specified by LG.
- Damage or failure caused by unauthorized modification, alteration, adjustment of user controls, calibration, accessories, or separate system components, or due to use with incompatible mobile devices.

• Damage or failure caused by any accessories and software not approved or specified by LG.

• Damage or failure caused by reception problems due to inadequate home antenna or faulty antenna connections, or computer software.

• For any service-related inquiries, including troubleshooting assistance, visit www.lg.com or call 1-800-243-0000, or write to:

ATTN: LG Customer Interactive Center
201 James Record Road SW
Huntsville, Alabama 35824

Shipping Costs
In-bound and out-bound shipping will be paid by LG during the Warranty Period.

ARBITRATION PROCEDURE FOR RESOLVING DISPUTES

ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. BINDING ARBITRATION MEANS THAT YOU AND LG ARE EACH WAIVING THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

Definitions.

For the purposes of this section, references to "LG" mean LG Electronics U.S.A., Inc., its parents,

subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors

in interest, successors, assigns and suppliers; references to "dispute" or "claim" shall include any dispute, claim

or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

FCC Radio Frequency Interference Compliance.

This equipment complies with parts of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

13. Unplug the apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel.

This equipment should be installed and operated with a minimum distance (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

USA Only Product with embedded rechargeable battery ONLY.

In case rechargeable battery is included in this product, the entire device should be recycled in compliance with rechargeable battery recycling standards because of the internal battery. To dispose of properly, call (800) 228-3219 or visit www.call2recycle.org.

Supplier's Declaration of Conformity

Trade Name: LG
Responsible Party: LG Electronics USA, Inc.

Address: 11 Sylvan Avenue, North Building
Englewood Cliffs, New Jersey 07632

Email: lg.environmental@lg.com

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Service trips to deliver, pick up, install, educate on how to operate, correct wiring or for unauthorized repairs.
- Damage or failure of the Product caused by power failures, interruptions, or inadequate electrical service.
- Damage or failure resulting from operating or using the Product in any way contrary to the instructions, use other than the Product's intended purpose, or use in conditions contrary to those recommended or outlined in the Product's Owner's Manual.

• Damage or failure of the Product caused by transportation and/or handling, including scratches, dents, chips, and/or other damage to the finish of your Product, unless such damage results from a defect in materials or workmanship and is reported within one (1) week of delivery (Call: 1-800-243-0000).

• Damage or failure resulting from improper installation, repair, maintenance, or foreign objects placed in or connected to the Product. Improper repair includes use of parts not approved or specified by LG.

• Damage or failure caused by unauthorized modification, alteration, adjustment of user controls, calibration, accessories, or separate system components, or due to use with incompatible mobile devices.

• Damage or failure caused by any accessories and software not approved or specified by LG.

• Damage or failure caused by reception problems due to inadequate home antenna or faulty antenna connections, or computer software.

• For any service-related inquiries, including troubleshooting assistance, visit www.lg.com or call 1-800-243-0000, or write to:

ATTN: LG Customer Interactive Center
201 James Record Road SW
Huntsville, Alabama 35824

Shipping Costs
In-bound and out-bound shipping will be paid by LG during the Warranty Period.

ARBITRATION PROCEDURE FOR RESOLVING DISPUTES

ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. BINDING ARBITRATION MEANS THAT YOU AND LG ARE EACH WAIVING THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

Definitions.

For the purposes of this section, references to "LG" mean LG Electronics U.S.A., Inc., its parents,

subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors

in interest, successors, assigns and suppliers; references to "dispute" or "claim" shall include any dispute, claim

or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

FCC Radio Frequency Interference Compliance.

This equipment complies with parts of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

13. Unplug the apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel.

This equipment should be installed and operated with a minimum distance (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

USA Only Product with embedded rechargeable battery ONLY.

In case rechargeable battery is included in this product, the entire device should be recycled in compliance with rechargeable battery recycling standards because of the internal battery. To dispose of properly, call (800) 228-3219 or visit www.call2recycle.org.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Service trips to deliver, pick up, install, educate on how to operate, correct wiring or for unauthorized repairs.
- Damage or failure of the Product caused by power failures, interruptions, or inadequate electrical service.
- Damage or failure resulting from operating or using the Product in any way contrary to the instructions, use other than the Product's intended purpose, or use in conditions contrary to those recommended or outlined in the Product's Owner's Manual.

• Damage or failure of the Product caused by transportation and/or handling, including scratches, dents, chips, and/or other damage to the finish of your Product, unless such damage results from a defect in materials or workmanship and is reported within one (1) week of delivery (Call: 1-800-243-0000).

• Damage or failure resulting from improper installation, repair, maintenance, or foreign objects placed in or connected to the Product. Improper repair includes use of parts not approved or specified by LG.

• Damage or failure caused by unauthorized modification, alteration, adjustment of user controls, calibration, accessories, or separate system components, or due to use with incompatible mobile devices.

• Damage or failure caused by any accessories and software not approved or specified by LG.

• Damage or failure caused by reception problems due to inadequate home antenna or faulty antenna connections, or computer software.

• For any service-related inquiries, including troubleshooting assistance, visit www.lg.com or call 1-800-243-0000, or write to:

ATTN: LG Customer Interactive Center
201 James Record Road SW
Huntsville, Alabama 35824

Shipping Costs
In-bound and out-bound shipping will be paid by LG during the Warranty Period.

ARBITRATION PROCEDURE FOR RESOLVING DISPUTES

ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. BINDING ARBITRATION MEANS THAT YOU AND LG ARE EACH WAIVING THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

Definitions.

For the purposes of this section, references to "LG" mean LG Electronics U.S.A., Inc., its parents,

subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors

in interest, successors, assigns and suppliers; references to "dispute" or "claim" shall include any dispute, claim

or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

FCC Radio Frequency Interference Compliance.

This equipment complies with parts of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

13. Unplug the apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel.

This equipment should be installed and operated with a minimum distance (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

USA Only Product with embedded rechargeable battery ONLY.

In case rechargeable battery is included in this product, the entire device should be recycled in compliance with rechargeable battery recycling standards because of the internal battery. To dispose of properly, call (800) 228-3219 or visit www.call2recycle.org.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Service trips to deliver, pick up, install, educate on how to operate, correct wiring or for unauthorized repairs.
- Damage or failure of the Product caused by power failures, interruptions, or inadequate electrical service.
- Damage or failure resulting from operating or using the Product in any way contrary to the instructions, use other than the Product's intended purpose, or use in conditions contrary to those recommended or outlined in the Product's Owner's Manual.

• Damage or failure of the Product caused by transportation and/or handling, including scratches, dents, chips, and/or other damage to the finish of your Product, unless such damage results from a defect in materials or workmanship and is reported within one (1) week of delivery (Call: 1-800-243-0000).

• Damage or failure resulting from improper installation, repair, maintenance, or foreign objects placed in or connected to the Product. Improper repair includes use of parts not approved or specified by LG.

• Damage or failure caused by unauthorized modification, alteration, adjustment of user controls, calibration, accessories, or separate system components, or due to use with incompatible mobile devices.

• Damage or failure caused by any accessories and software not approved or specified by LG.

 

• Damage or failure caused by reception problems due to inadequate home antenna or faulty antenna connections, or computer software.








LG Customer Information Center
1-800-243-0000 USA, Consumer
1-888-865-3026 USA, Commercial
Register your product Online!
www.lg.com

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Printed in China

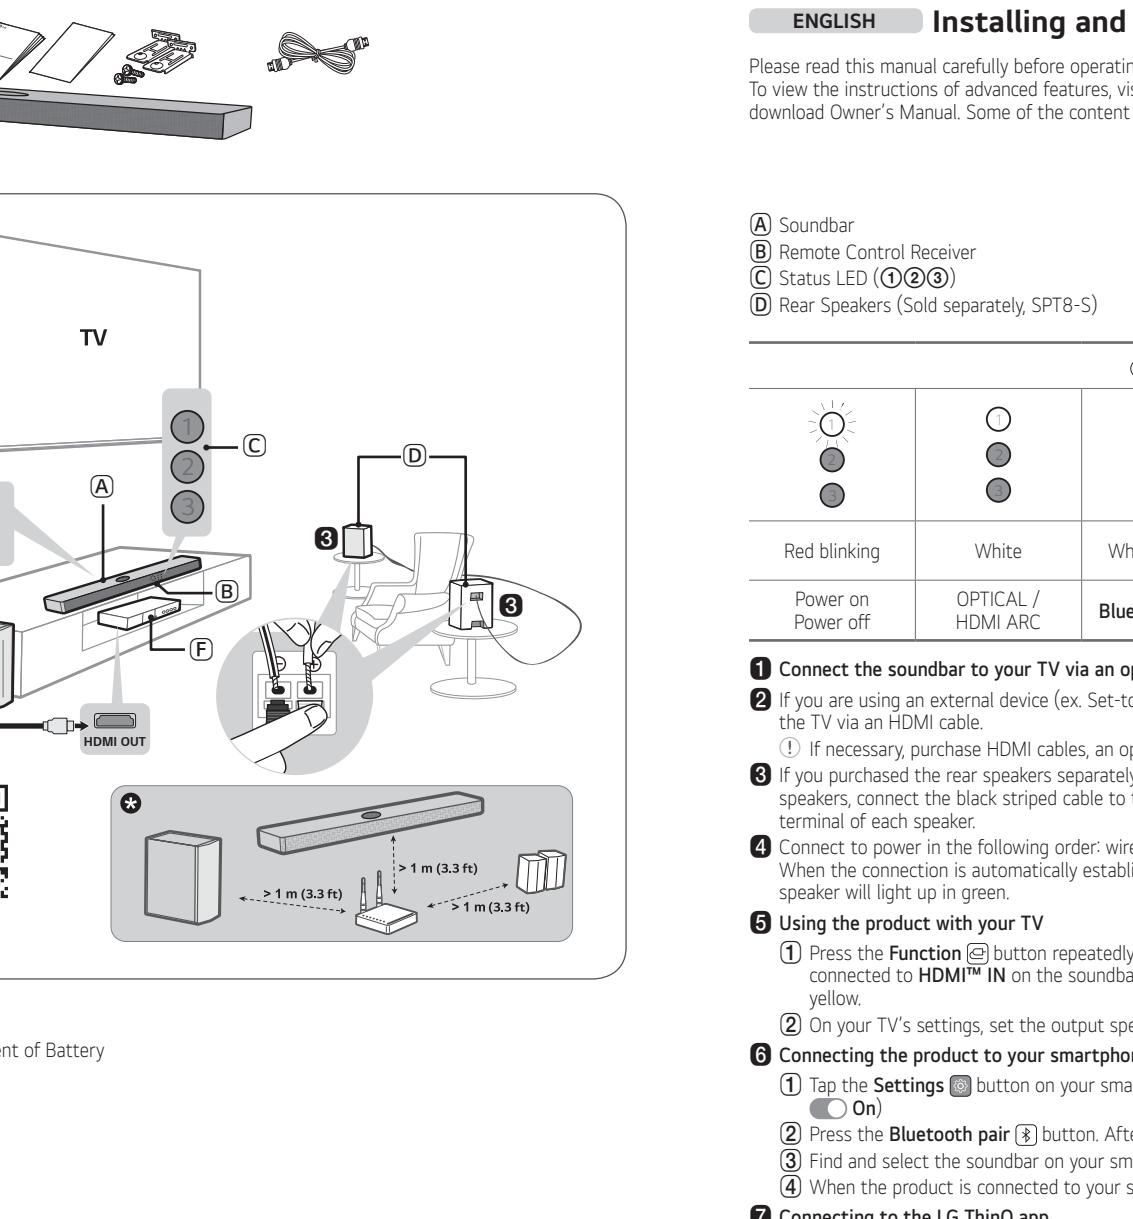

Replacement of Battery

   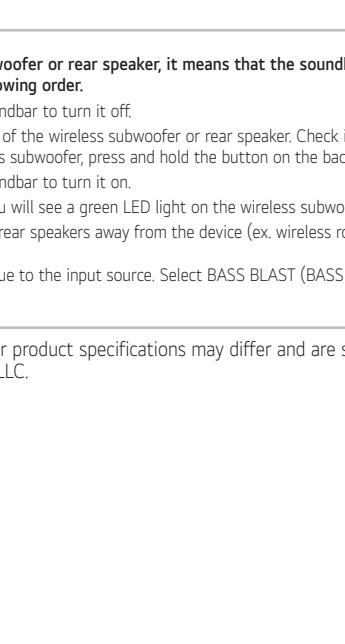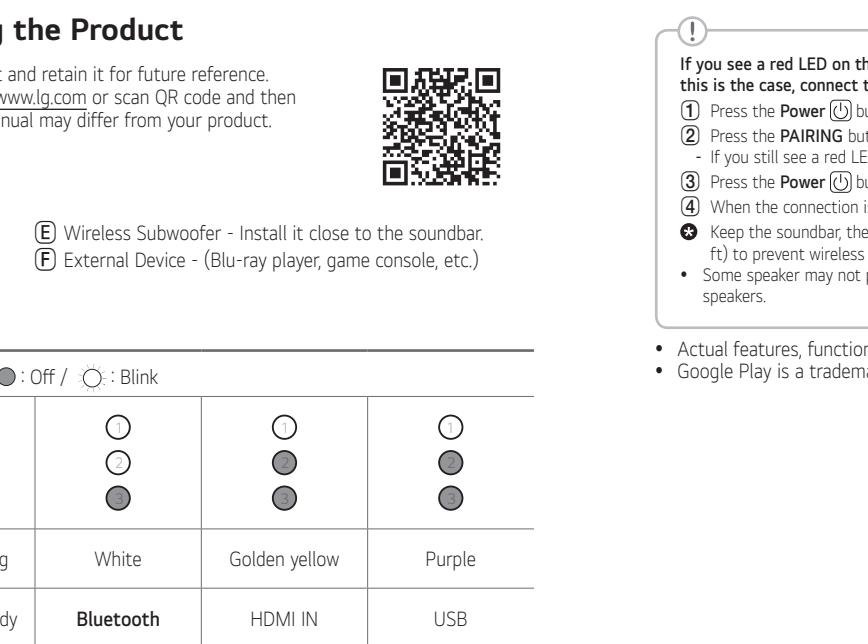

manufacturer's instructions has been adhered to.

• Install the apparatus in a location where the power plug can be easily unplugged and plugged in. If there is a fire or problem with this apparatus, unplug it quickly.

• The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

• For safety marking information including product identification and supply ratings, please refer to the label on the bottom or the other surface of the product.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

⑥ Some speaker may not playback audio due to the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

• Actual features, functionality, and other product specifications may differ and are subject to change without notice.

• Google Play is a trademark of Google LLC.

• If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

① Press the **Power** (1) button on the soundbar to turn it off.

② Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.

- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.

③ Press the **Power** (2) button on the soundbar to turn it on.

④ When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.

⑤ Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.