

MONOGRAM 24" FULLY INTEGRATED DISHWASHER

ZDT900SSYSS



HANDLES SOLD SEPARATELY



Statement Handle ZXADH1STYSS (*shown*)



Minimalist Handle ZXADH1MNYSS



38 DBA QUIET OPERATION

Harmonizing power and serenity, engineered to deliver flawless cleaning at a quiet 38dBA in Normal Cycle

FLUSH INSTALLATION CAPABILITY

Dishwashers designed to fully integrate and be installed flush, even with inset cabinetry

HYDORSAVE™ CYCLE

Reduces water usage by more than 25%*, perfect for those that are resource conscious, cleaning lightly soiled dishes

*Compared to Normal Cycle 4-place setting soil load

ENTERTAINER'S THIRD RACK WITH WASH ZONE

The full extension third rack allows for flexibility to accommodate larger items below and features an added wash zone to ensure serve ware is properly spaced and cleaned

ADVANCED WASH SYSTEM

Achieve the ultimate clean, using over 90 powerful water jets to deliver a 360 clean, reaching all corners of the dishwasher

MAX DRY SYSTEM

This precise and efficient drying system delivers beautifully dry dishes every time and is perfect for hard-to-dry items like your favorite champagne flutes

PLATINUM PLUS CYCLE

A premium cycle that provides the highest level of cleaning when you choose to use Cascade Platinum Plus detergent. It helps you save up to 30 minutes of cycle time without sacrificing excellent performance

LED ILLUMINATED INTERIOR

LED lighting illuminates the entire interior to load and unload dishes with ease

STEAM & SANITIZATION

Eliminate the need to pre-wash dishes at the end of every meal, thanks to a Steam + Sani feature that easily loosens lingering traces of food with an added bonus of complete sanitization

BOTTLE & SILVERWARE JETS

Powerful jets designed and specifically located to clean hard to reach taller items, like bottles, and deep clean silverware

INTUITIVE LCD TOUCH CONTROLS

Easily select your cycle and customize wash and dry selections with the glass touch controls and brilliant LCD screen

HARD FOOD DISPOSER

Designed to maintain a kitchen's cleanliness and efficiency, the hard food disposer with stainless steel blades grinds food into tiny particles that wash away with ease

WIFI CONNECTED WITH SMARTHQ

 
Built-in WiFi and the SmartHQ app make it easy to control and monitor your dishwasher, wherever you are

HANDLES SOLD SEPARATELY

Elevate your dishwasher's look by selecting a Statement or Minimalist collection handle

DELAYED WASH

Wash when you want. Use the PrepRinse™ Cycle to prevent dried on messes with a water only rinse. For added convenience, schedule your dishwasher to begin washing at a later time

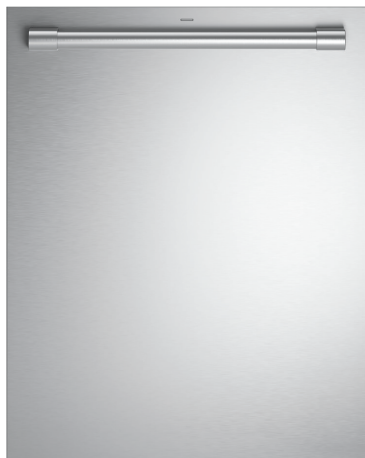

SPECIFICATIONS


Overall Width	23 3/4"
Overall Height	33 3/4" - 34 5/8"
Overall Depth	24"
Cutout Height	34 1/2" (87.6 cm) Min 35" (88.9 cm) Max
Minimum Cabinet Width	24" (61.0 cm)
Minimum Cabinet Depth	24" (61.0 cm)
Door Clearance	25 1/2"
Electrical Requirements	1.2 A
Voltz/Hertz/Amps	120 V, 60 Hz, 15 or 20 amp circuit
Capacity	16 Place Settings

ATTENTION ELECTRICIAN:


A 115 volt 60Hz, 15 or 20 amp power supply is required. An individual properly grounded branch circuit or circuit breaker is recommended. Install a properly grounded 3-prong electrical receptacle recessed into the back wall.

NOTE: Always refer to installation guide for complete installation instructions

 INSTALLATION CUTOUT FRONT VIEW

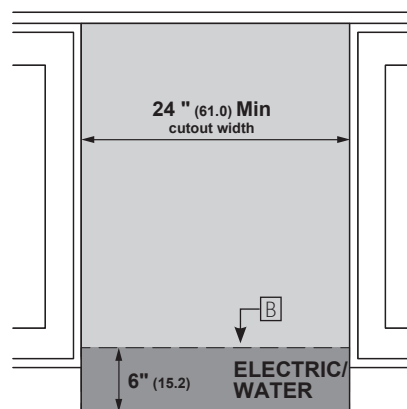

FLUSH INSTALLATION CUTOUT FRONT VIEW

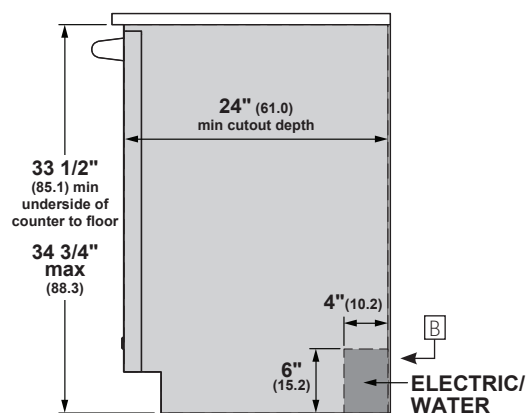 

SPECIAL NOTES

- [A] The dishwasher drain hose must be no more than 12 feet in length for proper drainage.
- [B] Electrical connections are at the right front of the dishwasher and water connections are on the left. The hot water line should extend forward 30" to 40" from the rear wall. The electrical must extend forward at least 24" to reach the junction box.
- [C] To prevent siphoning, an air gap or high drain loop must be used.

For more details, refer to the installation instructions for this product on Monogram.com. Dimensions in parentheses are in centimeters unless otherwise noted.