


# TOUCH LCD CONTROL CYCLE & FABRIC CARE GUIDE

Go beyond ordinary buttons and dials with an intuitive 7" LCD touchscreen that simplifies laundry and places total control at your fingertips.

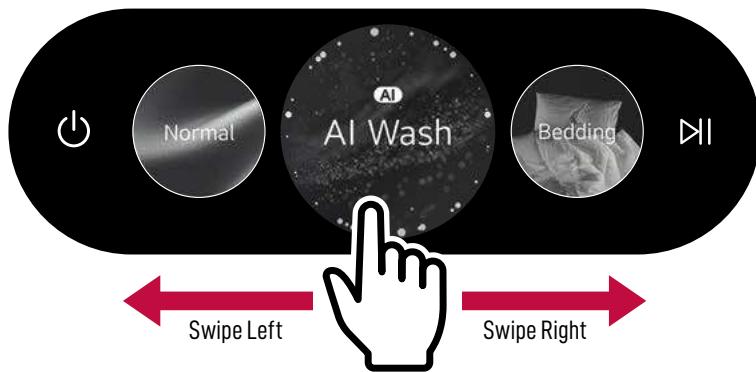

Get a fast start by choosing one of the pre-loaded wash and dry cycles.

## WASH CYCLES CYCLE DESCRIPTION

Normal	Mixed loads and cotton or linen fabrics
AI Wash	Optimizes cycle based on contents of laundry
Bedding	Bulky items, pillows, blankets or comforters
Delicates	Lingerie, sheer or easily damaged fabrics
Towels	Includes high-speed spin to remove excess water
Quick Wash	Lightly soiled clothing or small loads
Heavy Duty	Heavily soiled laundry, especially cotton fabrics
Allergiene®	Reduces certain allergens using heat and steam
Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics
Bright Whites™	Use with white fabrics only
Sanitary	Uses extra-hot wash temperature
Tub Clean	Designed to clean the inside of the washer

## DRY CYCLES CYCLE DESCRIPTION

Normal	Mixed loads and cotton or linen fabrics
AI Dry	Optimizes cycle based on fabrics
Bedding	Bulky items, pillows, blankets or comforters
Delicates	Lingerie, sheer or easily damaged fabrics
Towels	Designed for towels
Quick Dry	Small loads
Timed Dry	Lets you manually select the drying time
Antibacterial	A high-temperature dry cycle
Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics
SteamFresh®	Reduces wrinkles and odors using TurboSteam®
Heavy Duty	Extra drying for heavier fabrics
Air Dry	Tumble dries heat-sensitive items

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.

## WASH CYCLES CYCLE DESCRIPTION

Rinse+Spin	Rinses and spins items only
Spin Only	Drains and spins with no wash or rinse
Hand/Wool	Shrinkable wool or hand-washable items
Active Wear	Special or treated fabrics for sports or outerwear
Swimwear	Gently removes chlorine or salt from swimwear
Kids Wear	High temperatures for heavily soiled items
Jeans	Designed specifically for jeans
Dresses	Lightly soiled, delicate dresses
Color Care	Helps keep colors from fading
Sweat Stains	Helps remove sweat stains and odors
Small Load	A small number of normally soiled items
Large Load	Washer is approximately half full
X Large Load	Washer is very full
Overnight	Helps reduce spin noise and wrinkling
ezDispense®	Cleans the reservoirs before switching liquids

## DRY CYCLES CYCLE DESCRIPTION

SteamSanitary®	Reduces odors using steam and high temperature
Super Dry	Thoroughly dries cotton fabrics
Active Wear	Special or treated fabrics for sports or outerwear
Jeans	Designed specifically for jeans
Blanket Refresh	Warms and fluffs up blankets
Low Temp Dry	Reduces energy consumption
Easy Ironing	Leaves clothes slightly damp for easy ironing
Small Load	Small or light items
Large Load Dry	Dryer is approximately half full
X Large Load Dry	Dryer is very full
Wrinkle Prevention	Prevents wrinkles by tumbling clothes after the cycle
Overnight Dry	Energy efficient cycle dries a small load overnight
Rack Dry	Dries items that should not be tumbled (install the rack)

Swipe left or right using the intuitive 7" LCD touchscreen to quickly find your favorite cycles and customize settings—it also shows remaining cycle time after pressing Start.

## ELEGANTLY SIMPLE OPERATION

Streamlined panel simplifies laundry and perfectly complements the modern design.



1

### POWER IT ON

Touch Power to turn on your LG SIGNATURE washer or dryer—you'll be greeted with a tune and friendly "Hello."

2

### SWIPE/TOUCH

Swipe across the screen to choose from 12 pre-loaded cycles or touch the Settings icon to edit, remove or add cycles.

3

### PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the display will show remaining cycle time.

## COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed or dry level to your liking. You can also add available options or select extra functions.

### MODIFY ANY CYCLE

Press pads such as Temp, Spin or Dry Level to make adjustments to the selected cycle before you hit Start.

### ADD OTHER OPTIONS

Tap the Settings icon to edit cycles, turn on the drum light, adjust ezDispense® automatic dispenser settings and more.



Temp.  
Warm

TurboWash®  
On

Spin  
Medium

Auto Det.  
Normal

Soil  
Medium

Auto Soft.  
Normal