

# **KitchenAid**

## **CORDLESS CITRUS JUICER**

**5KCJR160A, 5KCJR161A**

**OWNER'S MANUAL**

## PRODUCT SAFETY

# IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- 1. WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in fire and/or serious injury.
- To protect against risk of electrical shock, do not put Citrus Juicer Base, USB Adapter, USB Cable, or Battery in water or other liquid.
- This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
- Turn the appliance off, remove the Battery when not in use, before assembling or disassembling parts and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils away from accessories during operation to reduce the risk of injury to persons and/or damage to the appliance.
- Do not operate any appliance with a damaged Battery or charger or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
- The use of accessories/attachments not recommended or sold by KitchenAid may cause fire, electrical shock, or injury to persons.
- Never leave the appliance unattended while it is in operation.
- Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
- Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- Recharge only with the USB Adapter specified by KitchenAid. A USB Adapter that is suitable for one type of battery may create a risk of fire when used with another battery.

- 12.** Use appliances only with KitchenAid 12 VDC Battery. Use of any other batteries may create a risk of injury and fire.
- 13.** When the Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, which can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
- 14.** Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
- 15.** Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- 16.** Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.
- 17.** Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.
- 18.** Never service damaged Battery. Service of Battery should only be performed by KitchenAid or authorised service providers.
- 19.** Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- 20.** Do not use the appliance for other than intended use.
- 21.** Do not use the appliance outdoors.
- 22.** Do not modify or attempt to repair the appliance or the Battery (as applicable) except as indicated in the instructions for use and care.
- 23.** Collection container must be properly in place before operating appliance.
- 24.** Make sure the motor stops completely before disassembling.
- 25.** Do not use the appliance if the rotating Reamer is damaged.
- 26.** Do not operate without the Reservoir in place and a collection container placed under the spout.
- 27.** Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.

28. Do not use an extension cord. Plug charger directly into an electrical outlet.
29. Do not incinerate this appliance even if it is severely damaged. The Battery can explode in a fire.
30. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
31. Do not let USB cable hang over the edge of table or counter.
32. **IMPORTANT:** Use only with approved USB Adapter by market.
33. When emptying the Bowl or during cleaning, be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.
34. Remove empty Batteries from the appliance and safely dispose.
35. Remove rechargeable Batteries from the appliance before charging.
36. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
37. Remove the Battery if the appliance is stored unused for a long period.
38. Most juices require processing times of 2 to 5 minutes.
39. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

## **SAVE THESE INSTRUCTIONS**

For complete details on product information, instructions and videos, including Guarantee information, visit [www.kitchenaid.com.au](http://www.kitchenaid.com.au) or [www.KitchenAid.co.nz](http://www.KitchenAid.co.nz).

## ELECTRICAL REQUIREMENTS

### USB Adapter:

**Input:** 100-240 VAC, 50-60 Hz, 0.5 A

**USB Output:** 5 VDC, 2 A

**Recommended ambient charging temperature:** 5-40°C

**External Battery (Lithium-ion):** 5KRB12A

**Nominal Voltage:** 10.8 VDC

**Maximum Voltage:** 12 VDC

**NOTE:** If the USB Adapter does not fit fully in the outlet, contact a qualified electrician. Do not modify the USB Adapter in any way.

Do not use or store Battery or products in locations where the temperature is lower than 10°C or higher 40°C.

## LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the battery-operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

## GETTING STARTED

### BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

**NOTE:** Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

## BATTERY CHARGING

### USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the adapter into a power source.

## PRODUCT USAGE

### PREPARING THE CITRUS JUICER FOR USE

Before using your Juicer for the first time, wipe clean the Juicer Base with a warm damp cloth. Dry with a soft cloth. Wash Reamer, Sieve, Reservoir, and Shaft Cover in warm, sudsy water (see “Care and Cleaning” section). Rinse parts and wipe dry. Be sure the countertop beneath the Juicer and surrounding areas are dry and clean.

**IMPORTANT:** When moving your Juicer, always support/lift from the Juicer Base. The Base will disengage from the reservoir assembly if carried by the Reservoir only.

### USING THE CITRUS JUICER

**NOTE:** Make sure the Battery is fully charged before use.

1. Ensure that the Juicer Base is sitting on a clean, dry surface. Insert the Shaft Cover over the shaft until it clicks. Then place the Reservoir on the Juicer Base.

2. Place and align the Sieve hub in the Reservoir until it is seated properly.
3. Place the Reamer on the top of the Sieve. Ensure proper assembly of all parts to prevent spills.  
**NOTE:** Always ensure the Reservoir is seated properly before using the Juicer.
4. Insert the Battery on the Battery slot located at the back of the appliance, making sure it is aligned. The LEDs will glow and display the Battery level for five seconds, then turn off.  
**NOTE:** Do not place the Battery in an area of extreme heat or cold. It will work best at normal room temperature.
5. Cut the citrus fruit into 2 identical horizontal halves. Place one half of the cut citrus fruit over the centre of the Reamer so it aligns with the Reamer tip.
6. To operate, press the citrus fruit half down on the Reamer, ensuring that the spout is open for the juice to flow out or closed to collect juice in the Reservoir. Firmly hold the fruit half against the spinning Reamer and move the fruit in all directions to extract the juice. To stop juicing, lift the fruit half off of the Reamer. If the spout was closed, rotate the knob to the left to transfer juice to a collection container.  
**NOTE:** If desired, lift the citrus fruit half and press down again to reverse Reamer direction. This can be done multiple times to achieve maximum extraction.
7. Once all juice has been extracted from the citrus half, remove it from the Reamer and the Juicer will automatically stop.  
**IMPORTANT:** Do not try to remove the Reamer while the motor is still running. Do not press down the Reamer during removal from base.  
**NOTE:** Repeat steps several times for best juicing results.
8. Remove the Battery before taking any parts off of the Juicer.
9. Press and hold the Unlock Button to remove the battery.

## CARE AND CLEANING

### CLEANING THE CITRUS JUICER AND ACCESSORIES

Clean the Juicer and accessories thoroughly after every use.

**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

**NOTE:** To avoid damaging the Juicer, do not immerse the Juicer Base or Battery in water. To avoid scratching the Juicer, do not use abrasive cleansers or scouring pads.


1. **To clean the Juicer Base:** Remove the Battery from the Juicer before cleaning. Wipe clean the base with a warm, damp cloth and dry with a soft cloth.
2. To clean the spout, move the knob clockwise to the unlock position and pull.
3. The Reamer, Sieve, Reservoir, Knob and Shaft Cover can be cleaned in the dishwasher.  
**NOTE:** Immediately remove parts from the dishwasher and dry with a soft cloth.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol ♻️. The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

## RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## CUSTOMER SERVICE

### In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

**NOTE:** All service should be handled locally by an Authorised KitchenAid Service Centre.

**Toll free number:** 1-800-990-990

**Phone number:** 02 49026500

### Address Australia:

KitchenAid Australia Pty Ltd

6-8 Billbrooke Close

Cameron Park NSW 2285, Australia

Phone: 1-800-990-990

Mobile: 02 49026500

Email: [enquiries@KitchenAid.com.au](mailto:enquiries@KitchenAid.com.au)

### In New Zealand:

Website: [www.KitchenAid.co.nz](http://www.KitchenAid.co.nz)

Email: [enquiries@KitchenAid.co.nz](mailto:enquiries@KitchenAid.co.nz)

Phone: 0800 881 200

### In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/ Customer Centre.

For complete details on product information, instructions and videos, including Guarantee information, visit our website at: [www.KitchenAid.com.au](http://www.KitchenAid.com.au).

# **KitchenAid**

©2024 All rights reserved.