

# DIGITAL DIAL CYCLE & FABRIC CARE GUIDE

Go from start to finish with one quick turn or choose from more than 20 wash and dry cycles for total laundry control.



## WHAT'S ON THE DIAL?

- Door Lock Indicator
- Wi-Fi Indicator
- Remote Start Indicator
- Control Lock Indicator
- Previous Screen Button
- Select Button

Get a fast start by choosing one of the pre-loaded wash and dry cycles.

### WASH CYCLES CYCLE DESCRIPTION

<b>Normal</b>	Mixed loads and cotton or linen fabrics
<b>AI Wash</b>	Optimizes cycle based on contents of laundry
<b>Bedding</b>	Bulky items, pillows, blankets or comforters
<b>Delicates</b>	Lingerie, sheer or easily damaged fabrics
<b>Towels</b>	Includes high-speed spin to remove excess water
<b>Quick Wash</b>	Lightly soiled clothing or small loads
<b>Heavy Duty</b>	Heavily soiled laundry, especially cotton fabrics
<b>Allergiene®</b>	Reduces certain allergens using heat and steam
<b>Perm. Press</b>	Minimizes wrinkles in "wrinkle-free" fabrics
<b>Tub Clean</b>	Designed to clean the inside of the washer

### DRY CYCLES

<b>Normal</b>	Mixed loads and cotton or linen fabrics
<b>AI Dry</b>	Optimizes cycle based on fabrics
<b>Bedding</b>	Bulky items, pillows, blankets or comforters
<b>Delicates</b>	Lingerie, sheer or easily damaged fabrics
<b>Towels</b>	Designed for towels
<b>Quick Dry</b>	Small loads
<b>Timed Dry</b>	Lets you manually select the drying time
<b>Power Dry</b>	A high-temperature dry cycle
<b>Perm. Press</b>	Minimizes wrinkles in "wrinkle-free" fabrics
<b>SteamFresh®</b>	Reduces wrinkles and odors using TurboSteam®

PRE-LOADED CYCLES

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.

### WASH CYCLES CYCLE DESCRIPTION

<b>Bright Whites™</b>	Use with white fabrics only
<b>Sanitary</b>	Uses extra-hot wash temperature
<b>Rinse+Spin</b>	Rinses and spins items only
<b>Spin Only</b>	Drains and spins with no wash or rinse
<b>Hand/Wool</b>	Shrinkable wool or hand-washable items
<b>Active Wear</b>	Special or treated fabrics for sports or outerwear
<b>Swimwear</b>	Gently removes chlorine or salt from swimwear
<b>Kids Wear</b>	High temperatures for heavily soiled items
<b>Jeans</b>	Designed specifically for jeans
<b>Dresses</b>	Lightly soiled, delicate dresses
<b>Color Care</b>	Helps keep colors from fading
<b>Sweat Stains</b>	Helps remove sweat stains and odors
<b>Small Load</b>	A small number of normally soiled items
<b>Large Load</b>	Washer is approximately half full
<b>X Large Load</b>	Washer is very full
<b>Overnight*</b>	Helps reduce spin noise and wrinkling

OTHER AVAILABLE CYCLES


<b>DRY CYCLES</b>	<b>CYCLE DESCRIPTION</b>
<b>Heavy Duty</b>	Extra drying for heavier fabrics
<b>Air Dry</b>	Tumble dries heat-sensitive items
<b>SteamSanitary®</b>	Reduces odors using steam and high temperature
<b>Super Dry</b>	Thoroughly dries cotton fabrics
<b>Active Wear</b>	Special or treated fabrics for sports or outerwear
<b>Jeans</b>	Designed specifically for jeans
<b>Blanket Refresh</b>	Warms and fluffs up blankets
<b>Low Temp Dry</b>	Reduces energy consumption
<b>Overnight Dry</b>	Energy efficient cycle dries a small load overnight
<b>Easy Ironing</b>	Leaves clothes slightly damp for easy ironing
<b>Small Load</b>	Small or light items
<b>Large Load Dry</b>	Dryer is approximately half full
<b>X Large Load Dry</b>	Dryer is very full
<b>Wrinkle Prevention®</b>	Prevents wrinkles by tumbling clothes after the cycle
<b>Rack Dry*</b>	Dries items that should not be tumbled (install the rack)

\*Indicates a bonus cycle you can download using the ThinQ® app on your smartphone.

Intuitive dial control gives you more of what you need with each turn, from descriptions of each setting and helpful prompts to status updates and remaining cycle time.

## GET LAUNDRY DAY DIALED IN—IT'S EASY

Load, set and go—laundry day is just that easy with LG's LCD dial and touch panel.

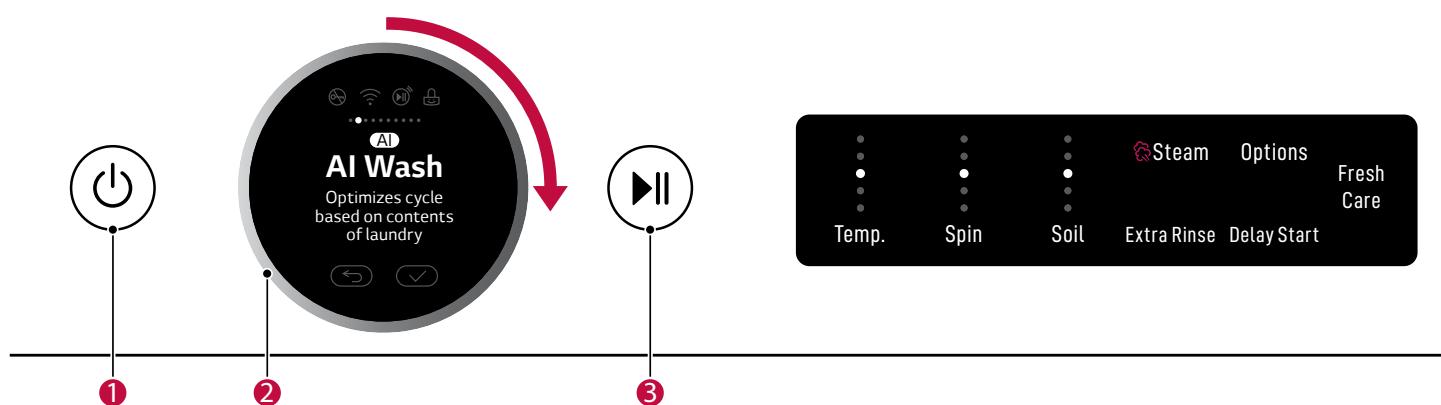

1

### POWER IT ON

Touch Power to turn on your LG washer or dryer—you'll be greeted with a tune and friendly "Hello."

2

### TURN THE DIAL

Rotate the dial to choose from 10 pre-loaded cycles or touch Options to edit, remove or add cycles.

3

### PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the dial will show remaining cycle time.

## COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed and soil level to your liking. You can delay the start of a load and even add options like an extra rinse.

### MODIFY ANY CYCLE

Press pads such as Temp., Spin or Soil to make adjustments to the selected cycle before you hit Start.

### ADD OTHER OPTIONS

Options for each cycle will light up on the touch panel—press the one you want and then make selections on the dial.

### GO BACK OR SELECT

Press the check mark on the dial to confirm your choice or hit the back button to see the previous screen.