

SHARP®

Simply Better Living

works
with

alexa



SMO1759JS

SMART OVER-THE-RANGE MICROWAVE™ OVEN

Alexa Command List

MICROWAVE OVEN COMMAND LIST

Pair with your Amazon Alexa App and enjoy hands-free cooking with Alexa.

For safety, the microwave will not accept a cooking command after 10 minutes of inactivity.

MENU ITEM	MICROWAVE OVEN COMMANDS	QUANTITY RANGE
+30 Seconds	Alexa, add 30 seconds to the microwave.	
Add Time	Alexa, add X minutes to the microwave. Alexa, add Y seconds to the microwave. Alexa, add X minutes/ Y seconds to the microwave.	X = 01:00 - 60:00 Y = 00:01 - 00:59
Pause	Alexa, pause the microwave.	
Resume	Alexa, resume the microwave.	
Stop	Alexa, stop the microwave.	
Time Cook	Alexa, microwave for X minutes and Y seconds. Alexa, cook for X minutes and Y seconds. Alexa, reheat for X minutes and Y seconds.	X = 01:00 - 60:00 Y = 00:01 - 00:59
Time Cook + Power Level	Alexa, microwave for X minutes/ Y seconds at Z power level. Alexa, cook for X minutes/ Y seconds at Z power level.	X = 01:00 - 60:00 Y = 00:01 - 00:59 Z = 1 - 10 Power Level
Bacon	Alexa, microwave/cook X bacon. Alexa, reheat X bacon.	X = 1 - 3 slices
Chicken	Alexa, microwave/cook chicken. Alexa, reheat chicken.	
Fish	Alexa, microwave/cook fish. Alexa, reheat fish.	
Casserole/Pasta	Alexa, microwave/cook casserole/pasta. Alexa, reheat casserole/pasta.	
Fresh Vegetables	Alexa, microwave/cook fresh vegetables. Alexa, reheat fresh vegetables.	
Frozen Breakfast	Alexa, microwave/cook frozen breakfast. Alexa, reheat frozen breakfast.	
Frozen Dinner	Alexa, microwave/cook frozen dinner. Alexa, reheat frozen dinner.	
Frozen Pizza	Alexa, microwave/cook frozen pizza. Alexa, reheat frozen pizza.	
Frozen Vegetables	Alexa, microwave/cook frozen vegetables. Alexa, reheat frozen vegetables.	
Fudge Brownies	Alexa, microwave fudge brownies. Alexa, cook fudge brownies. Alexa, reheat fudge brownies.	

MICROWAVE OVEN COMMAND LIST

MENU ITEM	MICROWAVE OVEN COMMANDS	QUANTITY RANGE
Hot Cereal	Alexa, microwave X hot cereal. Alexa, cook X hot cereal. Alexa, reheat X hot cereal.	X = 1 - 3
Hot Dogs	Alexa, microwave/cook X hot dogs. Alexa, reheat X hot dogs.	X = 1 - 6
Pizza	Alexa, microwave/cook pizza. Alexa, reheat pizza.	
Popcorn	Alexa, microwave/cook X ounces of popcorn.	X = 1.75 / 3.0 / 3.5 oz
Potato	Alexa, microwave/cook potato. Alexa, reheat potato.	
Rice	Alexa, microwave/cook rice. Alexa, reheat rice.	
Scrambled Eggs	Alexa, microwave/cook X scrambled eggs. Alexa, reheat X scrambled eggs.	X = 1 - 6
Stuffed Mushrooms	Alexa, microwave/cook stuffed mushrooms. Alexa, reheat stuffed mushrooms.	
Beverage	Alexa, microwave X cups of beverage. Alexa, reheat X cups of beverage.	X = 1 - 3 cups
Coffee	Alexa, microwave X cups of coffee. Alexa, reheat X cups of coffee.	X = 1 - 3 cups
Milk	Alexa, microwave X cups of milk. Alexa, reheat X cups of milk.	X = 1 - 3 cups
Fish (Defrost)	Alexa, defrost fish. Alexa, defrost X pounds of fish.	X = 0.1 - 6.0 lbs
Meat (Defrost)	Alexa, defrost meat. Alexa, defrost X pounds of meat.	X = 0.1 - 6.0 lbs
Poultry (Defrost)	Alexa, defrost poultry. Alexa, defrost X pounds of poultry.	X = 0.1 - 6.0 lbs
Butter (Melt)	Alexa, melt butter. Alexa, melt X ounces of butter.	X = 3.5 / 7 oz
Chocolate (Melt)	Alexa, melt chocolate. Alexa, melt X ounces of chocolate.	X = 7 / 10 oz
Cheese (Softening)	Alexa, soften cheese. Alexa, soften X ounces of cheese.	X = 1.75 / 3.5 oz
Cream Cheese (Softening)	Alexa, soften cream cheese. Alexa, soften X ounces of cream cheese.	X = 3 / 8 oz

MICROWAVE OVEN COMMAND LIST


MENU ITEM	MICROWAVE OVEN COMMANDS	QUANTITY RANGE
Ice Cream (Soften)	Alexa, soften ice cream. Alexa, soften X pint of ice cream. Alexa, soften X quarts of ice cream.	X = 1 pint/1.5 quart
Child Lock	Alexa, turn on child lock on microwave. Alexa, turn off child lock on microwave.	
Cooktop Light	Alexa, turn on cooktop light on microwave. Alexa, turn off cooktop light on microwave. Alexa, turn on surface light on microwave. Alexa, turn off surface light on microwave.	
Sound	Alexa, turn on sound on microwave. Alexa, turn off sound on microwave.	
Turntable	Alexa, turn on turntable on microwave. Alexa, turn off turntable on microwave. <i>Note: Turntable "off" feature is overridden when using Auto-Cook or Defrost Menu Items</i>	
Vent Fan	Alexa, set the microwave vent fan to high. Alexa, set the microwave vent fan to low. Alexa, set the microwave vent fan to off.	



Simply Better Living



A THRIVING ONLINE COMMUNITY

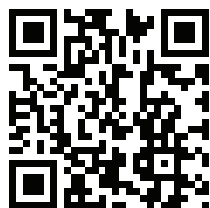

Simply Better Living is an online community that encourages a mindful lifestyle with Sharp home appliances through simple recipes and lifestyle tips. Our lifestyle blog sbl.sharppusa.com is dedicated to creative, ingenious solutions that make your life simpler, healthier, and better than ever before. Welcome home.

Start your free-forever, weekly subscription to [Simply Better Living Newsletter](#) today! Every week we share tips, recipes, life hacks and articles to help support and invigorate your healthy lifestyle.

The key to a simply better you is [Simply Better Living](#)! Come and see.

Amazon, Echo, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

© 2024 Sharp Electronics Corporation. All rights reserved.

Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or its affiliated companies. All other trademarks are property of their respective owners.

QUESTIONS?

1.800.BE.SHARP

SIMPLY BETTER LIVING

At Sharp Home Electronics Company of America, we are committed to Simply Better Living. Our innovative home appliance products are SIMPLE to use, BETTER than the competition, and encourage a HEALTHY LIFESTYLE.

SHARP ELECTRONICS CORPORATION
100 Paragon Drive, Montvale NJ, 07645
1.800.237.4277 • www.sharppusa.com



SHARP

Be Original.