


LG WASHTOWER™ CYCLE & FABRIC CARE GUIDE

Built-in sensors use AI technology to select the right wash/dry motions, temperatures and more for advanced fabric care. Or, choose from a wide range of custom wash and dry cycles.

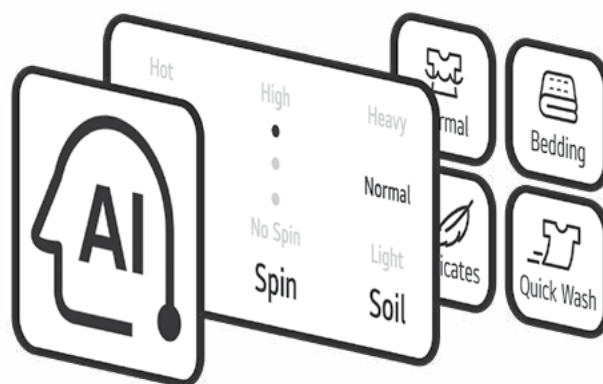

Get a fast start by choosing one of the pre-loaded wash and dry cycles.

WASH CYCLES	CYCLE DESCRIPTION
Normal*	Mixed loads and cotton or linen fabrics
Bedding	Bulky items, pillows, blankets or comforters
Delicates	Lingerie, sheer or easily damaged fabrics
Heavy Duty	Heavily soiled laundry, especially cotton fabrics
Quick Wash	Lightly soiled clothing or small loads
Tub Clean	Designed to clean the inside of the washer

PRE-LOADED CYCLES

DRY CYCLES	CYCLE DESCRIPTION
Normal	Mixed loads and cotton or linen fabrics
Bedding	Bulky items, pillows, blankets or comforters
Delicates	Lingerie, sheer or easily damaged fabrics
Heavy Duty	Extra drying for heavier fabrics
Small Load	Small or light items
Dry Time	Lets you manually select the drying time
Condenser Care	Additional condenser cleaning

PRE-LOADED CYCLES

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.

WASH CYCLES	CYCLE DESCRIPTION
Small Load	A small number of normally soiled items
Color Care	Helps keep colors from fading
Beachwear	Gently removes salt from swimwear
Denim	Designed specifically for jeans
Sportswear	Special or treated fabrics for sports or outerwear
Blanket	Daily-use blankets (not intended for wool)
Sweat Stains	Helps remove sweat stains and odors
Rinse+Spin**	Rinses and spins items only
Juice/Food Stains	Powerful wash for heavily soiled items
Overnight Wash	Reduces washing noise, helps prevent wrinkles at night
Delicate Dresses	Lightly soiled, delicate dresses
Half Load Wash	Washer is approximately half full
Full Load Wash	Washer is very full
Hand Wash/Wool	Shrinkable wool or hand-washable items
Bright Whites™	Use with white fabrics only
Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics
Towels	Includes high-speed spin to remove excess water
Spin Only	Drains and spins with no wash or rinse

DOWNLOADABLE CYCLES

DRY CYCLES	CYCLE DESCRIPTION
Rainy Days	Dries damp clothes
Easy Ironing	Leaves clothes slightly damp for easy ironing
Wrinkle Prevention	Prevents wrinkles by tumbling clothes after the cycle
Outerwear Refresh	Restores water-repellent treatment on outerwear
Towels	Designed for towels
Perm. Press**	Minimizes wrinkles in "wrinkle-free" fabrics
Active Wear	Special or treated fabrics for sports or outerwear
Air Dry	Tumble dries heat-sensitive items
Down Jacket Refresh	Helps restore loft to down jackets
Rack Dry	Dries items that should not be tumbled (install the rack)
Baby Wear	High-temperature or hygienic dry for baby clothes
Power Dry	A high-temperature dry cycle
Shrinkage Relief	Optimizes cycle settings to reduce shrinkage
Silent Dry	Reduces sounds made during drying
Drum Care	Use regularly to prevent odors
Bedding Refresh	Warms and fluffs up blankets
AI Dry	Optimizes cycle based on fabrics

DOWNLOADABLE CYCLES


*Optimizes cycle based on fabrics using AI.

**Indicates default downloaded cycle.

Only LG WashTower™ has the convenient Center Control® panel that's perfectly positioned with both washer and dryer controls at just the right height.

INTUITIVE, EASY-REACH CONTROLS

Built-in intelligence makes laundry less of a chore by taking out the guesswork.

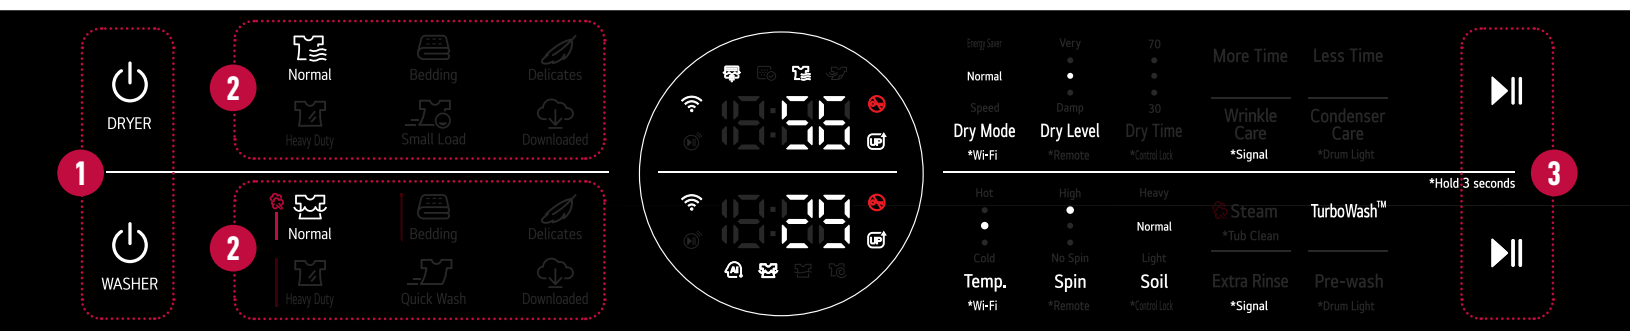

1

POWER IT ON

Touch Power to turn on the washer or dryer—both can run at the same time but need to be set separately.

2

SELECT YOUR CYCLE

Choose from the pre-loaded wash and dry cycles or touch Downloaded to edit or add cycles via the ThinQ® app.

3

PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the display will show remaining cycle time.

COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed or dry level to your liking. You can also add available options or select extra functions.

MODIFY ANY CYCLE

Press pads such as Temp., Spin or Dry Level to make adjustments to the selected cycle before you hit Start.

ADD OTHER OPTIONS

Available options for each cycle such as Extra Rinse or Wrinkle Care will light up on the touch panel—simply press to add.

Energy Saver	Very	70	More Time	Less Time
Normal	•	•		
Speed	•	•		
Dry Mode	Damp	30	Wrinkle Care	Condenser Care
*Wi-Fi	*Remote	*Control Lock	*Signal	*Drum Light
Hot	High	Heavy	Steam	TurboWash™
•	•	Normal	*Tub Clean	
•	•	Light		
Cold	No Spin	Soil	Extra Rinse	Pre-wash
Temp.	Spin	Soil	*Signal	*Drum Light
*Wi-Fi	*Remote	*Control Lock		