

# LG WASHCOMBO™ DIGITAL DIAL CYCLE & FABRIC CARE GUIDE

Get it done in one—let LG's 2-in-1 WashCombo™ do the heavy lifting. Our built-in intelligence and intuitive LCD dial make it easy to get laundry day dialed in.



## WHAT'S ON THE DIAL?

- Door Lock Indicator
- Wi-Fi Indicator
- Remote Start Indicator
- Control Lock Indicator
- Previous Screen Button
- Select Button

Choose from more than 25 cycles that wash and dry with no need to transfer clothes.

CYCLE	CYCLE DESCRIPTION	CYCLE	CYCLE DESCRIPTION
<b>WASH &amp; DRY</b>		<b>WASH &amp; DRY</b>	Combined cycle for mixed loads, cotton or linen
<b>Wash+Dry</b>	Combined cycle optimized for laundry contents	<b>Kids Wear*</b>	High temperatures for heavily soiled items
<b>AI Wash+Dry</b>	Mixed loads and cotton or linen fabrics	<b>Jeans*</b>	Designed specifically for jeans
<b>Normal*</b>	Optimizes cycle based on contents of laundry	<b>Color Care*</b>	Helps keep colors from fading
<b>AI Wash*</b>	Bulky items, pillows, blankets or comforters	<b>Sweat Stains*</b>	Helps remove sweat stains and odors
<b>Bedding*</b>	Lingerie, sheer or easily damaged fabrics	<b>Small Load*</b>	A small number of normally soiled items
<b>Delicates*</b>	Includes high-speed spin to remove excess water	<b>Large Load*</b>	Washer is approximately half full
<b>Towels*</b>	Lightly soiled clothing or small loads	<b>X Large Load*</b>	Washer is very full
<b>Quick Wash*</b>	Heavily soiled laundry, especially cotton fabrics	<b>Tub Clean</b>	Designed to clean and dry the inside of the washer
<b>Heavy Duty*</b>	Reduces certain allergens using heat	<b>Overnight**</b>	Reduces washing noise, helps prevent wrinkles at night
<b>Allergiene*</b>	Minimizes wrinkles in "wrinkle-free" fabrics	<b>Hand/Wool</b>	Shrinkable wool or hand-washable items
<b>Perm. Press*</b>	Use with white fabrics only	<b>Swimwear</b>	Gently removes chlorine or salt from swimwear
<b>Bright Whites™*</b>	Uses extra-hot wash temperature	<b>Dresses</b>	Lightly soiled, delicate dresses
<b>Sanitary*</b>	Rinses and spins items only	<b>Dry Only</b>	Dries with no wash
<b>Rinse+Spin*</b>	Drains and spins with no wash or rinse	<b>Delicates Dry</b>	Lingerie, sheer or easily damaged fabrics
<b>Spin Only*</b>	Special or treated fabrics for sports or outerwear	<b>Perm. Press Dry</b>	Minimizes wrinkles in "wrinkle-free" fabrics

\*To add a drying option to this cycle, select Dry on the touch panel.

\*\*Indicates a bonus cycle you can download using the ThinQ® app on your smartphone.

**WASH & DRY  
AS FAST AS  
2hrs**

## WASH & DRY IN AS FAST AS 2 HOURS†

In as fast as 2 hours, your clothes will be clean, fresh and dry—without having to stop what you're doing to move clothes between 2 machines.




## CLEAN UP TO 31 LOADS WITH 1 EASY FILL††

ezDispense® automatic dispenser cleans up to 31 loads, which means no more digging out detergent and fabric softener every time you do laundry.

Intuitive dial control gives you more of what you need with each turn, from descriptions of each setting and helpful prompts to status updates and remaining cycle time.

## GET LAUNDRY DAY DIALED IN—IT'S EASY

Load, set and go—laundry day is just that easy with LG's LCD dial and touch panel.

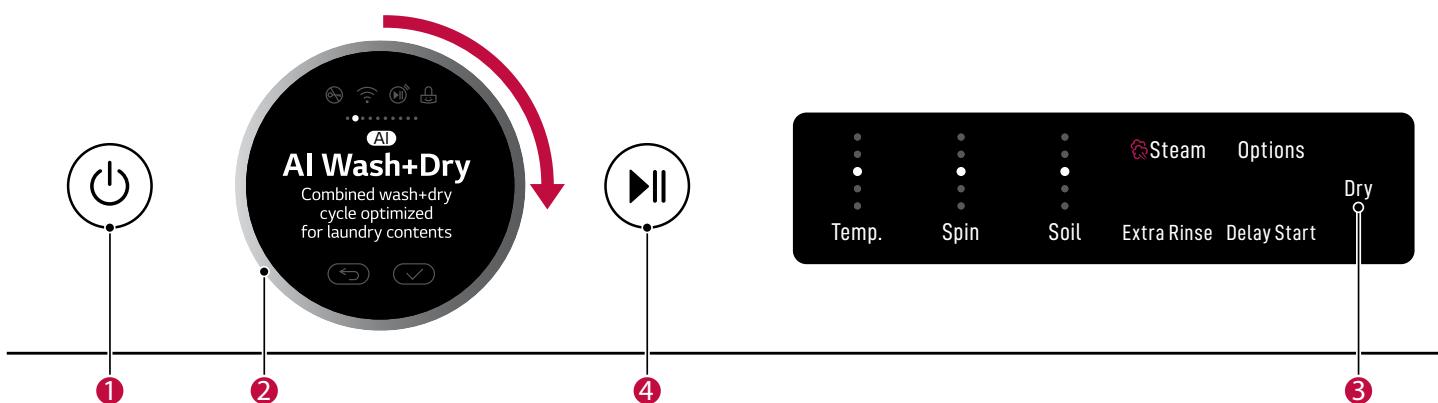

1

### POWER IT ON

Touch Power to turn on your LG WashCombo™—you'll be greeted with a tune and friendly "Hello."

2

### TURN THE DIAL

Rotate the dial to choose from 10 pre-loaded cycles or touch Options to edit, remove or add cycles.

3

### DRY OPTION

Wash+Dry and AI Wash+Dry automatically include a drying cycle. To add one to other cycles, simply touch Dry.

4

### PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the dial will show remaining cycle time.

## COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed and soil level to your liking. You can delay the start of a load and even add options like an extra rinse.

### MODIFY ANY CYCLE

Press pads such as Temp, Spin or Soil to make adjustments to the selected cycle before you hit Start.

### ADD OTHER OPTIONS

Options for each cycle will light up on the touch panel—press the one you want and then make selections on the dial.

### GO BACK OR SELECT

Press the check mark on the dial to confirm your choice or hit the back button to see the previous screen.