

FRONT LOAD HYBRID ELECTRONIC CONTROLS & FABRIC CARE GUIDE

Dial controls get a modern upgrade with an intuitive touch panel and LCD display offering more than 25 wash and dry cycles.



Get a fast start by choosing one of the pre-loaded wash and dry cycles.

WASH CYCLES	CYCLE DESCRIPTION	DRY CYCLES	CYCLE DESCRIPTION
Normal	Mixed loads and cotton or linen fabrics	Normal	Mixed loads and cotton or linen fabrics
AI Wash	Optimizes cycle based on contents of laundry	AI Dry	Optimizes cycle based on fabrics
Quick Wash	Lightly soiled clothing or small loads	Quick Dry	Small loads
Delicates	Lingerie, sheer or easily damaged fabrics	Delicates	Lingerie, sheer or easily damaged fabrics
Heavy Duty	Heavily soiled laundry, especially cotton fabrics	Heavy Duty	Extra drying for heavier fabrics
Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics	Perm. Press	Minimizes wrinkles in "wrinkle-free" fabrics
Bedding	Bulky items, pillows, blankets or comforters	Bedding	Bulky items, pillows, blankets or comforters
ColdWash™	Maximizes wash performance while saving energy	Air Dry	Tumble dries heat-sensitive items
Towels	Includes high-speed spin to remove excess water	Towels	Designed for towels
Allergiene®	Reduces certain allergens using heat and steam	SteamFresh®	Reduces wrinkles and odors using steam
Tub Clean	Designed to clean the inside of the washer	Timed Dry	Lets you manually select the drying time
Pet Care*	Helps remove stains and odors from pet items	Pet Care*	Helps remove odors from clothes and pet items
Microplastics*	Reduces microplastics from washing synthetics	SteamSanitary®*	Reduces odors using steam and high temperature
Rinse+Spin*	Rinses and spins items only	Power Dry*	A high-temperature dry cycle
Spin Only*	Drains and spins with no wash or rinse	Low Temp Dry*	Reduces energy consumption

Or, quickly and easily customize your laundry with special cycles for a wide range of load types.


WASH CYCLES	CYCLE DESCRIPTION	DRY CYCLES	CYCLE DESCRIPTION
Bright Whites™	Use with white fabrics only	Super Dry	Thoroughly dries cotton fabrics
Sanitary	Uses extra-hot wash temperature	Active Wear	Special or treated fabrics for sports or outerwear
Hand/Wool	Shrinkable wool or hand-washable items	Jeans	Designed specifically for jeans
Active Wear	Special or treated fabrics for sports or outerwear	Blanket Refresh	Warms and fluffs up blankets
Swimwear	Gently removes chlorine or salt from swimwear	Easy Ironing	Leaves clothes slightly damp for easy ironing
Kids Wear	High temperatures for heavily soiled items	Small Load	Small or light items
Jeans	Designed specifically for jeans	Large Load Dry	Dryer is approximately half full
Dresses	Lightly soiled, delicate dresses	X Large Load Dry	Dryer is very full
Color Care	Helps keep colors from fading	Wrinkle Prevention	Prevents wrinkles by tumbling clothes after the cycle
Sweat Stains	Helps remove sweat stains and odors	Overnight Dry	Energy efficient cycle dries a small load overnight
Small Load	A small number of normally soiled items	Rack Dry	Dries items that should not be tumbled (install the rack)
Large Load	Washer is approximately half full		
X Large Load	Washer is very full		
Overnight	Helps reduce spin noise and wrinkling		

*Indicates default downloaded cycle under More Cycles.

The simplicity of dial controls gets a modern upgrade with an intuitive touch panel and LCD display—all in a sleek design.

GET LAUNDRY DAY DIALED IN—IT'S EASY

Turn the dial and the LCD display gives you all the details you need with a quick glance.

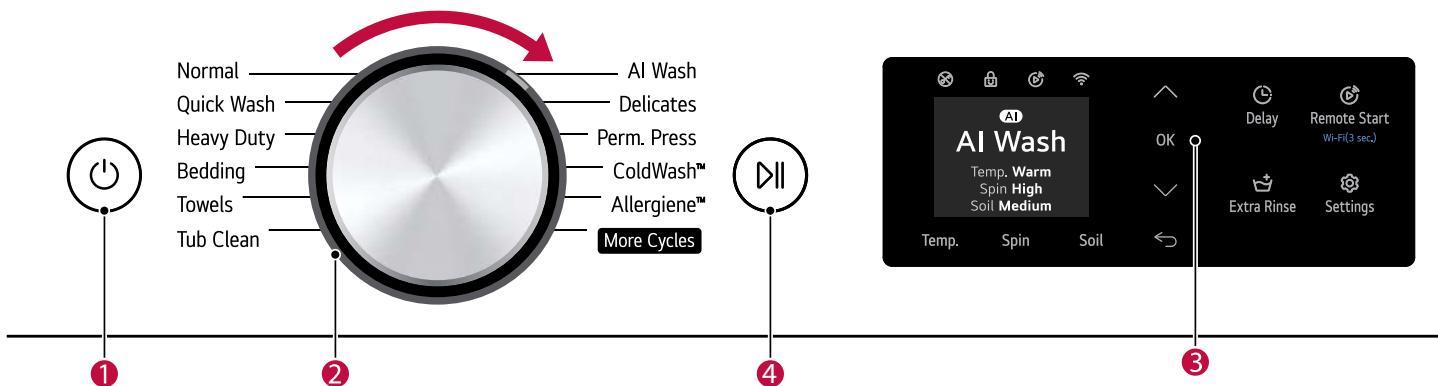

1

POWER IT ON

Touch Power to turn on your LG washer or dryer—you'll be greeted with a tune and friendly "Hello."

2

TURN THE DIAL

Rotate the dial to choose from 15 pre-loaded cycles (includes 4 default cycles under More Cycles).

3

TOUCH FOR MORE

Choose More Cycles to select from 4 default cycles or edit, remove or add up to a maximum of 10 cycles.

4

PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the display will show remaining cycle time.

COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed or dry level to your liking. You can also add available options or select extra functions.

MODIFY ANY CYCLE

Press pads such as Temp., Spin or Dry Level to make adjustments to the selected cycle before you hit Start.

ADD OTHER OPTIONS

Available options for each cycle such as Extra Rinse or Wrinkle Care will light up on the touch panel—simply press to add.