

OWNER'S MANUAL

COMMERCIAL **WASHER**



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the washer is installed correctly and safely. Leave these instructions near the washer after installation for future reference.

TCWM2013CS3

TCWM2013CD3

TCWM2013QS3

TCWM2013QD3

ENGLISH



Rev.01 030921

www.lg.com

PRODUCT FEATURES

DIRECT DRIVE SYSTEM

The advanced brushless DC motor drives the drum directly without using a belt and pulley.

TILTED DRUM AND EXTRA LARGE DOOR OPENING

The tilted drum and extra large opening make it possible to load and unload clothing more easily.

ULTRA CAPACITY

The larger drum enables more tumbling action and greater centrifugal force, but also less tangling and wrinkling of the laundry. Heavier loads, such as king size comforters, blankets, and curtains can be washed.

SEE-THROUGH DOOR AND BIG DOOR

You can see the laundry throughout the cycle.

MAGNETIC DOOR PLUNGER

Safely and conveniently secure the door slightly ajar with the magnetic door plunger. This will promote air circulation and allow the interior of the machine to dry. To use this feature, after the load has been removed, do not close the door completely. When the magnetic door plunger comes into contact with the metal washer cabinet, it will secure the door slightly open allowing the interior of the washer to dry.

STAINLESS STEEL DRUM

Stainless steel drum offers extreme durability.

TUB CLEAN

Regular cleaning of the tub on a monthly basis using TUB CLEAN can help keep the tub clean and fresh.

LG Laundry Lounge Apps

- LG Laundry Lounge Installer: This is a registration app for installers used to register the product on the server. Only available for authorized users.
- * Search for LG Laundry Lounge Installer in the Google Play Store or Apple App Store.
- LG Laundry Lounge: This is for end-users to check real-time monitoring of registered stores and products.
- * Search for **LG Laundry Lounge** in the Google Play Store or Apple App Store.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

Your Safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word DANGER, WARNING or CAUTION. These words mean:



DANGER

You will be killed or seriously injured if you don't immediately follow instructions.



WARNING

You can be killed or seriously injured if you don't follow instructions.



CAUTION

You may be slightly injured or cause damage to the product if you do not follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or
 mental capabilities, or lack of experience and knowledge, unless they have been given supervision or
 instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly
 qualified persons in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

BASIC SAFETY PRECAUTIONS



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following.

- Before use, the washer must be properly installed as described in this manual.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not add gasoline, dry cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- · Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the washer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children.
- · Before the washer is removed from service or discarded, remove the door to prevent children from climbing inside.
- · Do not install or store the washer where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.

- Do not repair or replace any part of the washer or attempt any servicing other than as described in this manual. We strongly recommend that any service be performed by a qualified technician.
- See Installation Instructions for grounding requirements.
- ALWAYS follow the fabric care instructions supplied by the garment manufacturer.
- Do not place items exposed to cooking oil in vour washer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Use fabric softeners or products to eliminate static only as recommended by the manufacturer.
- This washer is not designed for maritime use or for mobile installations such as in RVs. aircraft. etc.
- · Turn off the water faucets and unplug the washer if the machine is to be left for an extended period of time, such as during vacations.
- · Do not use to dry articles containing foam rubber or similarly textured rubber-like
- Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging from children.
- Always check the inside of the washer for foreign objects before loading laundry. Keep the door closed when not in use.
- Do not reach into the appliance if the tub or agitator is moving.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



WARNING

Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or servicer if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Failure to follow these warnings can cause serious injury, fire, electric shock, or death.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

SAFETY INSTRUCTIONS FOR INSTALLATION



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following.

- Refer to INSTALLATION INSTRUCTIONS for detailed grounding procedures. Installation instructions are packed with the washer for installer's reference. If the washer is moved to a new location, have it checked and reinstalled by a qualified service technician. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- For personal safety, this appliance must be properly grounded. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock from this appliance.
- · This washer must be plugged into a 120 VAC, 60 Hz grounded outlet. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. Failure to follow this warning can cause serious injury, fire, electric shock, or death.

- Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Do not install on carpet. Install washer on a solid floor. Failure to follow this warning can cause serious leak damage.
- Do not remove ground prong. Do not use an adapter or extension cord. Plug into a grounded 3-prong outlet. Failure to follow these warnings can cause serious injury, fire, electric shock, or death.
- The washer should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires
- · Never unplug your washer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Repair or immediately replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. Failure to follow this warning can cause serious injury, fire, electric shock, or death.

- When installing or moving the washer, be careful not to pinch, crush, or damage the power cord. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- The washer must be installed and electrically grounded by a qualified service person in accordance with local codes to prevent shock hazard and assure stability during operation.
- The washer is heavy. Two or more people may be needed to install and move the appliance. Failure to do so can result in back or other injury.
- Store and install the washer where it will not be exposed to temperatures below freezing or exposed to outdoor weather conditions.
 Failure to follow this warning can cause serious leak damage.
- Do not install the washer in humid spaces to reduce the risk of electric shock. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- To reduce the risk of injury to persons, adhere to all industry recommended safety procedures including the use of long sleeved gloves and safety glasses. Failure to follow all of the safety warnings in this manual could result in property damage, injury to persons or death.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, injury to persons, or death.

SAFETY INSTRUCTIONS FOR USE, CARE, CLEANING, AND DISPOSAL



WARNING

To reduce the risk of fire, electric shock, or injury to persons when using this appliance, follow basic precautions, including the following.

- Unplug the washer before cleaning to avoid the risk of electric shock.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washer.
 They will damage the finish.
- Do not put oily or greasy rags or clothing on top of the washer. These substances give off vapors that could ignite the materials.
- Do not wash items that are soiled with vegetable or cooking oil. These items may contain some oil after laundering. Due to the remaining oil, the fabric may smoke or catch fire by itself.
- Disconnect this appliance from the power supply before attempting any user maintenance.
 Turning the controls to the OFF position does not disconnect this appliance from the power supply. Failure to follow this warning can cause serious injury, fire, electric shock, or death.
- Do not combine laundry products for use in one load unless specified on the label.
- Do not mix chlorine bleach with ammonia or acids such as vinegar. Follow package directions when using laundry products. Incorrect usage can produce poisonous gas, resulting in serious injury or death.
- Do not reach into the washer while parts are moving. Before loading, unloading, or adding items, press the START/PAUSE button and allow the drum to coast to a complete stop before reaching inside. Failure to follow this warning can cause serious injury, fire, electric shock, or death.

- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. As children grow, teach them the proper, safe use of all appliances. Failure to comply with these warnings could result in serious injury to persons or death.
- Destroy the carton, plastic bag, and other packing materials after the washer is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers. Failure to comply with these warnings could result in serious injury to persons or death.
- Keep laundry products out of children's reach. To prevent injury to persons, observe all warnings on product labels. Failure to comply with these warnings could result in serious injury to persons or death.
- Remove the door to the washing compartment to avoid the danger of children or small animals getting trapped inside before your washer is removed from service or discarded. Failure to do so can result in serious injury to persons or death.
- Do not install the product in a laundry factory environment.

TABLE OF CONTENTS

2 PRODUCT FEATURES

3 IMPORTANT SAFETY INSTRUCTIONS

4 IMPORTANT SAFETY INSTRUCTIONS

- 4 BASIC SAFETY PRECAUTIONS
- 5 GROUNDING INSTRUCTIONS

6 IMPORTANT SAFETY INSTRUCTIONS

6 SAFETY INSTRUCTIONS FOR INSTALLATION

8 IMPORTANT SAFETY INSTRUCTIONS

8 SAFETY INSTRUCTIONS FOR USE, CARE, CLEANING, AND DISPOSAL

10 PARTS AND ACCESSORIES

- 10 Parts
- 10 Accessories

11 CONTROL PANEL FEATURES

- 11 Coin type (TCWM2013QS3)
- 11 Coin type (GCWM2013QD3)
- 11 Card / OPL Type (TCWM2013CS3/ TCWM2013CD3)

13 INSTALLATION INSTRUCTIONS

- 13 Checking and choosing the proper location
- 14 Unpacking and removing shipping bolts
- 15 Connecting the water lines
- 16 Connecting the drain line
- 17 Leveling the washing machine

18 PREPARATION

- 18 Precautions for fabric care before wash cycle
- 19 Fabric care labels

- 19 Sorting laundry
- 19 How to wash better
- 20 Laundry loading guide
- 20 Recommended detergent
- 20 About the dispenser
- 21 Loading the dispenser

22 OPERATING YOUR WASHER

23 PROGRAMMING MODE

- 24 Structure of Programming mode Coin / Card type
- 25 Structure of Programming mode OPL type

26 PROGRAMING MODE – SETUP MODE

26 Setup Mode : 58 UP (display)

78 Programing Mode – Test Mode

78 Diagnostic tests: **EE 58** (display)

86 Programing Mode - Collect Mode

- 86 Collect information data : [48 48 (display)]
- 87 Collect Mode Data lists

88 SMART FUNCTIONS

- 88 Wireless LAN Module Specifications
- 88 Open Source Software Notice Information

89 MAINTENANCE

89 Care after wash

93 ERROR MODE


94 POWER FAIL RECOVERY

94 DEFAULT WASHER SETTINGS


94 SPECIFICATIONS

PARTS AND ACCESSORIES

Parts

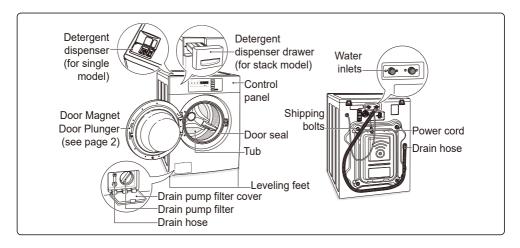


Accessories

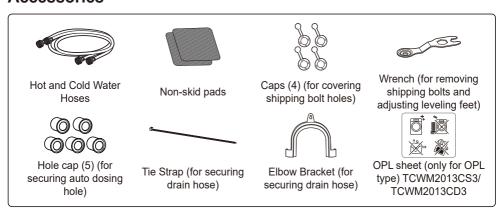


CONTROL PANEL FEATURES


Coin type (TCWM2013QS3)

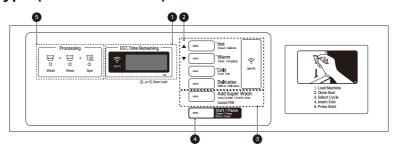

Coin type (TCWM2013QD3)

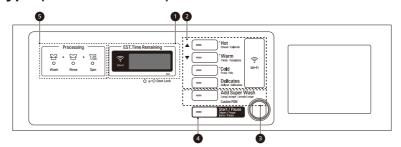


Card / OPL Type (TCWM2013CS3/TCWM2013CD3)

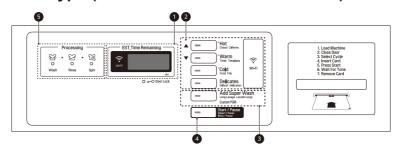

- Display LED
- 2 Cycle button
- Optional function button

- A Start/Pause button
- Status LED

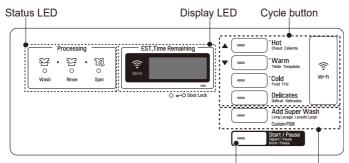

Start/Pause button Optional function button

Display LED

The display shows the vend price and remaining time and programming options. Error codes are also displayed here.



Cycle Buttons

Press the CYCLE buttons to select the desired cycle based on laundry types and conditions.

Hot

Use this cycle for heavily soiled loads.

Warm

Use this cycle for loads with moderately heavy soil.

Cold

Use this cycle for loads with normal soil.

Delicates

Use this cycle to wash sensitive fabrics that can be easily damaged.

Normal Cycle (Energy Cycle)

Press and hold the cycle buttons (Hot/Warm/Cold) for 3 seconds to run the Normal cycle. Use the Normal cycle for normally soiled cotton clothing only. Do not use for delicate fabrics such as wool or silk.

NOTE

 When the normal(energy) cycle is selected, the RPM will automatically default to the maximum regardless of the selection made in programming mode.

Optional function button

Add Super Wash: Wash time or rinse cycle can be added when additional coin is inserted or a valid cash card is entered.

Custom PGM: Customized cycle program can be used. Only available in OPL type.

Start/Pause button

The Start/Pause LED flashes when the full vend price has been satisfied and the cycle has been chosen

Status LED

LED	Description
⊊ ○ Wash	LED flashes whenever the Washing cycle is in operation.
∑ ○ Rinse	LED flashes whenever the Rinsing cycle is in operation.
∑© ○ Spin	LED flashes whenever the Spinning cycle is in operation.
○ ○ Door Lock	LED flashes whenever the door lock is activated.
(i)	LED flashes when the Wi-Fi is connecting.
Wi-Fi	LED stays lit when the Wi-Fi is connected.

INSTALLATION INSTRUCTIONS

Checking and choosing the proper location

Install the washing machine on a solid concrete cement that is strong and rigid enough to support the weight of the washing machine, even when fully loaded, without flexing or bouncing. If the floor has too much flex, you may need to reinforce it to make it more rigid. If the floor is not solid, it may cause severe vibration and noise

- 1 Clean the floor before installation.
 - Make sure to select solid and smooth ground.
- 2 Two or more people are needed for moving and unpacking the washing machine.
- 3 Allow for sufficient space between the walls and the washing machine for installation.

Space requirements

You must allow sufficient space for water lines, the drain line, and airflow.


NOTE


- This appliance is intended to be used in areas for communal use or in launderettes only and not in household applications.
- Be sure to allow for wall, door, or floor moldings that may increase the required clearances.

WARNING

 Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service personnel - Do not contact the following parts while the appliance is energized: pump, valve, motor, control board.

Installing on a floor

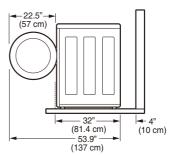

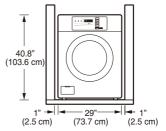


NOTE

- The floor must be strong and rigid enough to support the weight of the washer, when fully loaded, without flexing or bouncing. If your floor has too much flex, you may need to reinforce it to make it more rigid. A floor that is adequate for a top-loading washer may not be rigid enough for a front loading washer, due to the difference in the spin speed and direction. If the floor is not solid, your washer may vibrate and you may hear and feel the vibration throughout your house.
- Before installing the washer, make sure the floor is clean, dry and free of dust, dirt, water and oils so the washer feet can not slide easily. Leveling feet that can move or slide on the floor can contribute to excess vibration and noise due to poor contact with the floor.
- This washing machine must be installed underneath a matching LG commercial dryer (only for TCWM2013*D3)


Unpacking and removing shipping bolts

When removing the washer from the carton base, be sure to remove the foam drum support in the middle of the carton base. If you must lay the washer down to remove the base packaging materials, always lay it carefully on its side.


DO NOT lay the washer on its front or back.

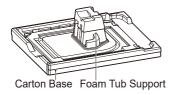

Remove the bottom two shipping bolts with the wrench (included) to fully loosen all four shipping bolts by turning them counterclockwise and then pulling them out.

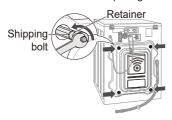

2 Locate the four hole caps included in the accessory pack and install them in the shipping bolt holes.

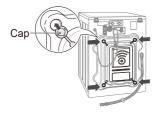

NOTE


- · Save the bolt assemblies for future use. To prevent damage to internal components, DO NOT transport the washer without reinstalling the shipping bolts.
- Failure to remove shipping bolts and retainers may cause severe vibration and noise, which can lead to permanent damage to the washer. The cord is secured to the back of the washer with a shipping bolt to help prevent operation with shipping bolts in place.

Installing Hole cap

Take the hole cap out from manual bag.



Insert the hole cap (5 pieces) into hose connect in back of the machine.

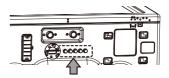


NOTE

· In case of using auto dosing feature, inserting hole cap is unnecessary.

Connecting the water lines

- Check the rubber seals on both sides of the hose.
 - Insert a rubber seal into the threaded fittings on each hose to prevent leaking.

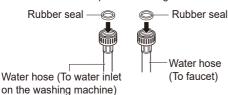

- Connect the water supply hoses to the HOT and COLD water faucets tightly by hand and then tighten another 2/3 turn with pliers.
 - Connect the blue hose to a cold water faucet and the red hose to a hot water faucet.




▲ WARNING

- · Do not overtighten. Damage to the coupling can result.
- After connecting inlet hose to water faucets, turn on the water faucets to flush out foreign substances (dirt, sand, sawdust) in the water lines. Let water drain into a bucket, and check the water temperature.



- 4 Connect the hoses to the water inlets tightly by hand and then tighten another 2/3 turn with
 - Connect the blue hose to the cold water inlet and the red hose to the hot water inlet.

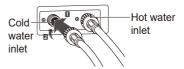



WARNING

- · Do not overtighten the hoses. Overtightening can damage the valves resulting in leaking and property damage.
- Check for leaks by turning on the faucets.
 - If water leaks, check steps 1 to 4 again.

NOTE

- · For your safety, and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized parts.
- Use new hoses when you install the washing machine. Do not reuse old hoses. Use only the inlet hoses provided with the washer. LG does not recommend the use of aftermarket hoses.
- Periodically check the hoses for cracks, leaks and wear, and replace the hoses every 5 years.
- Do not stretch the water hoses intentionally, and make sure that they are not crushed by other objects.
- Water supply pressure must be between 1.0 kgf/ cm² and 8.0 kgf/cm² (100~800 KPa). If the water supply pressure is more than 10.0 kgf/cm2, a pressure reducing valve must be installed.
- To provide optimum washing performance the hot water temperature should be set at 120-135°F (48-57°C) and the cold at 60°F (15°C).

Connecting the drain line


Secure the drain hose in place to prevent moving and leaking.

NOTE

- The drain hose should be properly secured.
 Failure to properly secure the drain hose can result in flooding and malfunction.
- Total height of the hose end should not exceed 100cm from the bottom of the washer.
- The drain must be installed in accordance with any applicable local codes and regulations.
- Make sure that the water lines are not stretched, pinched, crushed, or kinked.

Using a standpipe

- Clip the end of the hose into the elbow bracket.
 - Connect the elbow bracket within 4 inches (10 cm) from the end of the drain hose. If the drain hose is extended more than 4 inches (10 cm) beyond the end of the elbow bracket, mold or microorganisms could spread to the inside of the washer.

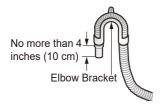


Insert the end of the drain hose into the standpipe.




3 Use a tie strap to secure the drain hose in place.

Using a laundry tub

- Clip the end of the hose into the elbow bracket.
 - Connect the elbow bracket within 4 inches
 (10 cm) from the end of the drain hose. If the drain hose is extended more than 4 inches
 (10 cm) beyond the end of the elbow bracket, mold, or microorganisms could spread to the inside of the washer.

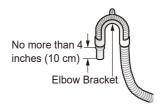


2 Hang the end of the drain hose over the side of the laundry tub.

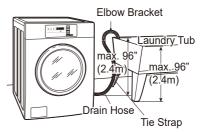

3 Use a tie strap to secure the drain hose in place.

Connecting the auto dosing

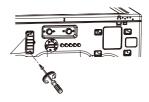

- 1 Unscrew the 2 screws on the protective cover and remove the cover.
- 2 Connect the auto dosing harness from Accessory parts.


NOTE

 The voltage of the auto dosing machine should be the same as the washer's voltage.


Leveling the washing machine

The washer tub of your new washing machine spins at very high speeds. To minimize vibration, noise, and unwanted movement, the floor must be perfectly level and solid.


- Check the washing machine's level.
 - Check the precise level by rocking the top edges of the washing machine or placing a level on the washing machine. The slope beneath the washing machine must not exceed 1°, and all four leveling feet must rest firmly on the floor.

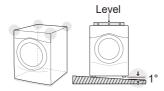

- 2 Turn the lower leveling feet clockwise to level the washing machine.
 - Turning the lower leveling feet clockwise raises the washing machine.

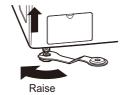

Turn the locknuts counterclockwise and tighten them when the washing machine is level.

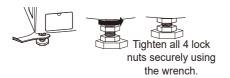

- 4 Check the washing machine's level again.
 - Push or rock the top edges of the washing machine gently to make sure that the washing machine does not rock.
 - If the washing machine rocks, repeat steps 1 to 3.




WARNING

- Using the washing machine without leveling, it may result in malfunction caused by the production of excess vibration and noise.
- · Use the leveling feet only when you level the washing machine. If you raise the leveling feet unnecessarily, it may cause abnormal ibration of the washing machine.

Using non-skid pads (optional)

If you install the washing machine on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. In the event of this, lay the non-skid pads under the leveling feet and adjust the level.

- Clean the floor to attach the non-skid pads.
 - Use a dry rag to remove and clean foreign objects or moisture. If moisture remains, the non-skid pads may slip.
- 2 Adjust the level after placing the washing machine in the installation area.
- Place the adhesive side of the non-skid pad on the floor.
 - It is most effective to install the non-skid pads under the front legs. If it is hard to place the pads under the front legs, place them under the back legs.

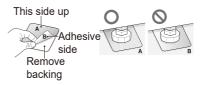

- 4 Check the washing machine's level again.
 - Push or rock the top edges of the washing machine gently to make sure that the washing machine does not rock. If the washing machine rocks, level the washing machine again.

PREPARATION

Precautions for fabric care before wash cycle

Read and observe the following to prevent shrinkage or damage to clothes.

- Check all pockets to make sure that they are empty.
 - Items such as clips, matches, pens, coins, and keys can damage both your washer and your clothes.
- Close zippers, hooks, and drawstrings to prevent these items from snagging or tangling on other clothes.
- Pretreat heavily stained areas before washing.
 - Doing so will produce clean, stain-free results.
- Combine large and small items in a load. Load large items first.
- The washer can be fully loaded, but the drum should not be tightly packed with items.
 - The door of the washer should close easily.
- · Do not wash waterproof clothes.
 - This may cause abnormal vibration or may cause the load to bounce, which could damage the tub.
- Check if there are any other foreign objects in the door seal and take extra care that clothes do not get caught there.
 - Foreign objects in the door seal may stain clothes, and water may leak if clothes get caught in the door seal.
- Wash underwear or small, light items in a laundry net.
 - Small, light items may get caught in the door seal, and a brassiere hook may damage other items or the tub.
- Brush heavy soil, dust, or hair off fabrics before washing.
 - Laundry may not wash clean if there is dirt or sand on the fabrics, or they may be damaged due to particles rubbing against sheer fabrics.

- Wash blankets individually.
 - Washing more than one blanket together may produce unclean results due to tangling or an unbalanced load.
- Always separate fabrics according to their colors and wash them separately to prevent colors from running.
 - Fabrics may damage or become stained due to fabric dyes running or due to foreign objects transferring from one fabric to another.

Fabric care labels

Most articles of clothing feature fabric care labels that include instructions for proper care.

Category	Label	Directions
	*	Hand Wash
	\simeq	Machine Wash, Normal Cycle
Washing	\cong	Use Permanent Press/ Wrinkle Resistant washing machine setting (which has a cool down or cold spray before the reduced spin)
		Use Gentle/Delicate washing machine setting (slow agitation and/ or reduced wash time).
	×	Do Not Wash
	竣	Do Not Wring
	•••	Hot
Water Temperature	••	Warm
romporataro	•	Cold/Cool
Bleach symbols	\triangle	Any Bleach (When Needed)
	A	Only Non-Chlorine Bleach (When Needed)
	*	Do Not Bleach

Sorting laundry

It is recommended that you sort laundry into similar loads that are washable in the same cycle.

Refer to the following chart for sorting clothes

Colors	Whites / Lights / Darks
Soil	Heavy / Normal / Light
Fabric	Delicates / Easy Care / Sturdy Cottons
Lint	Lint Producers / Lint Collectors

How to wash better

It is recommended to follow the below guide for better wash performance.

Load Type	Recommended Capacity	How to Wash Better
Everyday Clothes	Less Than 13kg	Frontload washers use dropping action for wash performance. Therefore, it is better to NOT fully load the drum. Oversudsing also prevents efficient wash performance.
Blanket	Less than 9kg	Do not use 2 blankets with big differences in size. It may not extract properly. Use similar-sized blankets.
Bed Sheets	Less than 9kg	Any Bleach (When Needed)
Carpet/Rug	Do Not Use	Only Non- Chlorine Bleach (When Needed)
Footwear	Do Not Use	Do Not Bleach
Pillow	Do Not Use	

Laundry loading guide

Loading your laundry following the below guide will help to increase the lifetime and wash performance of the washer.



- Single items or mixed items that include large items should be less than half of the maximum capacity(dry condition).
 - Single items: Consists only of one type of garment, such as 5kg of towel.
 - Mixed items: Consists of various types of garments.
 - Large item : bed linen/sheet, bath sheet, bath towel, and blanket.
 - Mixed items (without large items) should only be loaded up to 2/3 of the drum for optimal performance.

NOTE

 Do not overload as this reduces cleaning efficiency and causes gasket wear.

Recommended detergent

Make sure to use HE (High-Efficiency) detergent for front-loading washing machines. HE detergents dissolve more efficiently and produce fewer suds to ensure efficient washing and rinsing. Use the correct amount of detergent as indicated on the label of the detergent packaging.



Designed specially to use only HE (High-Efficiency) detergent

NOTE

- Only use HE detergents, since using a regular detergent will produce excessive suds.
- HE detergents produce fewer suds, dissolve more efficiently to improve washing and rinsing performance, and help to keep the interior of your washer clean.
- · Use less detergent for soft water.
- Wipe up any spills immediately, as liquids could damage the finish and the control panel of the washing machine.
- Using too much detergent can cause a build-up in the tub resulting in unsatisfactory performance and machine malfunction.
- If you use a detergent that does not dissolve easily or a detergent with high viscosity, it will leave a residue on the tub, which may not rinse properly.

About the dispenser

The automatic dispenser consists of three compartments which hold:

- · Liquid chlorine bleach.
- · Liquid fabric softener.
- Liquid and powdered detergent and colorsafe bleach for main wash.

All laundry products can be added at once in their respective dispenser compartments. They will be dispensed at the appropriate time for the most effective cleaning.

After adding the laundry products to the dispenser, close the dispenser cover.

To add detergent, bleach, and fabric softener to the automatic dispenser:

- Open the dispenser cover.
- 2 Load the laundry products into the appropriate compartments.
- 3 Slowly close the dispenser cover to avoid early dispensing of the laundry products.

NOTE

 It is normal for a small amount of water to remain in the dispenser compartments at the end of the cycle.

Loading the dispenser

Main Wash Detergent Compartment


This compartment holds laundry detergent for the main wash cycle, which is added to the load at the beginning of the cycle.

Follow the detergent manufacturer's instructions with respect to the amount of detergent to use, and never use more than the recommended amount. Using too much detergent can result in detergent buildup in clothing and the washer. Either powdered or liquid detergent may be used.


NOTE

 Liquid or powdered color-safe bleach may be added to the main wash compartment with detergent of the same type.

- Single model -

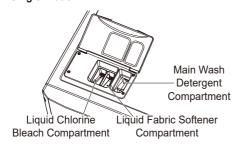

- Stack model -

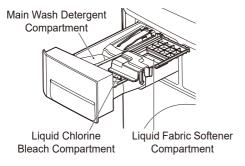

Liquid Bleach Compartment

This compartment holds liquid chlorine bleach, which will be dispensed automatically at the proper time during the wash cycle.

NOTE

- Do not add powdered or liquid color-safe bleach to this compartment.
- Always follow the manufacturer's recommendations when adding bleach. Do not exceed the maximum fill line. Using too much bleach can damage fabrics.
- Never pour undiluted liquid chlorine bleach directly onto the load or into the drum. Fabric damage can occur.

Fabric Softener Compartment

This compartment holds liquid fabric softener, which will be automatically dispensed during the final rinse cycle.

NOTE

- Always follow the manufacturer's recommendations when adding fabric softener.
 Do not exceed the maximum fill line. Using too much fabric softener may result in stained clothes.
- Dilute concentrated fabric softeners with warm water. Do not exceed the maximum fill line.
- Never pour fabric softener directly onto the load or into the drum.
- Do not add the fabric softener sheets to this compartment.
- Do not add 'fabric sheet softener' into the dispenser draw as it is likely to cause water to leak out. If 'fabric sheet softener' has been added, please pull out the dispenser draw and remove.

OPERATING YOUR WASHER

1 Ready mode

- All types of machines show 'PUSH'

NOTE

- · Price setting varies by country
- Set your country from **EBEH** mode
- After EEPT, reset your country (Default country is USA)

2 Select the cycle

Press the desired button and the display will show you the price of the cycle.(You cannot change the cycle while the machine is running.)

- Add Super Wash (Optional, only in Coin/Card type)Wash time or rinse cycle can be added when additional coin is inserted, or a valid cash card is entered.
- Select cycles designed for different types of fabric and soil levels.

CYCLE	Fabric type	Wash/Rinse Temp.
Hot	Cotton, linen, towels, shirts, sheets	Hot / Cold
Warm	Cotton, mixed loads, work clothes, jeans, shirts	Warm / Cold
Cold	Cotton, dress shirts, pants, wrinkle-free clothing, cotton/ poly blend clothing, tablecloths	Cold / Cold
Delicates	Dress shirts, blouses, nylons, sheer or lacey garments	Cold / Cold

NOTE

 When the card balance is insufficient, machine displays BBL and the card balance.

3 Insert Coin/Card (Not for OPL type)

Insert a sufficient amount of change that is more than the programmed vend price for the selected cycle. Insert a card that has a sufficient balance. The card balance should be more than the programmed vend price for the selected cycle.

4 Change cycle

You can not change the cycle while the machine is running.

5 Cycle finish

The machine stops and the display shows 'End' with beep sound.

* Do not work any button when a cycle is in progress.

A WARNING

 To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

PROGRAMMING MODE

: You can check machine information or change setting on Program setup, collect information data, Diagnostic test.


There are two methods that you can enter programming mode.


How to enter Programming mode:

- Coin type Turn on/off the toggle switch.
- Card type Insert the service card.
- All types –
- 1 Press the 1st & 3rd button at the same time.
- Press the 2nd & 3rd buttons to toggle numbers. Then, press the 4th button to move to the next digit.
- 3 Press the Start button to finish password input.
- * Default Password: 3000

<Control Panel Button>



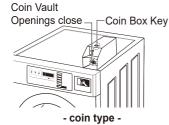

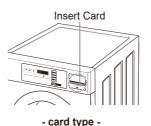



- OPL type -

NOTE

- If you turn on the power without connecting meter case for the first time, the machine display EFGI.
- When the machine is shipped from the factory, it is set in the card type. You can change Card/OPL type by button. (For more information refer to SETUP mode.)
- . The machine will display PUSH for OPL type
- · Price setting varies by country
- Set your country from **EBEH** mode (Refer How to enter the **EHPE**)
- After EEPT, reset your country (Default country is USA)

Structure of Programming mode - Coin / Card type

Algorithm flow chart shows how to control the programming mode.

Before program set, check the structure of the programming mode.

- Turn on/off toggle switch or Insert service card, for entering set up mode (or follow OPL type instructions).
- Press Hot button to move to the upper level.
- Press Warm (+) or Cold (-) button if you want to be at the same level.
- Press Start button to enter the details of Set up or Diagnostic Tests.

SEUP is to set price value, time value, vend type, etc.

EE SE consists of line test, reset, free cycle, and kill cycle.

ELEE is to collect the usage data.

88	88	<i>88 88</i>		8888	
8888	<i>88 98</i>	8888	8888	88 88	88 88
S8 88	<i>80 E E</i>	8888	8888	88 88	8888
S8 88	88 88	8888	88 <i>88</i>	88 88	88 88
8088	8888	<i>EE PE</i>	8888	<i>58 88</i>	8888
88.88	<i>68 88</i>	88 88	8888	88 88	80 80
8888	8888	60 UB	8888	88 58	8888
8888	<i>8888</i>	8888	8888	8028	888
<i>58 8 8</i>	88 88	<i>PR 55</i>	88:88	8888	88.88
<i>58 68</i>	8888	88.88	88:88	86 88	88 88
<i>58 88</i>			88:88	88:88	88.88
88 88			88:88	88 88	88 88
8888			88:88	8888	88 88
8888			88:88	88 88	86 88
88:88			88 88	86 88	
ES 58			88 88	88:88	
8888			88 88	88.88	
85 E B			86 88	8888	
88 BE			88 88	88 88	
85 <i>8</i> 8					


NOTE

- Do not use EBEB, EHEB. (It is used only in inspecting the machine.)
- · Price setting varies by country
- Set your country from mode (Refer How to enter the mode)
- PHPB This function is for Card type only.
- After EEPT, reset your country (Default country is USA)

Structure of Programming mode - OPL type

Algorithm flow chart shows how to control the programming mode. Before program set, check the structure of the programming mode.

- Turn on/off toggle switch or Insert service card, for entering set up mode (or follow OPL type instructions).
- 2 Press Hot button to move to the upper level.
- 3 Press Warm (+) or Cold (-) button if you want to be at the same level.
- 4 Press Start button to enter the details of Set up or Diagnostic Tests.
- **5E UP** is to set price value, time value, vend type, etc.
- EESE consists of line test, reset, free cycle, and kill cycle.
- **ELEE** is to collect the usage data.

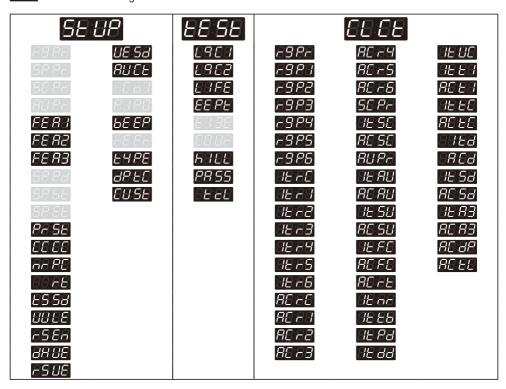

NOTE

• Do not use **LRE2**, **LRE5**. (It is used only in inspecting the machine.)

PROGRAMING MODE - SETUP MODE

Setup Mode: (display)

You can change washer vend price, cycle time, and cycle parameters, etc.

How to enter Programming mode:

- Coin type Turn on/off the toggle switch.
- Card type Insert the service card.
- All types –
- 1 Press the 1st & 3rd button at the same time.
- Press the 2nd & 3rd buttons to toggle numbers. Then, press the 4th button to move to the next digit.
- 3 Press the Start button to finish password input.
- * Default Password: 3000

1. Regular Price Setup

How to set regular prices for all/each course.

1st————	Hot Chaud Callente
2nd =	Warm Tiéde Templada
3rd =	Cold Froid Frio
4th =	Delicates Delicat Delicatos
5th =	Add Super Wash

<Control Panel Button>

2nd——	_	Warm Tiéde Templada
3rd——	_	Cold Froid Frio
4th——	_	Delicates Délicat Delicados
5th——	_	Add Super Wash Long Lovego Lovedo Lorgo *Custom PGM
Start——	_	Start / Pause Départ / Pause Inicio / Pause

Regu	Display	
Enter SVC mode		88:88
Press 1st button		EE SE
Press 2nd button		<i>58 88</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	Start button to select: → 1st button to go back a step: → SEUP	
Press Start to set the price	The next course setting will be displayed.	8858

NOTE

• Range: 0.00~9.95

• Increments: 0.05

- . ALL is to select the default prices for all the courses at once.
- Select individual price for COS1~6.
- COS1: Hot

- COS2: Warm
- · COS3: Cold
- COS4 : Delicates
- COS5, COS6: Heater model only
- * Individual course prices are prioritized above

88 BB.

Set your currency type using EBEH

2.588 Special Price Setup

How to set special prices for all/each course.

Spe	Display	
Enter SVC mode		8888
Press 1st button		88 88
Press 2nd button		58 BB
Press start button		8888
Press 2nd button or 3rd button	Until display shows	S8 8 8
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ SPP- ➤ ALL ➤ DAS COS I COS S COS S COS S COS S COS S COS S	
Press Start to set the price	The next course setting will be displayed.	88 SB

NOTE

• Range: 0.00~9.95

• Increments: 0.05

• ALL is to select the default prices for all the courses at once.

• Select individual price for COS1~6.

• COS1: Hot • COS2: Warm · COS3: Cold • COS4 : Delicates

• COS5, COS6: Heater model only

* Individual course prices are prioritized above 88 BB

Set your currency type using Laza

3.5522 Add Super Wash Price Setup

How to set Add Super Wash Price.

* Add Super Wash is used to add extra wash, rinse, or both (only in Pay type).

Add Sup	er Wash Price Setup	Display
Enter SVC mode		88:88
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>58 88</i>
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► SEPF ► G.25	
Press Start to set the price	The next menu setting will be displayed.	8888

NOTE

• Range: 0.00~9.95 • Increments: 0.05

- Set your currency type using Lacil

4. Auto Dosing Price Setup

How to set Auto Dosing Price.

* Auto dosing is used to inject detergent/chemicals using external pumps (only in Pay type).

Auto D	Display	
Enter SVC mode		8888
Press 1st button		EE SE
Press 2nd button		58 <i>U</i> R
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8882
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► RUP- ► 0:25	
Press Start to set the price	The next menu setting will be displayed.	8888

NOTE

• Range: 0.00~9.95 • Increments: 0.05

Set your currency type using Lac

5. FEBB Features of the Machine (1st Set)

How to set up Features of the Machine. There are multiple setup features under FEBI.

Features of	the Machine (1st Set)	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		SE 88
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 8E
Select the setting you want		
Button functions:	SEUR ▶ FERI ▶ SP86	
Start button = Select	<i>88.</i> 46	
1st button = Go back a step	3r PL	
2nd button = Move up or increase value	EE In PRUS	
3rd button = Move down or decrease value		
Press Start to set sub-function		

NOTE

5PBE: Special price day enable or disable

PR 4h : Easy entry payment cycle kill enable or disable

3 PL: : Maximum rpm limit enable or disable

EE III : Twin spray enable or disable

PRUS : Pause function enable or disable

5-1.588 Special Price Day Setup

Special Price Day Setup can be used to enable/disable the use of special prices.

Specia	Il Price Day Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 8E
Press start button		8856
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FERT ➤ SPUE ➤ 0156 EnRb	
Press Start to enable or disable	The next menu setting will be displayed.	<i>28 48</i>

5-2. Easy Entry Payment Cycle Kill Setup

Easy entry cycle kill can be enabled or disabled in the payment cycle

Easy Entry P	ayment Cycle Kill Setup	Display
Enter SVC mode		88:88
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 8E
Press 2nd button or 3rd button	Until display shows	<i>28 86</i>
Press start button		8858
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FERT ➤ PRYS ➤ 2756 EnRb	
Press Start to enable or disable	The next menu setting will be displayed.	8888

NOTE

BHSB Shortcut key not available

ERRB Shortcut key available

• Shortcut key: Press and hold the start button for at least 3seconds

5-3. Max RPM Limit Setup

Max RPM Limit Setup can be used to enable/disable the ability to limit the max RPM during spin process.

Max RP	M Limitation Setup	Display
Enter SVC mode		8888
Press 1st button		EE SE
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 BB
Press start button		<i>68 88</i>
Press 2nd button or 3rd button	Until display shows	<i>88 8 E</i>
Press start button		8856
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FERT ➤ 3FPL ➤ 3756 EAR6	
Press Start to enable or disable	The next menu setting will be displayed.	88.88

NOTE

If enabled, the max RPM will adjust according to the laundry load.

Max RPM will be reduced for highly unbalanced loads.

5-4. Twin Spray Setup

Twin Spray Setup can be used to enable/disable water circulation during tumble.

Twi	n Spray Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		<i>58 88</i>
Press 2nd button or 3rd button	Until display shows	<i>88 88</i>
Press start button		8856
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FERT ➤ EE In ➤ 0156 En 86	
Press Start to enable or disable	The next menu setting will be displayed.	<i>P88</i> 5

NOTE

For better wash performance, twin spray pumps up water from the bottom of the tub to spray soapy water on laundry while tumbling.

5-5. Pause Function Setup

Pause Function Setup can be used to enable/disable the ability to pause the cycle when pressing the start/pause button.

Pause	Function Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 <i>0</i> 2
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 8E
Press 2nd button or 3rd button	Until display shows	<i>PR US</i>
Press start button		8858
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FER1 ➤ PRUS ➤ d155 EnR5	
Press Start to enable or disable	The next menu setting will be displayed.	<i>58 88</i>

6. FEB2 Features of the Machine (2nd Set)

How to set up features of the machine. There are multiple setup features under **EE 82**.

Features of the Machine (2nd Set)		Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 88
Press start button		58 E A
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > FER2 > SEEN SUUE RUEE SPCE EcoP Ec HE	

NOTE

55 En : 5th button fuction select (Add super wash or Auto dosing charging)

5888: Add super wash enable or disable

RUEE: Auto dosing function enable or disable

5866: Add super wash type

EE BB: Tub clean load detection enable or disable

EE HE: Tub clean heater usage enable or disable

EEBE: Tub clean easy entry function enable or disable

6-1.55En 5th Button Type Setup

5th Button Type Setup can be used to set the function of the 5th button.

5th B	utton Type Setup	Display
Enter SVC mode		8888
Press 1st button		EE SE
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		<i>58 88</i>
Press 2nd button or 3rd button	Until display shows	8885
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► FER2 ► SEEA ► R885 RUES	
Press Start to set sub-fuction	Display returns to standby mode.	

NOTE

Setting to 8885 will make the 5th button function as Add Super Wash.

Setting to BUED will make the 5th button function as payment for auto dosing.

6-2. Add Super Wash Setup

Add Super Wash Setup can be used to enable/disable the super wash function.

* Add Super Wash is used to add extra wash, rinse, or both (only used in Pay type).

Add S	uper Wash Setup	Display
Enter SVC mode		88.88
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 E A
Press 2nd button or 3rd button	Until display shows	88 BE
Press start button		<i>888</i> 6
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FER2 ➤ SUUE ➤ EXRE 8158	
Press Start to enable or disable	The next menu setting will be displayed.	8888

6-3. Auto Dosing Setup

Auto Dosing Setup can be used to enable/disable the Auto dosing function.

Auto	Dosing Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 E A
Press 2nd button or 3rd button	Until display shows	88.68
Press start button		<i>888</i> 8
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FER2 ➤ RUEE ➤ E-Ab 2155	
Press Start to enable or disable	The next menu setting will be displayed.	<i>58 88</i>

6-4. Add Super Wash Type Setup

Add Super Wash Type Setup can be used to add extra wash cycle, rinse cycle, or both.

Add Sup	er Wash Type Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 E A
Press 2nd button or 3rd button	Until display shows	58 E E
Press start button		55 E F
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > FER2 > SPCE > 66E6	
Press Start to set sub-fuction	The next menu setting will be displayed.	<i>88 88</i>

NOTE

BBEH: Both (Increase wash time and rinse once more)

EUUE: Increase wash time : Rinse once more

6-5. EEBB Tub Clean Load Detection Setup

Tub Clean Load Detection Setup can be used to enable/disable the ability to detect laundry load during tub clean. If enabled, the washer will detect whether or not a load is present in the washer.

Tub Clean	Load Detection Setup	Display
Enter SVC mode		8888
Press 1st button		EE SE
Press 2nd button		58 BP
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 <i>8</i> 8
Press start button		58 E R
Press 2nd button or 3rd button	Until display shows	EE 88
Press start button		<i>EB 86</i>
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > FER2 > EEBP > EBB5 8755	
Press Start to enable or disable	The next menu setting will be displayed.	<i>E8 88</i>

6-6. Tub Clean Heater Setup

Tub Clean Heater Setup can be used to enable/disable the ability to use the heater during tub clean. If enabled, the heater will be used for the tub clean.

Tub Cl	ean Heater Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		SE 88
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		56 E A
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8858
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► FER2 ► EEHE ► 2156 En Rb	
Press Start to enable or disable	The next menu setting will be displayed.	8888

6-7. Tub Clean Button Setup

Tub Clean Button Setup can be used to enable/disable the easy entry function for the new tub clean

Tub CI	ean Button Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>U</i> R
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>8888</i>
Press start button		58 E A
Press 2nd button or 3rd button	Until display shows	8888
Press start button		E8 88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FER2 ➤ E26E ➤ E5R6 3156	
Press Start to enable or disable	The next menu setting will be displayed.	58.88

NOTE

8158 Shortcut key not available

En 8b Shortcut key available (Press and hold 1st and 2nd button in same time)

7. FEBB Features of the Machine (3rd Set)

How to set up features of the machine. There are multiple setup features under [55 88].

Features of	the Machine (3rd Set)	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		58 E E
Select the setting you want		
Button functions:	SEUR ► FERB ► SUEE	
Start button = Select	5P on	
1st button = Go back a step	IE at	
2nd button = Move up or increase value	88 aa H4 CS	
3rd button = Move down or decrease value	UU FC	

NOTE

57EE: Spin type

58 85 : Spin only easy entry function enable or disable

: Initial tub clean enable or disable 93 66 : Quick mode enable or disable

BHES: Hygiene cycle enable or disable : Wave force enable or disable

7-1. Spin Type Setup

Spin Type Setup can be used to select spin type between multi-housing type and coin laundry type.

Sp	in Type Setup	Display
Enter SVC mode		8888
Press 1st button		EE SE
Press 2nd button		SE 88
Press start button		8888
Press 2nd button or 3rd button	Until display shows	F8 88
Press start button		<i>68:88</i>
Press start button		<i>80 E E</i>
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > FER3 > STEE > 3ULE CRUA	
Press Start to set spin type	The next menu setting will be displayed.	S8 88

NOTE

BULE Vibration is lower than Coin type, but spin entry time may be longer. This setting is recommended for locations with bad flooring conditions, such as apartments or dormitories.

[#80] Vibration is higher than Multi type, but spin entry time will be shorter. This setting is recommended for locations with good flooring conditions, such as laundromats.

• Long spin entry time means an increase in total cycle time.

7-2. Spin Only Easy Entry Setup

Spin Only Easy Entry Setup can be used to enable/disable the easy entry function for the spin only.

Spin Onl	y Easy Entry Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88</i>
Press 2nd button		58 BB
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8888
Press 2nd button or 3rd button	Until display shows	5 <i>8</i>
Press start button		<i>888</i> 6
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► FER3 ► SPan ► EnRb 8156	
Press Start to enable or disable	The next menu setting will be displayed.	88.88

- In the case when the washer completes a cycle but the clothes are still very wet, the spin only feature will be activated and ready for use.
- This condition is based on the program of the machine, in some cases it may not be available. Even if
 the spin only is not available to the customer after a load, it does not mean the washer requires service.

7-3. How to use Spin only easy entry

When the washer completes a cycle but the clothes are still very wet, please run a spin only cycle using the easy entry function.

Spin only easy entry		Display
Press and hold 5th button for at least 3 seconds.	Display shows 5 P In if the function is activated.	S8 8A
Press start button	Display will show the remaining time and the Spin only cycle starts.	
	When the Spin only cycle is finished, End is displayed with beeping.	88 88
	Go back to ready mode.	

- There will be no visible indication even when the Spin Only Easy Entry function becomes activated. The machine will be in ready/idle mode.
 - PRB type: Price is displayed.
 - FFEE type: PUSH is displayed.

7-4. Pre clean entry button setup

Pre clean entry button setup can be used to enable/disable button that entry short tub clean cycle.

Pre Clear	Entry Button Setup	Display
Enter SVC mode		88.88
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88.88
Press start button		88 56
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ FER3 ➤ IE=L ➤ d15b EnRb	
Press Start to enable or disable	The next menu setting will be displayed.	88 88

7-5. How to use Pre clean

When the customer or manager want to use short clean the tub before the normal cycle, please run a pre clean cycle.

Pre Clean Entry		Display
Press and hold 1st button for at least 3 seconds.	Display shows if the function is activated.	88:88
Press start button	Display will show the remaining time and the Pre clean cycle starts.	
	When the Pre clean cycle is finished, End is displayed with beeping.	88 88
	Go back to ready mode.	

- · After one cycle, additional cycles are not possible continuously.
- There will be no visible indication even when the Pre clean becomes activated. The machine will be in ready/idle mode.
 - PRB type: Price is displayed.
 - **EFEE** type: PUSH is displayed.

7-6. Wave Force Setup

Wave Force Setup can be used to enable/disable the wave force.

Wav	ve Force Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		<i>58 88</i>
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8856
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► FER3 ► UUFC ► 2156 EnR5	
Press Start to enable or disable	The next menu setting will be displayed.	88:88

8.532 Special Price Day Setup

Special Price Day Setup can be used to select which days to apply special prices.

Specia	I Price Day Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>58.88</i>
Press start button		85 UA
Press Start button		88 56
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > SPP3 > SUn > 3156 3 on En 86 E UE F Ed E HU F F 1 S RE	
Press Start to enable or disable	The next menu setting will be displayed.	88 88

9.5255 Special Price Beginning Time Setup

Special Price Beginning Time Setup can be used to set the start time of special prices.

Special Price	Beginning Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 <i>0</i> 8
Press start button		<i>88 68</i>
Press 2nd button or 3rd button	Until display shows	58 BE
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ▶ SPBE ▶ MBI D	
Press Start to set time	The next menu setting will be displayed.	<i>58 68</i>

NOTE

• Make sure to set up the Time feature before using this feature.

• Range: 0~23 hr • Increments: 1

10.52EE Special Price Ending Time Setup

Special Price Ending Time Setup can be used to set the end time for special prices.

Special Price	Beginning Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>88 8 8</i>
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > SPEE > MAIN!	
Press Start to set time	The next menu setting will be displayed.	<i>88 S8</i>

NOTE

• Range : 1~24 hr • Increments: 1

11.255 Prewash Time Setup

Prewash Time Setup can be used to set the time for prewash.

Prew	ash Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		SE UP
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>88 SE</i>
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR ➤ PrSE ➤ CBS1 ➤ PrEn CBS2 PrHC CBS3 PrCE CBS5 CBS5 CBS5	
Press Start to set option	The next menu setting will be displayed.	8888

NOTE

Pr En : Prewash available(2 15b : disable / En 8b : enable) PFHE: Prewash valve(PHBE: Hot valve / PBEB: cold valve)

- PFHE is used only on single type model.

PFEE: Prewash time(Range: 4~8)

12. Wash Time Setup

Wash Time Setup can be used to set the duration of the wash process.

Wa	sh Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>U</i> R
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR > EEEE > 6051 > 1118 6052 6053 6054 6055 6055	
Press Start to set time	The next course setting will be displayed.	8888

NOTE

• Range : 5~15 min • Increments: 1 • COS1 : Hot • COS2 : Warm • COS3 : Cold

• COS4 : Delicates

• COS5, COS6 : Heater model only

13. Rumber of Rinses per Cycle Setup

Number of Rinses per Cycle Setup can be used to set number of rinses for one cycle.

Number of F	Rinses per Cycle Setup	Display
Enter SVC mode		8888
Press 1st button		88 88
Press 2nd button		SB 88
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > 05 PC > CO ST > 05 52 CO S2 CO S3 CO S4 CO S5 CO S6	
Press Start to set the number of cycles	The next course setting will be displayed.	<i>8888</i>

NOTE

• Range : 1~5 • Increments: 1 • COS1: Hot • COS2: Warm • COS3 : Cold • COS4 : Delicates

• COS5, COS6 : Heater model only

14. Rinse Time Setup

Rinse Time Setup can be used to set the duration of one rinse.

Rin	se Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		<i>58 88</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88:88
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR > 11 re > 0051 > 11 8 0052 0053 0054 0055 0056	
Press Start to set time	The next course setting will be displayed.	8888

NOTE

• Multiple and and are to calculate total rinse process time

• Range : 8~16 min • Increments: 1 • COS1 : Hot

• COS2 : Warm • COS3: Cold

• COS4 : Delicates

• COS5, COS6 : Heater model only

15.E55 Top Spin Speed Setup

Top Spin Speed Setup can be used to set the maximum RPM for the spin process.

Top S	pin Speed Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>88 S8</i>
Press start button		8888
Select the setting you want		
Button functions:	5508 → 6558 → 6050 → 6560	
Start button = Select	E852	
1st button = Go back a step	CO 53	
2nd button = Move up or increase value	CO 54 CO 55	
3rd button = Move down or decrease value	CO 56	
Press Start to set the number	The next course setting will be displayed.	8888

NOTE 0:1000RPM • Range: 0~6 1:1000 RPM • Increments: 1 2:900 RPM • COS1: Hot 3:800 RPM • COS2: Warm 4:700 RPM · COS3: Cold • COS4 : Delicates 5:600 RPM • COS5, COS6 : Heater model only 6:500 RPM

16. Water Level Setup

Water Level Setup can be used to set the water supply level.

Wat	ter Level Setup	Display
Enter SVC mode		88:88
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>08</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR > UULE > COSI > CELO COS3 COS4 COS5 COS5	
Press Start to set the level	The next course setting will be displayed.	<i>28 88</i>

NOTE

• COS1 : Hot • COS2 : Warm • COS3 : Cold • COS4 : Delicates

• COS5, COS6 : Heater model only

 Water level frequency • High: 23.0 KHz

• Middle: 23.5 KHz • Low: 23.8 KHz

17. ESE Rinse Spin Setup

Rinse Spin Setup can be used to enable/disable spin during rinse cycle.

Rin	se Spin Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 UR
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		88:58
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► ASEA ► FS1 ► EARB FS2 815b FS3 FS9 FS5	
Press Start to enable or disable	The next course setting will be displayed.	88:88

NOTE

: 1st rinse spin skip 2752 : 2nd rinse spin skip : 3rd rinse spin skip : 4th rinse spin skip : 5th, 6th rinse spin skip

6th rinse spin refers to Add super wash rinse.

18. Drop Count Setup

Drop Count Setup can be used to set the number of drop counts. Drops occur while the machine checks for balancing of the load as the cycle enters higher RPM.

Drop Count Setup		Display
Enter SVC mode		8888
Press 1st button		<i>E8 58</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		8850
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► AUUE ► 150	
Press Start to set the number	The next menu setting will be displayed.	8888

- **Drop counts 25~145:** After dropping the selected amount of counts, UE will not occur. The cycle will end immediately or after spinning at a low RPM.
- Drop counts 150: After dropping the selected amount of counts, UE will occur. The cycle will end after shut down time. Refer to How to set shut down time after UE.

19. Rinse Spin Drop Count Setup

Rinse Spin Drop Count Setup can be used to set the drop count for each rinse spin. Drops occur while the machine checks for balancing of the load as the cycle enters higher RPM.

Rinse Sp	in Drop Count Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 <i>08</i>
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or	SEUP ► FSUE ► 00-10	
decrease value		00.00
Press Start to set the number	The next menu setting will be displayed.	08 58

NOTE

• Range: 5~15 • Increments: 1

• If unable to reach target RPM within set number of drops, cycle will continue to next step.

20. UE Shutdown Setup

UE Shutdown Setup can be used to set the time to display UE until the cycle ends.

UE Shutdown Setup		Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>88</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	UE 58
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ► UES8 ► □□□3	
Press Start to set the time	The next menu setting will be displayed.	88.88

- Range : 0~10 min
- 0 : UE will remain until user opens door, redistributes clothes, and starts up spin process again.
- 1~10 : Cycle will end after set time.

21. Auto Dosing Pump Time Setup

Auto Dosing Pump Time Setup can be used to set the pump activation duration for each channel per course.

Auto Dosi	ng Pump Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>8</i> 2
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 E E
Press start button		6858
Select the setting you want		
Button functions:	5988 > 889 > 9858 > 988 > 9886	
Start button = Select	00 S2 B0 H2	
1st button = Go back a step	0053 00 H3	
2nd button = Move up or increase value	CO 54 C H4 CO 55 C H5	
3rd button = Move down or decrease value	CO 56	
Press Start to set the time	The next channel setting will be displayed.	8888

СН	Detergent	Range (s)	Input period	
0	ETC (Emulsifier)	0~20	Main wash phase	
0	Main wash	0~20	Main wash phase	
8	Bleach	0~10	Main wash (Remaining washing time : 5 Minutes)	0
4	Softener	0~20	Final rinse phase	
6	Pre-wash	0~20	Pre-wash phase	

22. Coin 1 Value Setup

Coin 1 Value Setup can be used to set the value of each coin signal received.

Coin1 Value Setup		Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		58 <i>88</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 88
Press start button		88:88
Select the price you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ Col ➤ 0.25	
Press Start to set the price	The next menu setting will be displayed.	8888

NOTE

• Range: 0.05~9.95 • Increment: 0.05

23. Penny Increment Pricing Offset Setup

Penny Increment Pricing Offset Setup can be used to set additional cent increase when card is used.

Penny Increment Pricing Offset Setup		Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		88 BB
Press start button		8888
Press 2nd button or 3rd button	Until display shows	2828
Press start button		88:88
Select the price you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or	SEUP ► PIPo ► ###	
Press Start to set the price	The next menu setting will be displayed.	88.88

- Range: 0~4
- PIPo Penny increment pricing offset is available only in card type. It hasn't affected the coin type's price setting.

24. Beep Volume Setup

Beep Volume Setup can be used to set the sound level of the machine.

Beep Volume Setup		Display
Enter SVC mode		8888
Press 1st button		<i>88 S8</i>
Press 2nd button		88 <i>8</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>68 68</i>
Press start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	5£UP ► 6EEP ► HISH LOE DFF	
Press Start to set the sound level	The next menu setting will be displayed.	8888

25. EEF Standby Return Time Setup

Standby Return Time Setup can be used to set how long the input payment is held until the machine resets to standby mode.

Standby Return Time Setup		Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 UP
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ rEFr ➤ MMMO	
Press Start to set the time	The next menu setting will be displayed.	8888

- 0 : Holds input payment permanently.
- 1~180 : Holds input payment for selected amount of time, then returns to standby mode.
- EFF: Standby return time setup is available only in coin type.

26. Type

Type can be used to set the machine's various type settings.

	Туре	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 8
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>8988</i>
Select the setting you want		
Button functions:	5EUP ► E4PE ► P8E8	
Start button = Select	L8 E I	
1st button = Go back a step	UE n8	
2nd button = Move up or	C8 #8	
increase value	Endr	
3rd button = Move down or	HE RE	
decrease value		

NOTE

PBEB: Product type

: Currency type

₩ 56 : Vend type

Card : Card reader type

: Coin meter type

HE RE: Heater type

26-1. PBEB Product Type Setup

Product Type Setup can be used to set the machine's payment type (Pay or Free)

Proc	luct Type Setup	Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		SE 88
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press Start button		8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR ➤ E4PE ➤ PdEd ➤ PR4 FrEE	
Press Start to set the type	Display returns to standby mode.	

NOTE

• PAY : Coin/Card

• FrEE: On Premise Laundry

• Issues may occur if certain large items are loaded after changing from Free type to Pay type.

26-2. Currency Type Setup

Currency Type Setup can be used to set the country and its currency

Currency Type Setup		Display
Enter SVC mode		88.88
Press 1st button		EE SE
Press 2nd button		SE 08
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>E88E</i>
Press Start button		<i>8888</i>
Press 2nd button or 3rd button	Until display shows	8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR ▶ 8486 ▶ 6662	
Press Start to set the type	Display returns to standby mode.	

Country (Loc1)	Range	Increments
England (0)	0~10.00	0.10
Australia (1)	0~10.00	1.00
USA (2)	0~9.95	0.05
China (3)	0~199	1
Korea (4)	0~9500	100
Japan (5)	0~9500	100
Canada (6)	0~9.95	0.05
Philippines (7)	0~995	5

26-3. Vend Type Setup

Vent Type Setup can be used to set the payment type (Coin/Card).

Vend Type Setup		Display
Enter SVC mode		8888
Press 1st button		<i>EE SE</i>
Press 2nd button		SE 88
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press Start button		2888
Press 2nd button or 3rd button	Until display shows	88 A8
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ EMPE ➤ UEnd ➤ Codn CArd RPP	
Press Start to set the type	Display returns to standby mode.	

26-4. Card Reader Type Setup

Card Reader Type can be used to set the card reader company.

Card R	Reader Type Setup	Display
Enter SVC mode		8888
Press 1st button		EE SE
Press 2nd button		<i>58 88</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>8888</i>
Press Start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUR ► 6488 ► 6888 ► 6898	
Press Start to set the type	Display returns to standby mode.	

NOTE

• 0 : Greenwald

• 1:ESD

26-5. Coin Drop Type Setup

Coin Drop Type can be used to set the coin pulse signal setting for coin drops.

Coin	Drop Type Setup	Display
Enter SVC mode		88.88
Press 1st button		<i>88 SE</i>
Press 2nd button		58 UR
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>8888</i>
Press Start button		P8 E 8
Press 2nd button or 3rd button	Until display shows	8888
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP ➤ 69PS ➤ Cada ➤ 6660	
Press Start to set the type	Display returns to standby mode.	

NOTE

· Coin pulse

• 0:50ms:ESD, Greenwald, Munzprufer

• 1:100ms: Korea

26-6. HEBE Heater type setup

Heater type setup can be used to set machine's tool(heater/non heater).

Hea	ter Type Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 UP
Press start button		8888
Press 2nd button or 3rd button	Until display shows	8888
Press Start button		8888
Press 2nd button or 3rd button	Until display shows	HE BE
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP > ESPE > HERE > OFF	
Press Start to set the type	Display returns to standby mode.	

NOTE

• BBBB : Heater

Non heater

27. Max Surpassed Cycle Time Setup

Cut off time is how long the machine can run after the display time has been reached. This feature allows the adjustment of the cut off time between 1 and 15 minutes.

Max Surpas	ssed Cycle Time Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 SE</i>
Press 2nd button		58 <i>0</i> 2
Press start button		8888
Press 2nd button or 3rd button	Until display shows	88 88
Press Start button		88:88
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or	SEUP > GPEE > GTT0	
Press Start to set the time.	The next menu setting will be displayed.	<i>EB 58</i>

NOTE

• Range: 1~15 min

• Increments: 1

• The washer will try and complete the entire cycle in the allotted display time. However, in the case of an off balance load or too much soap, the washer will use the extra cut off time to balance or remove excess soap before ending the cycle.

28. Custom Program Setup

Custom Program can be used to create up to 20 different customized courses.

Custo	m Program Setup	Display
Enter SVC mode		8888
Press 1st button		<i>88 58</i>
Press 2nd button		58 <i>08</i>
Press start button		8888
Press 2nd button or 3rd button	Until display shows	<i>EB 58</i>
Press Start button		<i>88 88</i>
Select the setting you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	SEUP CUSE Edit No. CO. CO. CO. CC. C	
Press Start to set		

NOTE

EUSE: is only available in FrEE type.

EBEL : Total number of custom courses (1~20)

EDF5: Select base course

Wash Time

REPE : Number of Rinse per Cycle

: Rinse Time

E558: Top Spin Speed

: Water Level

Proc : Rinse Spin Only, Spin Only

ESEA: Rinse Spin

FULL: Auto Dosing Pump Time

Programing Mode – Test Mode

Diagnostic tests: (display)

This program has been added for testing the washer and detecting errors.

How to enter Programming mode:

- Coin type Turn on/off the toggle switch.
- Card type Insert the service card.
- All types -
- 1 Press the 1st & 3rd button at the same time.
- Press the 2nd & 3rd buttons to toggle numbers. Then, press the 4th button to move to the next digit.
- 3 Press the Start button to finish password input.
- * Default Password: 3000

1st — Hot Calente 2nd — Warm Take Templata 3rd — Cold 4th — Delicate Delica

Start-

<Control Panel Button>

1. Test

Test features can be used to check and change various machine settings.

	Test mode	Display
Enter SVC mode		8888
Select the feature you want Button functions: Start button = Select 1st button = Go back a step 2nd button = Move up or increase value 3rd button = Move down or decrease value	EESE ► E9E1 E9E2 E1FE EEPE E13E EDUA HILL PRSS	

NOTE

: Diagnostic Test 1

ESE2: Factory Use (Do not Use)

ESEE: Factory Use (Do not Use)

EEPE: Factory Reset
E 13E: Time Setting

COUF: Courtesy Cycle

PASS : Password Setup

E CL : Tub Clean Course

2. Diagnostic Test

Diagnostic Test can be used to check functionality of various machine parts. Press Start to move through the check points.

Number of times the Start button is pressed	Check point	Display
0	Enter SVC mode	6866
1	Turns on all lamps and locks the door	Displays EEEE, 1U:XX, 1t:XX, 12:XX, 1C:XX alternately (Version)
2	Tumble clockwise	rpm (40~50)
3	Low speed spin	rpm (600)
4	High speed spin	rpm (1000)
5	Inlet valve for main water turns on	Water level frequency (255~)
6	Inlet valve for hot water turns on	Water level frequency (255~)
7	Inlet valve for atomizing turns on (Single model) Inlet valve for softener turns on (Stack model)	Water level frequency (255~)
8	Inlet valve for bleach turns on (Single model) Inlet valve for atomizing/bleach turns on (Stack model)	Water level frequency (255~)
9	Tumble counter clockwise	rpm (40~50)
10	Heater turns on	Displays water temperature
11	Circulation pump turns on	Water level frequency (255~)
12	Drain pump turns on	Water level frequency (255~)
13	All lamps turn on	Displays 3888 , 1U:XX,
14	Button check	1t:XX, 12:XX, 1C:XX alternately (Version)
15	High speed spin	rpm (1000)
16	PDA signal check	this function is not applied in this machine
17		8888

- Make sure the drum is empty when diagnostic test is being performed. Do not use **ESES**.
- RPM notation is displayed except for the last number when it is more than a hundred (i.e. 1200 rpm is displayed as 120)

3. Factory Reset

Factory Reset is used to reset the machine to default settings.

Factory Reset		Display
Enter SVC mode		88.88
Press 2nd button or 3rd button	Until display shows	8888
Press Start button		88:88
Press 2nd button	Until display shows	88:88
Press Start button		88:88

NOTE

• All settings return to default.

• Wash time: 8 minutes · Rinse cycle: Twice

• Top spin speed: 1000 rpm

• Add Super Wash: 3 minutes extra wash and one extra rinse

• Price setting varies by country

• After Factory Reset, set your country from Lacal mode.

4. Time Setup

Time Setup can be used to set the current year, month, day, hour, and minute.

	Display	
Enter SVC mode		8888
Press 2nd button or 3rd button	Until display shows	88:88
Press Start button	Display shows you 2000(Year) \rightarrow 0101(Month/Date) \rightarrow Sat(Day) \rightarrow 0000(Time(24hr))	
Press Start button		28 88
Press 2nd button or 3rd button	Until display shows the year you want (i.e. 2020)	2028
Press Start button		8888
Press 2nd button or 3rd button	Until display shows the month you want in the left two digits (i.e. June = 0601)	88.88
Press Start button		<i>88 88</i>
Press 2nd button or 3rd button	Until display shows the day you want in the right two digits (i.e. June 11th = 0611)	88 88
Press Start button		00 00
Press 2nd button or 3rd button	Until display shows the hour you want (i.e. 2:00 PM = 1400)	8888
Press Start button		88 88
Press 2nd button or 3rd button	Until displays shows the minute you want (i.e. 2:15 PM = 1415)	88:85
Press Start button	Display shows you 2000(Year) → 0101(Month/ Date) → Sat(Day) → 0000(Time(24hr))	
Press 1st button	Until display returns to standby mode	

- Time is displayed in military time format.
- Time Setup must be set to use Special Day Price feature.
- When the machine is powered off, Time Setup is reset to default.

5. Courtesy Cycle

Courtesy Cycle is a free cycle given to customers for Pay Type machines.

Courtesy Cycle		Display
Enter SVC mode		88:88
Press 2nd button or 3rd button	Until display shows	68 BA
Press Start button		88:88
Press 2nd button	Until display shows	88:88
Press Start button	Machine is ready to use. User can choose desired course and press Start.	

6. Kill Cycle

Kill Cycle is used to end the currently operating cycle.

Cycle Kill		Display
Enter SVC mode		8888
Press 2nd button or 3rd button	Until display shows	8888
Press Start button		88:88
Press 2nd button	Until display shows	88:88
Press Start button	Machine is ready to use. User can choose desired course and press Start.	8888

- Only works for machine that is currently operating.
- Cycle can be ended with Cycle Kill Card for Card Type machines.
- Easy entry: Press and hold the start button for at least 3 seconds.

7.PB55 Password Setup

Password Setup can be used to change the password to enter Service mode.

Password Setup		Display
Enter SVC mode		8888
Press 2nd button or 3rd button	Until display shows	88:88
Press Start button		
	Input current password	
Button functions: Start button = Select	Default Password : 3000	
1st button = Go back a step	1 Press the 2nd & 3rd buttons to toggle	80.00
2nd button = Move up or increase value	numbers.	88:88
3rd button = Move down or decrease value	2 Press the 4th button to move to the next digit.	
Press Start button		88:88
Button functions: Start button = Select	Input new password (i.e. 1234)	88:88
1st button = Go back a step	1 Press the 2nd & 3rd buttons to toggle	88:88
2nd button = Move up or increase value	numbers.	88:88
3rd button = Move down or decrease value	Press the 4th button to move to the next digit.	88:88
Press Start button	New password is set	88:88

8. Tub Clean Course

Tub Clean Course is used to clean the drum.

Tub Clean Course		Display
Enter SVC mode		8888
Press 2nd button or 3rd button	Until display shows	88:88
Press Start button	Display shows remaining time and starts the Tub Clean Course.	

NOTE

- Machine goes back to standby mode after Tub Clean Course is completed.
- Easy Entry: Press and hold the 1st button and 2nd button for at least 3 seconds.
- Display shows the default number of Tub Clean cycles to run. (Range: 1~3)
- · Never load laundry when using Tub Clean Course. Laundry may be damaged or become contaminated.
- Tub Clean Course should be used every 50 cycles.
- Related functions **Ea 68**: Tub Clean Load Detection Setup

EEHE: Tub Clean Heater Setup

EE 5E: Tub Clean Shortcut Button Setup

Programing Mode – Collect Mode

Collect information data : EEE (display)

The washer collects the usage data so that the owner can check various information like number of various cycles used, how many times card or coins used, etc.

Collect Mode

Collect Mode		Display
Enter SVC mode		8888
Press 1st button		8888
Press 2nd button or 3rd button	Until display shows	88.88
Press Start button		8888
Select the feature you want Start button = Select		
1st button = Go back a step		
2nd button = Move up or increase value	Refer to the follow Collect Mode Data List	
3rd button = Move down or decrease value		

Collect Mode Data lists

		Data 11313	
No.	Abbreviation	Meaning	Description
1	rgPr	Regular Price (Default Price)	
2	rgP1	Regular COS1 Price	
3	rgP2	Regular COS2 Price	
4	rgP3	Regular COS3 Price	
5	rgP4	Regular COS4 Price	
6	rgP5	Regular COS5 Price (for Heater)	
7	rgP6	Regular COS6 Price (for Heater)	
8	ItrC	Interval Regular Total Cycle Count	(0~65535)
9	ltr1	Interval Regular COS1 Cycle Count	(0~65535)
10	ltr2	Interval Regular COS2 Cycle Count	(0~65535)
11	ltr3	Interval Regular COS3 Cycle Count	(0~65535)
12	ltr4	Interval Regular COS4 Cycle Count	(0~65535)
13	ltr5	Interval Regular COS5 Cycle Count (for Heater)	(0~65535)
14	ltr6	Interval Regular COS6 Cycle Count (for Heater)	(0~65535)
15	ACrC	Accumulated Regular Total Cycle Count	(0~65535)
16	ACr1	Accumulated Regular COS1 Cycle Count	(0~65535)
17	ACr2	Accumulated Regular COS2 Cycle Count	(0~65535)
18	ACr3	Accumulated Regular COS3 Cycle Count	(0~65535)
19	ACr4	Accumulated Regular COS4 Cycle Count	(0~65535)
20	ACr5	Accumulated Regular COS5 Cycle Count (for Heater)	(0~65535)
21	ACr6	Accumulated Regular COS6 Cycle Count (for Heater)	(0~65535)
22	SCPr	'Add Super Wash' Price	
23	ItSC	Interval 'Add Super Wash' Usage Count	(0~65535)
24	ACSC	Accumulated 'Add Super Wash' Usage Count	(0~65535)
25	AUPr	'Auto Dosing' Price	Ì
26	ItAU	Interval 'Auto Dosing' Usage Count	(0~65535)
27	ACAU	Accumulated 'Auto Dosing' Usage Count	(0~65535)
28	ItSU	Interval 'Courtesy Cycle' Usage Count	(0~65535)
29	ACSU	Accumulated 'Courtesy Cycle' Usage Count	(0~65535)
30	ItFC	Interval 'Token' Cycle Count	(0~65535)
31	ACFC	Accumulated 'Token' Cycle Count	(0~65535)
32	ACrt	Accumulated Run Time (minutes)	(0~65535)
33	ltnr	Interval No Runs	(0~255)
34	Ittb	Interval Trouble Cycle Count	(0~255)
35	ItPd	Interval Power Downs	(0~255)
36	Itdd	Interval Unauthorized Service Door Openings	(0~255)
37	ItUC	Interval Unauthorized Coin Vault Openings	(0~255)
38	Ittl	Interval Total Income	(0~65535)
39	ACtl	Accumulated Total Income	(0~65535)
40	IttC	Interval Total Cycle Count	(0~65535)
41	ACtC	Accumulated Total Cycle Count	(0~65535)
42	Itd	Interval Money	(0~65535)
43	Acd	Accumulated Money	(0~65535)
44	ItSd	Interval 'Add Super Wash' Money	(0~65535)
45	ACSd	Accumulated 'Add Super Wash' Money	(0~65535)
46	ItA3	Interval 'Auto Dosing' Money	(0~65535)
47	ACA3	Accumulated 'Auto Dosing' Money	(0~65535)
48	ACdP	Accumulated 'WaveForce' Operations	(0~65535)
49	ACtL	Accumulated 'Tub Clean Course' Cycle Count	(0~65535)
50	ACPC	Accumulated 'Pre Clean' Cycle Count	(0~65535)
		production and the country of the co	11 20000)

- 'Auto Dosing' only counts paid Auto Dosing Cycles.
- Interval Cycles are reset to 0 after data is collected with Collect Card.
- Accumulated Cycles do not count Service or Trouble Cycles.
- Price settings vary by country.

SMART FUNCTIONS

Wireless LAN Module Specifications

Model	LCW-004
Frequency	2412 MHz - 2462 MHz
Range	
Output Power	< 30 dBm
(Max)	

FCC Notice

The following notice covers the transmitter module contained in this product. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

FCC RF Radiation Exposure StatementThis equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm (7.8 inches) between the antenna and your body. Users must follow the specific operating instructions for satisfying RF exposure compliance.

Industry Canada Statement

This device contains licence-exempt transmitter(s)/
receiver(s) that comply with Innovation, Science and
Economic Development Canada's licenceexempt
RSS(s). Operation is subject to the following two
conditions:

- 1 This device may not cause interference. This device must accept any interference,
- 2 including interference that may cause undesired operation of the device.

IC Radiation Exposure Statement

IC Radiation Exposure StatementThis equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 cm (7.8 inches) between the antenna and your body.

NOTE

 THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

MAINTENANCE

Care after wash

After the cycle is finished, wipe the door and the inside of the door seal to remove any moisture. Leave the door open to dry the washer tub interior. Wipe the body of the washing machine with a dry cloth to remove any moisture

▲ WARNING

- · Unplug the washer before cleaning to avoid the risk of electric shock. Failure to follow this warning can cause serious injury. fire, electrical shock, death.
- · Never use harsh chemicals, abrasive cleaners, or solvents to clean the washer. They will damage the finish.
- · Do not use volatile substances (benzene, paint thinner, alcohol, acetone, etc.) or detergents with strong chemical components when cleaning the washing machine. Doing so may cause discoloration or damage to the machine, or it may cause a fire.
- · Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service personnel - Do not contact the following parts while the appliance is energized: pump, valve, motor, control board.

Storing the Washer

If the washer will not be used for an extended period of time and is in an area that could be exposed to freezing temperatures:

- Turn off water supply tap.
- 2 Disconnect hoses from water supply and drain water from hoses.
- 3 Plug the power cord into a properly grounded electrical outlet.
- 4 Add 1 gallon of nontoxic recreational vehicle (RV) antifreeze to the empty wash drum. Close door.
- 5 Unplug the power cord, dry the drum interior with a soft cloth, and close the door.
- Remove the inserts from the dispenser. Drain any water in compartments and dry the compartments.
- Store the washer in an upright position.
- To remove the antifreeze from the washer after storage, run washer through a complete cycle using detergent. Do not add laundry!

NOTE


- Not all of the RV antifreeze will be expelled.
- · Weekly cleaning of the detergent dispenser will ensure problem free operation.

Cleaning the Dispenser

- The dispenser should be cleaned periodically to remove buildup from detergent and other laundry products.
- Single model -




- Stack model -

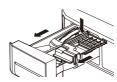

- Remove the inserts from the drawer, and clean them with warm water and a soft cloth or brush to remove any residue or buildup. Wipe out the inside of the drawer opening with a damp cloth. Reassemble the drawer and reinstall in the drawer opening.
- Single model -



- Stack model -

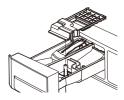

NOTE

 Do not use anything other than water to clean the drawer, inserts, and drawer opening.

Cleaning the water inlet filters

Clean the water inlet filters periodically to prevent clogging. Take extra care to clean the water inlet filters for areas using hard water. Water may not be supplied if there are foreign objects, such as rust, sand, or stones in the water inlet filters.

- Pull out the plug to turn off the washing machine.
- 2 Turn off the faucets connected with the water inlets.
- 3 Remove the water inlet hoses.



4 Pull out the water inlet filter.



- 5 Remove foreign objects from the water filter inlet.
 - Soak the water filter inlets in white vinegar or a lime scale remover or use a toothbrush to remove foreign objects and rinse thoroughly.
- 6 Press the water filter inlets back into place.
- Reattach the water lines to the washing machine.



WARNING

- Unplug the power cord and turn off the faucets before cleaning. Failure to do so may cause electric shock.
- Do not use the washing machine without the inlet filters. If you use the washing machine without the inlet filters it will cause leaks and malfunction.
- If you use the washing machine in an area with hard water, the inlet filter may clog due to lime buildup.

NOTE

 I E message will blink on the display when the water pressure in the detergent drawer is weak or an inlet filter is clogged with dirt. Clean the inlet filter.

Cleaning the Drain Pump Filter

The washing machine fails to drain if the drain pump filter is clogged. Periodically clean the drain filter to prevent clogging with foreign objects.

- Pull out the plug to turn off the washing machine.
- 2 Open the drain pump filter cover.



3 Unclip the drain hose and remove the plug from the drain hose to drain the remaining water.



4 Twist the pump filter counterclockwise to remove.



Clean the pump filter and opening.



6 Recap the plug onto the drain hose and reattach the drain hose.



Insert the drain pump filter.



Close the drain pump filter cover.



WARNING

- Make sure to pull out the plug before cleaning. Failure to do so may cause electric shock.
- Opening the drain filter will result in water overflowing if there is water in the washer tub. Make sure to check if the water is completely drained before opening the drain filter.
- . If you use the washing machine with the drain filter reassembled incorrectly after cleaning it, or if you use the machine without the filter, it may cause leaks or malfunction of the washing machine.

NOTE

• DE message will blink when the drain pump filter is cloqued with dirt. Clean the drain pump filter.

Cleaning the Door Seal

Clean the door seal once a month to prevent buildup of dirt in the door seal.

- Wear rubber gloves and protective goggles.
- Dilute 3/4 cup (177 ml) of liquid chlorine bleach in 1 gallon (3.8 L) of water.
- Soak a sponge or a soft cloth in this diluted solution and wipe down all around the door seal
- 4 Wipe any moisture with a dry towel or cloth after cleaning.
- Leave the door open to allow the door seal to dry completely.



A CAUTION

· Cleaning the door seal with an undiluted solution may cause malfunction of the door seal and washing machine parts.

Cleaning the Drum, Tub Clean

Using the washing machine in a humid space for a long period of time may lead to a buildup of black mold and germs in the air inside the washer tub and affect your health. If you clean the washer tub regularly on a monthly basis using TUB CLEAN it will keep the washer tub clean for hygienic use.

- Add tub cleaner or lime scale remover into the detergent dispenser drawer.
 - Do not exceed the maximum detergent limit line when you add it. Detergent may remain in the washer tub after cleaning.
 - When you use liquid chlorine bleach, load it into the liquid chlorine bleach compartment. When you use a powdered cleaner, add it into the main wash detergent compartment.
 - When you use cleaning tablets, place them directly into the washer tub. (Do not add cleaning tablets to the drawer.)

NOTE

- Never load laundry while using TUB CLEAN. The laundry may damage or become contaminated. Make sure to clean the washer tub when it is empty.
- Leave the door open after finishing the laundry to keep the tub clean.
- TUB CLEAN should be repeated monthly.
- Safely and conveniently secure the door slightly aiar with a magnetic door plunger. This will promote air circulation and allow the interior of the machine to drv.

NOTE

- · Wave Force process during the Rinse step helps in maintaining tub hygiene. The tub is cleaned by rotating the water-filled tub at an optimized RPM.
- Wave Force is intrinsic within the Rinse step. No additional setting is required.
- Wave Force is NOT a substitute for the TUB CLEAN cycle. TUB CLEAN should still be repeated monthly to maintain hygienic use.

Removing Mineral Buildup

In areas with hard water, mineral scale can form on internal components of the washer. Periodically clean the mineral buildup on the internal components to extend the lifespan of the washer.

Use of a water softener is recommended in areas with hard water.

- Use a descaler, to remove visible mineral buildup on the washer tub.
- After descaling, always run the Tub Clean cycle before washing clothing
- Mineral scale and other spots may be removed from the stainless steel tub using a soft cloth soaked in stainless steel cleaner.
- Do not use steel wool or abrasive cleaners.

ERROR MODE

Meaning of Error Codes that LED displays during occurrence of problem.

Problem	Possible Cause	Solution
	Water supply is not adequate in area.	Check another tap in the house.
00.00	Water supply taps are not completely open.	Fully open tap.
8888	Water inlet hose is bent.	Straighten hose.
	The filter of the inlet hose clogged.	Check the filter of the inlet hose.
88:88	Drain hose is bent or clogged.	Clean and straighten the drain hose.
00.00	The drain filter is clogged.	Clean the drain filter.
	Load is too small.Load is out of balance.	Add 1~2 similar items to help balance the load.
8088	The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bath mat, bath robe, etc.) and the imbalance is too great, after several attempts to restart the spin cycle the machine will stop and the error code will be displayed.	Rearrange the load in the tub to allow it to balance properly.
88:88	Is the door opened or not completely closed?	Close the door completely.
00.00		* If it will not open, call for service.
88.88	Door lock is broken.	Check the door switch.
88:88	The water overfills due to a faulty water valve.	Close the water tap.
00.00	The water level sensor malfunction.	Unplug the power plug.
88.88		Call for service.
8888	Overload in motor.	Restart the cycle after 30 minutes.
00.00		If LEE is not released, call for service.
8888	Disconnection of card reader cable.	Check the card reader wire.
5885	Too much detergent is used.	This is not an error. It indicates a suds removal routine.
		It will clear and restart the cycle when the suds are gone.
8888	Thermistor is opened or shorted.	Thermistor should be replaced.
88:88	Out of balance sensor is defective.	Sensor should be replaced.
88:88	Load is out of balance or the out of balance sensor is defective.	Rearrange the load in the tub to allow it to balance properly. If problem persists replace the sensor.
8888	Malfunction in Heater system.	Check the heater and wire.

POWER FAIL RECOVERY

In case of power failure, the machine stops running but the time display remains on, showing the time just before power failure.

DEFAULT WASHER SETTINGS

Default Settings	Default
Wash Time	8 Minutes
Rinse Time	17 Minutes
Spin Time	11 Minutes
Rinsing times	Twice
Coin #1 Value	0.25
Vend Price	1.00
Add super wash price	0.25
Top Spin speed	1000 rpm

SPECIFICATIONS

Model	
Power supply	120 V~, 60Hz
Size	737 mm (W) X 814 mm (D) X 1036 mm (H), 1370 mm (D with door open) 29"(W) X 32"(D) X 40.8"(H), 53" (D with door open)
Weight	223.1 lbs. (101.2kg)
Wash capacity	5.2 cu.ft (IEC: 6.0 cu.ft)
	Max load(kg) based on IEC load.
Spin speed	1000 rpm max.
Permissible water pressure	20 ~ 120 psi (138 ~ 827 kPa)

- · Specifications subject to change by manufacturer.
- · RPM depends on the selected cycle and load type.
- · Price setting varies by country.
- Set your country from Laza
- · After EEPT, reset your country (Default country is USA)

