 


Installation

 
Location and Function of Controls

This following is the general figure of the design of the drive.  
The drive's appearance and specifications may change without prior notice.

(Front View)

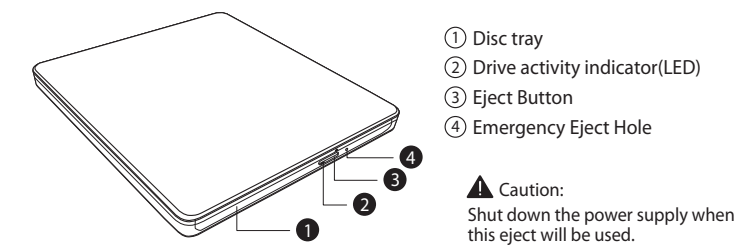

(Rear View)

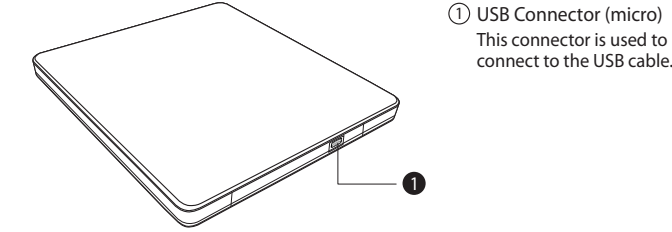

Hardware Installation

- Notes:
- Please pay attention to handling Electrostatic Sensitive Devices, you may use anti-static products such as wrist straps, heel straps, mats to protect your body from electrostatic.
  - Make sure you have a personal computer with any open USB ports before connecting the drive to your computer.

Connecting to computer or A/V Device.

- Connect the drive to the computer as shown in figure.
- ① Connect the USB cable (micro plug) to the drive.
  - ② Connect the other end of the USB cable to your computer.
- ※ The drive may get its power from the PC USB power. All systems may not meet USB power requirements and full performance may not be achieved. In this case, connect to the USB Y type cable (not supplied.).

When the computer is ready, confirm that the drive is detected. And then, insert the supplied software CD into the drive and install the software.

- Notes:
- Please do not connect the USB cables by any means other than specified above. Using the wrong type of cable with this drive can cause it to malfunction.
  - The appliance is not intended for use by young children or infirm persons without supervision. Young Children should be supervised to ensure that they do not play with appliance.
  - If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

 
The drive supports both Windows and Mac .To use it properly, please follow directions below.

- How to Eject Disc from the drive
- When using with Mac
    - Click the eject button located on Mac OS menu or toolbar.
  - When using with Windows
    - Press the eject button in the front of the product.

- \* Software CD (for Windows only)  
- The Software CD includes DVD software for usage for Windows.

What is TV Connectivity?

TV Connectivity is a function that allows you to enjoy videos, pictures and music by connecting this product to a compatible A/V device (e.g.DIGITAL TV, DIGITAL PHOTO FRAME, PC) that supports USB connectivity.

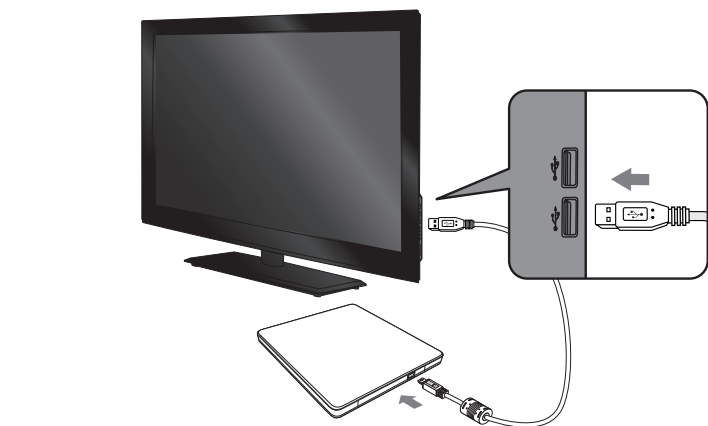

How to Use TV Connectivity

- \* This product is defaulted to ODD mode when it is powered on.
1. With the tray open, press and hold the 'Eject' button for 2 seconds. (The LED indicator will turn on, switching to TV mode. Press and hold the button again for 2 seconds with the tray open to return to ODD mode).
  2. Insert your supported media into the drive. The disc file system will be converted to FAT32 and will be recognized as USB flash memory.
  3. Select and play the files from your A/V device to enjoy videos, pictures and music. Refer to your A/V device owner's manual for more information.

- Notes:
- Normal operation is not guaranteed if you use a USB hub or unspecified USB extension cables.
  - Due to compatibility issue of some AV devices and disc, may not work.

 


Quick Set-up Guide  
Slim Portable DVD Writer  
SP80

To install of your product, please read this guide manual carefully and completely.



www.lg.com

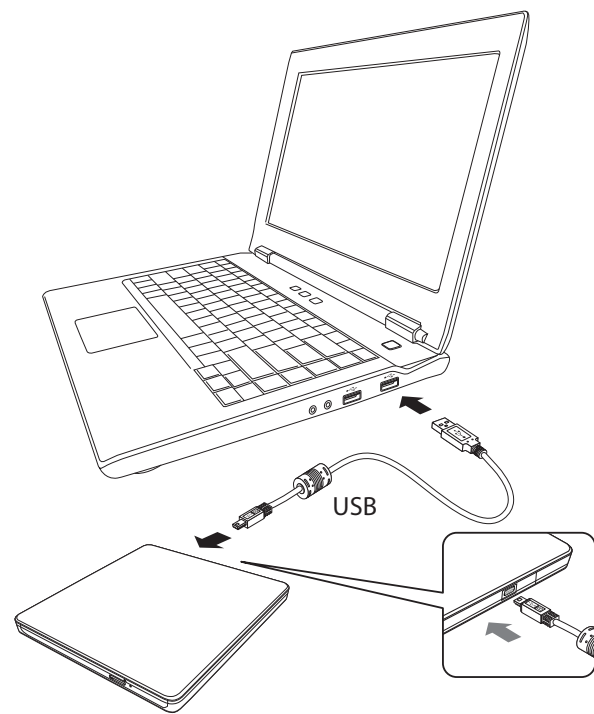

\* 'Surface Pro 3, 4' Compatibility - 'SP80' can work with 'Surface Pro 3, 4' via single USB connection.

System Environment

Computer

This unit can be operated in the system environment explained here.

| System requirements            | CPU    | Pentium IV 2.4 GHz or Higher(with USB 2.0) for basic performance (Recommended for optimal performance: Pentium IV 3.2 GHz or Higher).   |
|--------------------------------|--------|---|
|                                | Memory | 256 MB or larger (Recommended: 512 MB).   |
| Hard disk                      |        | 20 GB or more free space. (The free space needed for writing depends on the quantity of data.)  |
| Video Memory                   |        | 64 MB (Recommended: 128 MB).  |
| Interface                      |        | USB 2.0 (3.0 Compatible)  |
| Software Required OS           |        | Windows 10/8.1/8/7/Vista/XP(SP3), Mac OS X v.10.7.5 or Higher   |
| Recommended media manufacturer |        | CD-R : LG, Mitsubishi Kagaku Media, Verbatim, That's, TDK, Ritek or HP discs are recommended.<br>CD-RW : LG, Mitsubishi Kagaku Media, Verbatim are recommended.<br>DVD-R : Mitsubishi Kagaku Media, Maxell, That's are recommended.<br>DVD-RW : Victor, JVC, Mitsubishi Kagaku Media, TDK are recommended.<br>DVD+R : Mitsubishi Kagaku Media, That's, Maxell are recommended.<br>DVD+RW : TDK, Mitsubishi Kagaku Media, Ricoh are recommended.<br>DVD-RAM : Maxell, Mitsubishi Kagaku Media are recommended.<br>M-Disc (DVD+R SL) : Millenniata<br>DVD+R DL : Mitsubishi Kagaku Media, Verbatim are recommended. |

- \* Compatibility problem in write/read function may occur with some media depending on the media manufacturing quality.  
\* To achieve maximum Record & Write speed your system may require data to be copied first to the computer's hard drive rather than directly from another source disc or drive.  
\* Please visit <http://www.m-disc.com> to learn more about the M-DISC.™  
\* For Windows Vista or higher, 1 GB of RAM or large is recommended.  
\* Under Windows 8 operating system, a specific mainboard with nVidia GeForce 7025 Chipset may cause an abnormal operation.

Specifications

|                  |   |                       |           |
|------------------|---|-----------------------|-----------|
| Supported Discs  | DVD-ROM(Single/Dual), DVD-RW, DVD-R, DVD+RW, DVD+R, DVD+R Double layer, DVD-R Dual layer, DVD- RAM, M-Disc (DVD+R SL), CD-Digital Audio & CD-Extra, CD-Plus, CD-ROM, CD-ROM XA-Ready, CD-I FMV, CD-TEXT, CD-Bridge, CD-R, CD-RW, Photo-CD (Single & Multi-Session), Video CD, DVD-VIDEO |                       |           |
| Interface        | USB 2.0 (3.0 Compatible)  |                       |           |
| Read/Write Speed | Media   | Write :               | Read :    |
|                  | DVD-ROM   | -                     | 8 x max.  |
|                  | DVD-R   | 2 x, 4 x, 8 x         | 8 x max.  |
|                  | DVD-R DL  | 2 x, 4 x, 6 x         | 8 x max.  |
|                  | DVD-RW  | 2 x, 4 x, 6 x         | 8 x max.  |
|                  | DVD-RAM (Ver. 2.2)  | 2 x, 3 x, 5 x         | 6 x max.  |
|                  | DVD+R   | 2.4 x, 4 x, 8 x       | 8 x max.  |
|                  | M-Disc (DVD+R SL)   | 4 x                   | 8 x max.  |
|                  | DVD+R DL  | 2.4 x, 4 x, 6 x       | 8 x max.  |
|                  | DVD+RW  | 2.4 x, 4 x, 8 x       | 8 x max.  |
|                  | CD-R  | 10 x, 16 x, 24 x      | 24 x max. |
|                  | CD-RW   | 4 x, 10 x, 16 x, 24 x | 24 x max. |
|                  | CD-ROM  | -                     | 24 x max. |
|                  | CD-DA(DAE)  | -                     | 24 x max. |

- The maximum data transfer rate varies according to the performance capabilities of the PC.
- For the sake of periodic improvements, specifications and appearance are subject to change without notice.
- We have taken all possible measures to assure the quality of our products, but we cannot be responsible for the consequences if defect occurs.

Safety Instructions

**CAUTION :** The laser used in the Writer can damage your eyes.  
Do not attempt to open the cover. To reduce the risk of electric shock, do not remove the cover (or back).  
There are no user-serviceable parts inside. Refer servicing to qualified service personnel. Use of controls or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**WARNING :** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CLASS 1  
KLASSE 1  
LUOKAN 1  
KLASS 1  
CLASSE 1  
CLASSE 1

LASER PRODUCT  
LASER PRODUKT  
LASER LAITE  
LASER APPARAT  
PRODUCTO LASER  
PRODOTTO LASER

CAUTION : CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED.AVOID EXPOSURE TO THE BEAM.

ADVARSEL : KLASSE 3B SYNLIG OG USYNLIG LASERSTRÅLING I ÅBEN TILSTAND OG VED AFRØDTILÆSEFUNKTION. UNDGÅ ATBLIVE RAMT AF LASERSTRÅLEN.

VARO! : LUOKKA 3B AVAITAESSAJAKUMOTTAESSALUKITUS. NÄKYNÄÄ JANÄKYMÄTÖNTÄ LASERSÄTELYÄ. VÄLTÄ LASERSÄTEILLE ALTISTUMISTA.

ATTENTION : CLASSE 3B RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE ET ENCLÈCHEMENTS DÉFECTUEUX, ÉVITER L'EXPOSITION AU FAISCEAU.

VORSICHT : SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG DER KLASSE 3B WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT VERMEIDEN SIE ES, SICH DEM STRAHL AUSZUSETZEN.

ADVARSEL : KLASSE 3B SYNLIG OG USYNLIG LASERSTRÅLING NÄR ÅPNES OG LÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.

WARNING : KLASSE 3B SYNLIG OCH USYNLIG LASERSTRÅLNING FÖREKOMMER NÄR OCH MELLANLÅSET FÖRSTÖRS. UNDVIK EKSPONERING UNDER STRÅLEN.

■ Microsoft® and Windows® are trademarks registered in the United States and other countries by the Microsoft Corporation.

■ The company names and product names written in this manual are trademarks or registered trademarks of the respective companies.

FCC COMPLIANCE STATEMENT

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an Authorized Service Center for help.

•FCC WARNING  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

•This product is for use only with UL listed personal computers that have installation instructions detailing user-installation of card cage accessory.

Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FC** Model : SP80NB80, SP90NB70, SP80NW80  
Responsible Party : Hiliachi-LG Data Storage, Austin FA Center  
Address : 11801 Stonehollow Dr. Suite 125 Austin, TX 78758  
Telephone Number : (512) 832-8082

| CUSTOMER ASSISTANCE NUMBERS / INFORMATION D'AIDE À LA CLIENTÈLE / SERVIÇO DE ATENDIMENTO AO CONSUMIDOR |   |
|--|---|
| USA  | Call <b>1-800-243-0000</b> and choose the appropriate prompt. (Mon. - Fri 10:00 am to 7:00 pm PST)<br><b>http://www.lg.com/us</b>   |
| Canada   | Access our web-site at: <a href="http://www.LG.ca">www.LG.ca</a> (Service Option) or Call 1-888-LG-CANADA (542 2623)<br>Press the appropriate menu option, have your product model & serial numbers & your postal code ready.<br>Aller au site Internet : <a href="http://www.LG.ca">www.LG.ca</a> (option service) ou téléphoner au 1,888,LG,CANADA (542.2623).<br>Presser l'option du menu approprié, et avoir les numéros de modèle et de série et votre code postal sous la main. |
| Brazil   | <b>4004 5400</b> Capitais e Regiões Metropolitanas<br><b>* 0800 707 5454</b> Demais Localidades<br>* Somente chameas originadas de telefone fixo<br><b>WWW.LGE.COM.BR</b>   |