




# Electrolux

**Instruction book**

**Mode d'emploi**

**Manual de instrucciones**

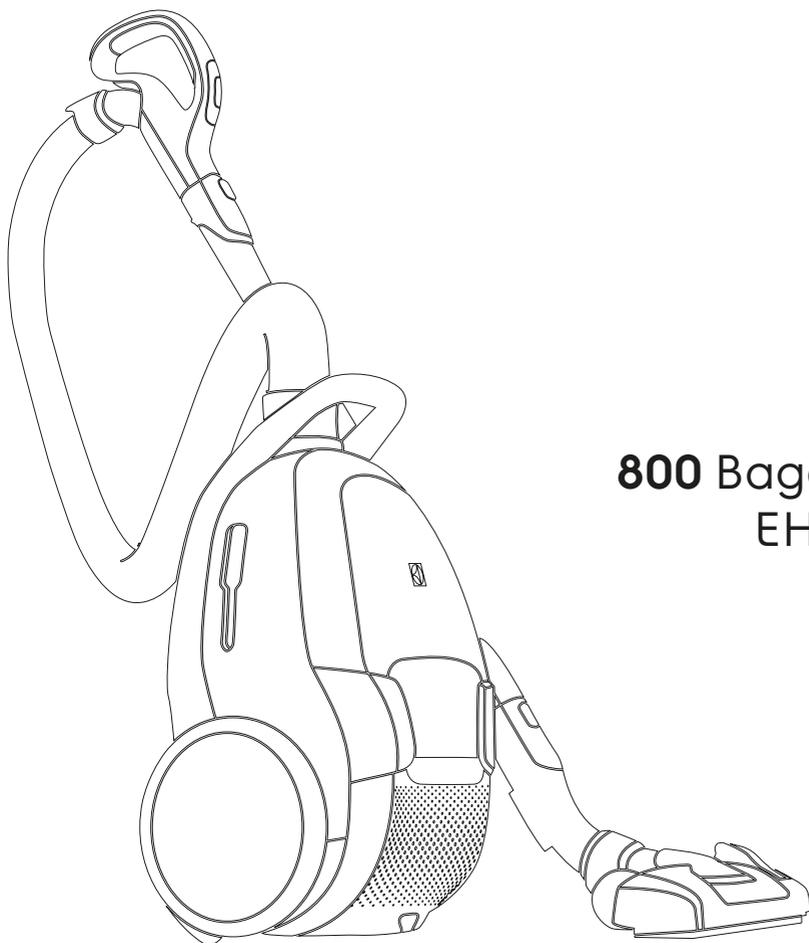

**800 Bagged Cleaner**  
**EHVS80W5AG**



# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:  
**READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.**  
Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

## **WARNING**

To reduce the risk of fire, electric shock, or injury:

- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use outdoors or on wet surfaces.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Always turn off this appliance before connecting or disconnecting motorized nozzle
- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Instructions for cleaning and user-maintenance operations recommended by the manufacturer, such as lubrication or nonlubrication, and a statement to the user that any other servicing should be performed by an authorized service representative or that the appliance has no user serviceable parts.
- Specific instructions for the proper method of storage of the cord, the total appliance, and the like, when the appliance is not in use, and for care of the cord while in use.
- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- Unplug before connecting Mini Turbo nozzle.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**SAVE THESE INSTRUCTIONS**  
**Household use only !**

Thank you for choosing Electrolux 800 bagged vacuum cleaner. Always use original accessories and spare parts to get the best results. This product is designed with the environment in mind. All plastic parts are marked for recycling purposes.

### Before starting

- Read this manual carefully.
- Check that all parts described are included.
- Pay special attention to the safety precautions!

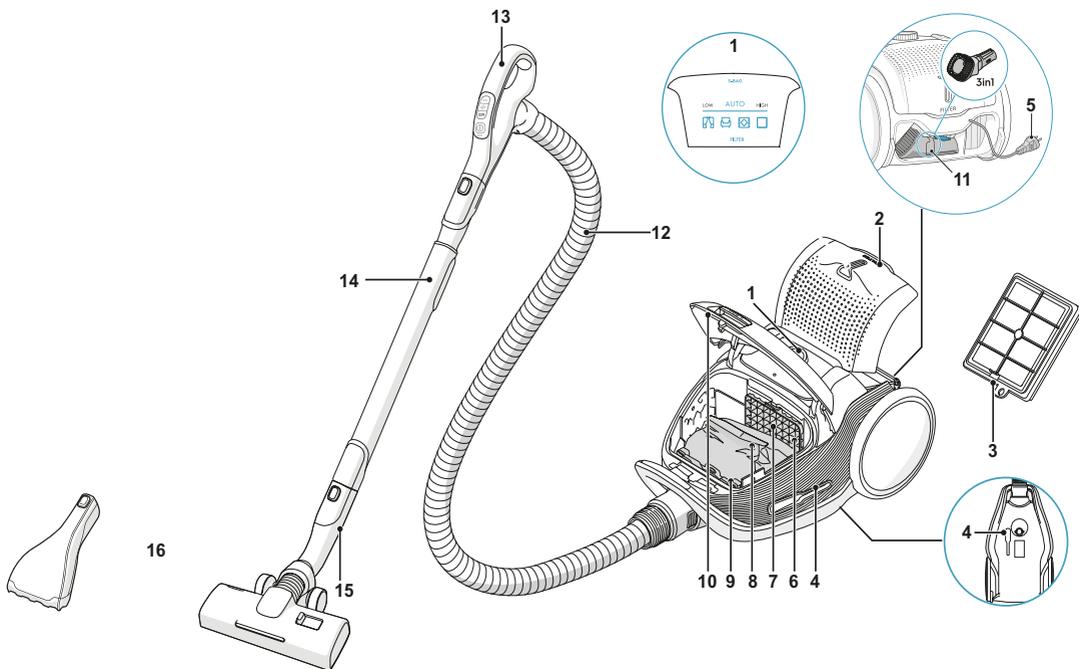


### DESCRIPTION OF 800 VACUUM CLEANER

- |                        |                              |
|------------------------|------------------------------|
| 1. Display             | 10. Dust compartment cover   |
| 2. Exhaust filter lid  | 11. 3in1 tool                |
| 3. Exhaust filter      | 12. AeroPro hose 1           |
| 4. Parking slots       | 13. AeroPro handle           |
| 5. Power cord          | 14. AeroPro telescopic tube  |
| 6. Motor filter        | 15. AllFloor Auto LED nozzle |
| 7. Motor filter holder | 16. Mini Turbo nozzle        |
| 8. S-bag®              |                              |
| 9. S-bag® holder       |                              |


## HOW TO USE THE VACUUM CLEANER




Open the dust compartment cover by pulling the S-BAG button. Check that the dust bag (s-bag) is in place.

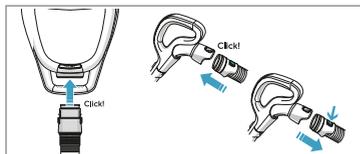

Insert the hose into the cleaner (to remove it, press the lock buttons and pull). Insert the hose into the hose handle until the lock button clicks (to release it, press the lock button and pull).

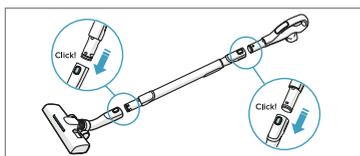


Attach the telescopic tube to the nozzle. Attach the telescopic tube to the hose handle (to remove it, press the lock button and pull).

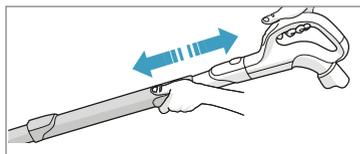


Adjust the telescopic tube by holding the lock with one hand and pulling the handle with the other hand.


## START/STOP THE VACUUM CLEANER AND ADJUST SUCTION POWER

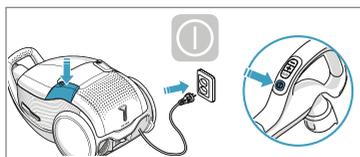

Pull out the power cord and plug it into the mains. Press the ON/OFF button to turn the cleaner on/off. Indicators light up, LOW/HIGH indicator lights up from left to right and back. Press the ON/OFF button on the remote control to turn the cleaner on/off.

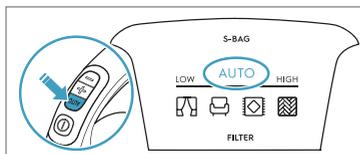


Adjust suction power: The cleaner starts in AUTO mode (automatic power regulation). AUTO indicator is illuminated on the display and LOW/HIGH indicator pulses. To regulate power manually press +/- button on handle. Press AUTO button to return to auto-function.

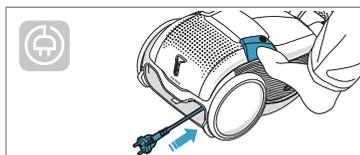


After cleaning, push the REWIND button to rewind the cable.

## PARKING POSITIONS

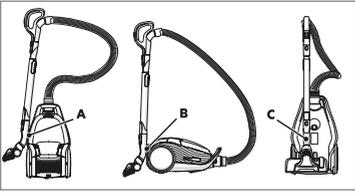


Use parking position on the side (A) or underneath (C) to carry and store the cleaner. At the back (B) when you pause (save your back).

## REPLACING THE DUSTBAG, S-BAG®

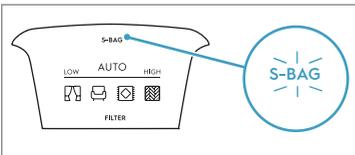


Replace the s-bag when S-BAG indicator lights up in red (green light: bag is OK, yellow light: soon time to replace bag).

*NB: Always change the s-bag when S-BAG indicator is illuminated or has red light even if the s-bag is not full (it may be blocked) and after using carpet cleaning powder. For best possible performance, use the Ultra Long Performance bag which is especially developed for your cleaner. Other synthetic s-bags can also be used. Do not use paper dust bags! [www.s-bag.com](http://www.s-bag.com)*

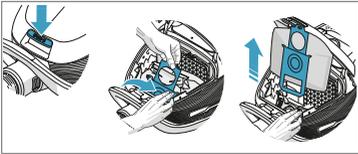


Open the dust compartment cover by pulling the S-BAG button.  
Pull the cardboard handle to close and remove the s-bag®

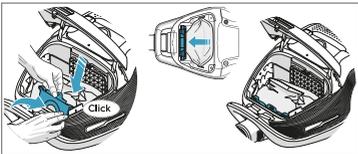


Insert a new s-bag® by pushing the cardboard straight down in its tracks. Close the lid. If the s-bag® is not properly placed or is missing, the lid will not close.

*When you start the cleaner after s-bag replacement, It takes 10 seconds before the S-BAG indicator turns off or turns green.*

## REPLACING THE FILTERS

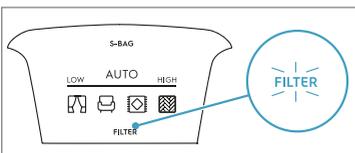


Replace/clean the filter when filter indicator lights up in red. Green light indicates that the filter is ok. It lights up briefly when you start the vacuum cleaner.

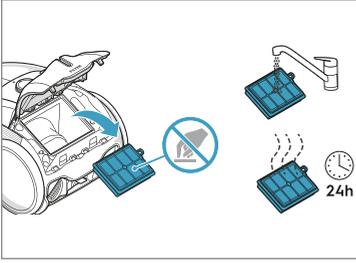

Pull the FILTER button to open the filter lid. Use original s-filters. Remove the filter and check the reference on the frame to define type. Replace with a new filter or clean it. Rinse the inside (dirty side) in lukewarm tap water. Tap the filter frame to remove the water. Repeat the process four times.

*NB: Do not use cleaning agents. Avoid touching the filter surface. Let the filter dry completely (min. 24 h in room temperature) before putting back ! Change the washable filter at least once a year or when it is very dirty or damaged. Do not remove the L-shaped foam under the filter.*

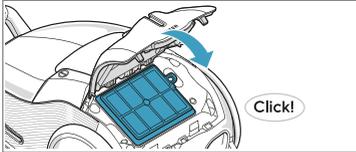


After replacing the filter, close the filter lid until it is clicked back into place. If the filter lid comes off, position the hinges at the bottom and push the filter lid until it is clicked back into place.

*NB: When you start the cleaner after filter replacement, It takes 10 seconds before the FILTER indicator turns green or turns off.*




Replace the motor filter when dirty or after every 5th s-bag. Push the filter holder down and pull it out. Exchange the filter and close the lid.

## VACUUMING WITH THE UNIVERSAL NOZZLE

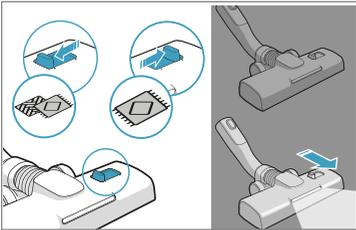


For deep cleaning on carpet, change the nozzle setting with the slider to Carpet mode. Icon illustrates the recommended floor type. Move the nozzle forward. The front light turns on automatically after a few seconds. When the nozzle is not used, the light turns off automatically after a few seconds.

## 3IN1 ACCESSORY TOOL

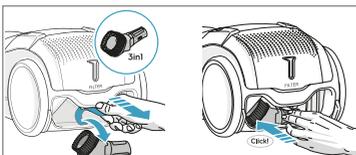


Pull the textile tab to take out 3in1 tool. The tool has 3 functions, see pictures on next page. After usage, put it back in its place.

## CLEANING THE UNIVERSAL NOZZLE

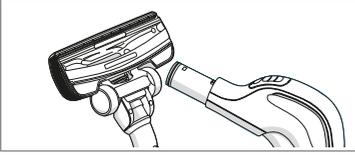


Disconnect the nozzle from the tube. Clean with the hose handle.

## CHANGING THE BATTERIES

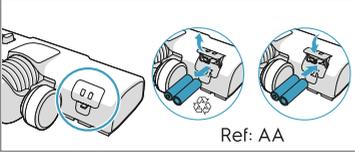

Change batteries when front lights start blinking fast. Use 2 AA batteries.

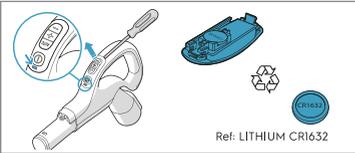

Change battery when light indicator turns red or is not responding when pressing any button. Use only batteries type LITHIUM CR1632

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery in Handle: "CR1632"; Battery in Main Nozzle: 2x "AA LR6"
- Nominal battery voltage in Handle: 3 V; in Main Nozzle: 1.5 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Remove the batteries from the product before scrapping. Follow your country's rules for collection of batteries and electrical products.

## TIPS ON HOW TO GET BEST RESULTS

### AllFloor Auto LED nozzle (with front lights)



- For all floor types, secures excellent dust pick up both on carpets and hard floors.
- Recommended to use Allfloor mode, which enables going from hard floor to carpet without adjusting the setting.
- For deep cleaning on carpet, change the nozzle setting with the slider to Carpet mode.
- Front light helps to detect dust and dirt in dark spaces (under furniture etc).

### 3in1 accessory tool



1. Dusting tool for hard surfaces (bookshelves, skirting boards etc).
2. Upholstery tool for textiles (curtains, upholstery etc).
3. Crevice tool for narrow spaces (behind radiators etc).

### Mini Turbo nozzle



- Brushes and vacuums at the same time (best pick up of hair, fibres etc).
- For textile furniture, car seats, mattresses etc.
- Brush roller is driven by the airflow of the vacuum cleaner.
- Not suitable for carpets with very deep pile and long fringes as it can get stuck in the rotating brush roll.

## TROUBLESHOOTING

PROBLEM	SOLUTION
The vacuum cleaner does not start	<ul style="list-style-type: none"><li>• Check that the cable is connected to the mains.</li><li>• Check that the plug and cable are not damaged.</li><li>• Check for a blown fuse.</li><li>• Check if the battery indicator lamp in the remote control handle responds (certain models only).</li></ul>
The s-bag® indicator light is illuminated	<ul style="list-style-type: none"><li>• Check if the s-bag® is full or blocked.</li><li>• If you have already changed the s-bag®, change the motor filter.</li></ul>
The filter indicator light is illuminated	Change, or wash (if washable), the exhaust filter.
The cleaner stops	The cleaner might be overheated: disconnect it from the mains; check if the nozzle, tube, hose or filters are blocked. Let the cleaner cool down for 30 minutes before plugging it in again. If the cleaner still does not work, contact an authorized Electrolux service centre.
Reduction of suction capacity versus normal	<ul style="list-style-type: none"><li>• Check if the s-bag is full or blocked.</li><li>• Check if the motor filter is clogged and needs changing.</li><li>• Check if nozzle is blocked and needs to be cleared.</li><li>• Check if hose is blocked by squeezing it gently. However, be careful in case the obstruction has been caused by glass or needles caught inside the hose.</li></ul> Note: The warranty does not cover any damage to the hose caused by cleaning it.
Water has been sucked into the vacuum cleaner	It will be necessary to replace the motor at an authorized Electrolux service centre. Damage to the motor caused by the penetration of water is not covered by the warranty.
<b>For any further problems, contact an authorized Electrolux service centre.</b>	

# Limited Warranty

---

Your appliance is covered by a two year limited warranty. For two years from your original date of delivery, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

## Exclusions

**This warranty does not cover the following:**

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit
4. Products purchased "as-is" are not covered by this warranty.
5. Products used in a commercial setting.
6. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
7. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
8. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
9. Service calls to repair or replace appliance light bulbs, air filters, other consumables, or knobs, handles, or other cosmetic parts.
10. Pickup and delivery costs; your appliance is designed to be repaired in the home.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during transportation or installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

## DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

## If you need service

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA, Puerto Rico and Canada. In the USA and Puerto Rico, your appliance is warranted by Electrolux Consumer Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.