

5.0 cu. ft. Top Load Washer

- 5.0 cu.ft. Capacity
- 6Motion™ Technology
- ColdWash™ Technology
- Direct Drive Motor 10-Year Limited Warranty
- ENERGY STAR® Certified
- Closet Depth
- NeverRust™ Stainless Steel Tub

KEY FEATURES



AVAILABLE COLORS



PRODUCT FEATURES

SUMMARY

Type	Top Load Washer
Capacity	5.0 cu.ft
Matching Electric Dryer	DLE7150X
Matching Gas Dryer	DLG7151X
Color	Onyx Black (X)

WASH PROGRAMS

No. of Programs	8
Wash Programs	Normal, Heavy Duty, Deep Wash, Waterproof, Bedding, Delicates, Speed Wash, Tub Clean
No. of Options	9
Options	Soak, Extra Rinse, Signal, Delay Wash, Control Lock, Water Plus, Cold Wash, Rinse+Spin, Spin Only

WASH DETAILS

No. of Wash/Rinse Temps	3
Wash/ Rinse Temps	Hot, Warm, Cold
No. of Spin Speed	3
Spin Speeds	High, Medium, Low
Water Levels	Load Sensing
No. of Soil Levels	3

APPERANCE

Control & Display	Electronic Control Panel with LED Display
Touch Buttons	Yes
Dial-A-Cycle®	Yes

FABRIC CARE FEATURES

TurboWash3D® Technology	No
TurboWash®	No
Steam Technology	No
Allergiene® Cycle	No
Smart Rinse Jet Spray System	Yes
Cold Wash Option	Yes

CONVENIENCE FEATURES

SlamProof™ Lid	Yes
True Balance® Anti-Vibration System	Yes
Smart Diagnosis	Yes
3-Tray Dispenser	Yes
LoadSense	Yes
Status Indicator(s)	Yes
End of Cycle Signal	Yes
Control Lock	Yes
Auto Suds Removal	Yes
Forced Drain System	Yes
Add Garment Indicator	Yes
Internal Water Heater	No
Leveling Legs	Yes

SMART FEATURES (ThinQ® TECHNOLOGY)

Smart Diagnosis (v3.0)	Yes
Wi-Fi	No
NFC Tag On Technology	No
Energy Monitoring	No
ThinQ Care (Remote Start/ Cycle Monitoring)	No

MOTOR

Motor Type	Inverter Direct Drive Motor
Max RPM	800
Axis	Vertical

MATERIALS AND FINISHES

NeverRust® Stainless Steel Drum	Yes
NeverRust® Stainless Steel Washplate	No (PP: Tub base+STS:Pulsator)
Cabinet	Painted Steel
All Available Colors	Onyx Black (X), Middle Black (M), White (W)
Lid	Black-Transparent Glass
Door Cover	Clear Round Cover
All Available Colors	Graphite Steel (V), White (W)

IMPELLER / AGITATOR

Impeller	Yes
Agitator	No
ENERGY	
ENERGY STAR® Certified	Yes
CEE Tier	-
IMEF	2.06
IWF	4.3

POWER SOURCE

Ratings	CSA Listed
Electrical Requirements	120 V, 60 Hz, 5 A
Type	Electric
Plug	Included
Plug Type	3 Prong

LIMITED WARRANTY


Parts and Labor	1 Year
Direct Drive Motor	10 Years
Drum	3 Years

UPC CODES

WT7150CX	195174144695
----------	--------------

WT7010CW

DIMENSION / CLEARANCES

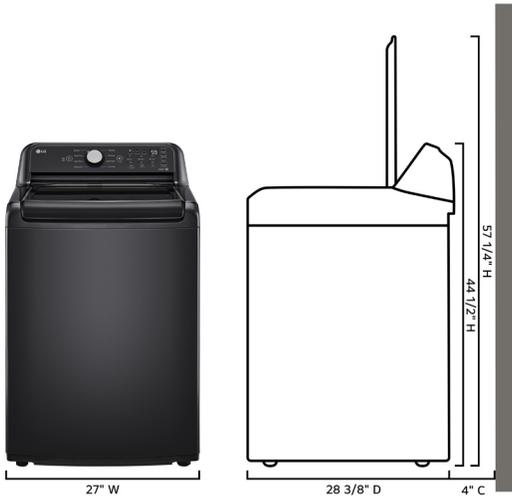


DIMENSIONS	
Product (WxHxD)	27" x 44 1/2" x 28 3/8" (57 1/4" H with Lid Open)
Carton (WxHxD)	27" (68.6cm)
Weight (Product)	44 1/2" (113cm)
Weight (Carton)	57 1/4" (145.3cm)

Floor Installation

To ensure sufficient clearance for water inlet hoses, drain hose and airflow, allow minimum clearances of at least 1 inch (2.5 cm) at the sides and 4 inches (10 cm) behind the washer. Be sure to allow for wall, door, or floor moldings that may increase the required clearances. Minimum vertical space from floor to overhead shelves, cabinets, ceilings, etc., is 58 inches (147cm).

INSTALLATION OVERVIEW

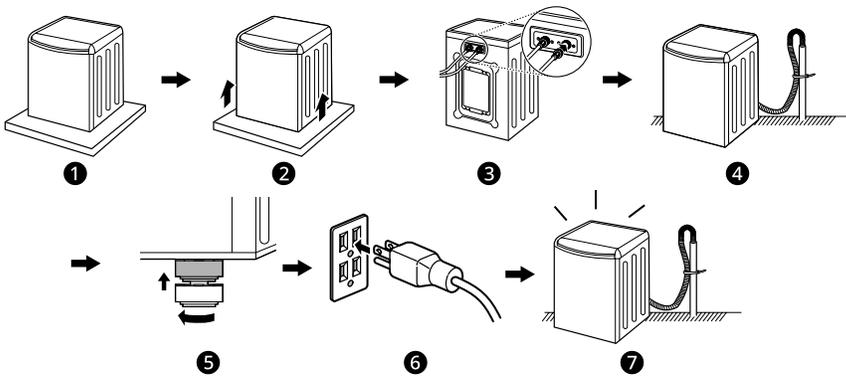

- 1 Choosing the Proper Location
- 2 Unpacking and Removing Shipping Material
- 3 Connecting the Water Inlet Hoses
- 4 Connecting the Drain Hose
- 5 Leveling the Washer
- 6 Connecting to the Power Supply
- 7 Final Installation Check

CONNECTING THE WATER INLET HOSE

- Check the fittings and seals. Inspect the threaded fitting on each hose and make sure there is a rubber seal ① in place in both ends of each hose to prevent leaking.
- Connect the water inlet hoses to the hot and cold water faucets tightly by hand and then tighten another 2/3 turn with pliers.
- Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

- After the hoses are connected, turn on the water faucets and flush out any foreign substances such as dirt, sand, or sawdust. Foreign substances can damage washer inlets and lead to leakage.
- Let the water drain into a bucket, and check the water temperature to make sure you've connected the hoses to the correct faucets.
- Attach the inlet hoses to the back of the washer. Attach the hot water inlet hose to the hot water inlet on the back of the washer. Attach the cold water inlet hose to the cold water inlet on the back of the washer.
- Tighten the fittings securely. Turn on both faucets all the way and check for leaks at both ends of the hoses. • Connect the blue hose to the cold water faucet and the red hose to the hot water faucet.

