

OWNER'S MANUAL

LED LCD MONITOR

(LED Monitor\*)

\* LG LED Monitor applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

34U62TB

# **TABLE OF CONTENTS**

LICENSE3
OPEN SOURCE SOFTWARE NOTICE INFORMATION4
ASSEMBLING AND PREPARING 4
- Supported Drivers and Software5
- Product and Button Description5
How to Use the Joystick Button
- Moving and Lifting the Monitor6
Installing on a Table
Adjusting the Stand Height
Adjusting the Angle
Using the Kensington Lock
Installing the Wall Mount Plate
Installing on the Wall

USING THE MONITOR 12
- Connecting to a PC12
HDMI Connection
DisplayPort Connection
- Connecting AV Devices13
HDMI Connection
- Connecting Peripherals13
Connecting Headphones
USER SETTINGS 14
USER SETTINGS         14           - Activating the Main Menu         14
- Activating the Main Menu14
- Activating the Main Menu14 Main Menu Features
- Activating the Main Menu14  Main Menu Features  Menu Settings
- Activating the Main Menu14  Main Menu Features  Menu Settings  Quick Settings

TROUBLESHOOTING	. 26
PRODUCT SPECIFICATION	. 29
- Factory Support Mode (Preset Mode, PC	)31
- HDMI Timing (Video)	33
- Beep Guide	34
LIMITED WARRANTY (USA)	. 38
LIMITED WARRANTY (CANAD	A)
	. 41

# **LICENSE**

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

# OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <a href="http://opensource.lge.com">http://opensource.lge.com</a>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to <code>opensource@lge.com</code>.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

# ASSEMBLING AND PREPARING

#### **A** CAUTION

- Always use genuine LG components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of unauthorized components.
- It is recommended that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there
  may be image noises.
- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.

### **NOTE**


- The components may look different from those illustrated here.
- Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or an online shopping site, or contact the retailer from where you purchased the product.
- The power cord provided may differ depending upon the region.

# **Supported Drivers and Software**

You can download and install the latest version from the LGE website (www.lq.com).

Drivers and Software	Installation Priority
Monitor Driver	Recommended
LG Switch	Recommended
Dual Controller	Optional

# **Product and Button Description**

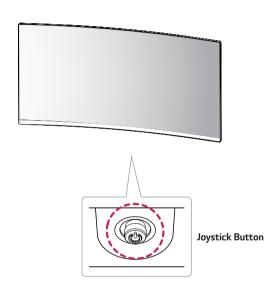

# How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right/up/down with your finger.

#### **Basic Functions**

	<b>\</b>	Power on	Press the joystick button once with your finger to turn on the monitor.
		Power off	Press and hold the joystick button once with your finger to turn off the monitor.
	<b>◄/▶</b>	Volume control	You can control the volume by moving the joystick button left/right.

 
# NOTE

• The joystick button is located at the bottom of the monitor.

# Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation, regardless of its shape or size.

- Place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all other cables.
- Hold the bottom and side of the monitor frame firmly. Do not hold the panel itself.
- When holding the monitor, the screen should face away from you to prevent it from being scratched.
- When transporting the monitor, do not expose the monitor to shock or excessive vibration.
- When moving the monitor, keep it upright and never turn the monitor on its side or tilt it sideways.






### **CAUTION**

- · Avoid touching the monitor screen as much as possible.
  - This may result in damage to the screen or some of the pixels used to create images.
- If you use the monitor panel without the stand base, its joystick button may cause
  the monitor to become unstable and fall, resulting in damage to the monitor or
  human injury. In addition, this may cause the joystick button to malfunction.

# Installing on a Table

• Lift the monitor and place it on the table in an upright position. Place the monitor at least 100 mm (3.94 inches) away from the wall to ensure sufficient ventilation.

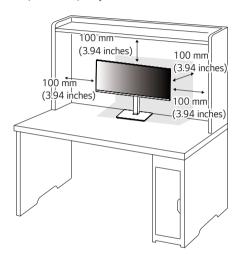


# **A** CAUTION

- Unplug the power cord before moving or installing the monitor. There is risk of electric shock.
- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

### Adjusting the Stand Height

 - 1 Place the monitor mounted on the stand base in an upright position.
- 2 Handle the monitor with both hands for safety.




### **WARNING**

• When adjusting the screen height, do not place your hand on the stand body to avoid injury to your fingers.

# Adjusting the Angle


- 1 Place the monitor mounted on the stand base in an upright position.
- 2 Adjust the angle of the screen.

The angle of the screen can be adjusted forward or backward from -5° to 21° for a comfortable viewing experience.

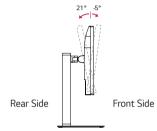


# **WARNING**

 - To avoid injury to the fingers when adjusting the screen, do not hold the lower part
  of the monitor's frame as illustrated below.
- Be careful not to touch or press the screen area when adjusting the angle of the monitor.



### **NOTE**

  The left or right side of the monitor head can be slightly rotated up or down (up to 3°). Adjust the horizontal level of the monitor head.




# Using the Kensington Lock

The connector for the Kensington security system is located at the bottom of the monitor.

For more information on installation and usage, refer to the Kensington lock owner's manual or visit the website at <a href="http://www.kensington.com">http://www.kensington.com</a>.

Connect the monitor to a table using the Kensington security system cable.

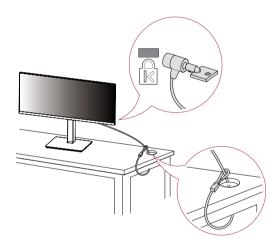



 The Kensington security system is optional. You can obtain optional accessories from most electronics stores.

### Installing the Wall Mount Plate


This monitor meets the specifications for the wall mount plate or other compatible devices.

# **NOTE**

- · The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to apply too much force while mounting the wall mount plate as it may cause damage to the screen.
- Remove the stand before installing the monitor on a wall mount by performing the stand attachment in reverse.

### Installing on the Wall

Install the monitor at least 100 mm (3.94 inches) away from the wall and leave about 100 mm (3.94 inches) of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Alternatively, please refer to the manual for how to install and set up a tilting wall mounting bracket.

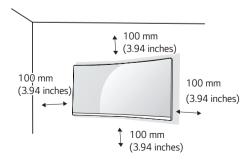

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor.

Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

- 1 If you use screws longer than the standard length, it may damage the inside of the product.
- 2 A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents relating to the use of nonstandard screws.


Wall Mount (mm)	100 x 100
Standard screw	M4 x L10
Number of screws	4
Wall Mount Plate (Optional)	LSW 149

### **NOTE**

- Use the screws specified by VESA standards.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. You can obtain optional accessories from your local dealer.
- The length of the screw may differ for each wall mounting bracket. Be sure to use the proper length.
- For more information, please refer to the user manual for the wall mounting bracket.

### **CAUTION**

- Unplug the power cord before moving or installing the monitor to avoid electric shock
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead to injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to VESA standards.
   Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- When measured from the back of the monitor, the length of each installed screw must be 8 mm (0.3 inches) or less.

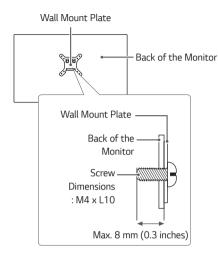

# **USING THE MONITOR**

Illustrations in this manual may differ from the actual product.
 Press the joystick button, go to **Settings** — **Input**, and then select the input option.

### **A** CAUTION

- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display a still image on the screen for a prolonged time. This may cause image retention. Use a screensaver if possible.

### **NOTE**

- When connecting the power cord to the outlet, use a grounded (3-hole) power strip or a grounded power outlet.
- The monitor may flicker when turned on in an area where the temperature is low.
   This is normal.
- · Sometimes red, green, or blue spots may appear on the screen. This is normal.

# Connecting to a PC

- · This monitor supports the \*Plug and Play feature.
- \* Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

#### **HDMI Connection**

Transmits digital video and audio signals from your PC to the monitor.

### **A** CAUTION

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
- High-Speed HDMI®/™ cable
- High-Speed HDMI®/™ cable with Ethernet

### **DisplayPort Connection**

Transmits digital video and audio signals from your PC to the monitor.

# NOTE

- There may be no video or audio output depending on the DP (DisplayPort) version of the PC.
- If you are using a Mini DisplayPort output graphics card, use a Mini DP to DP (Mini DisplayPort to DisplayPort) cable or gender that supports DisplayPort1.4. (sold separately)

# **Connecting AV Devices**

#### **HDMI Connection**

HDMI transmits digital video and audio signals from your AV device to the monitor.

# NOTE

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- · Recommended HDMI cable types
  - High-Speed HDMI®/™ cable
- High-Speed HDMI®/™ cable with Ethernet

# **Connecting Peripherals**

### **Connecting Headphones**

Connect peripherals to the monitor via the headphones port.



- Peripheral devices are sold separately.
- If you use angled earphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight earphones.







Straight (Recommend)

 Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.


# **USER SETTINGS**



- Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.
- When Beep Guide is activated, pressing the joystick button will take you to Settings right away.


# **Activating the Main Menu**

- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down (▲ / ▼) and left/right (▼/ ►) to set the options.
- 3 Press the joystick button once more to exit the main menu.

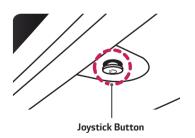

Button		Menu Status	Description
	Main m	enu disabled	Enables the main menu.
	Main menu enabled		Exits the main menu. (Holding down the button to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.)
		Main menu disabled	Adjusts the monitor volume level.
		Main menu enabled	Enters the <b>Input</b> features.
	<b> </b>	Main menu disabled	Adjusts the monitor volume level.
		Main menu enabled	Enters the <b>Settings</b> feature.
		Main menu disabled	Enters the <b>Accessibility</b> menu.
		Main menu enabled	Turns off the monitor.
		Main menu disabled	Enters the <b>Accessibility</b> menu.
	•	Main menu enabled	Enters the <b>Picture Mode</b> feature.

#### Main Menu Features

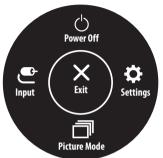

Main Menu	Description			
Input	input mode.			
Power Off	Turns off the monitor.			
Settings	onfigures the screen settings.			
Picture Mode	ets the picture mode.			
Exit	Exits the main menu.			

# Menu Settings

- 1 To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Settings**.
- 2 Move the joystick up/down and left/right to set the options.
- 3 To return to the upper menu or set other menu items, move the joystick to  $\blacktriangleleft$  or pressing (6) it.
- 4 If you want to exit the OSD menu, move the joystick to **◄**until you exit.









**Quick Settings** 

Input

Picture

General



- 👛: On
- 🗀: Off

# Quick Settings

Settings > Quick Settings	Description			
Brightness	Adjusts the brightness of the	ljusts the brightness of the screen.		
Contrast	Adjusts the contrast of the s	ljusts the contrast of the screen.		
	Adjusts the volume.	ijusts the volume.		
Volume	<ul> <li>NOTE</li> <li>You can adjust Mute / Unmute by moving the joystick button to ▼ in the Volume menu.</li> </ul>			
	Set your own color temperature.  Custom The user can adjust it to red, green, or blue by customization.			
Calan Tanan	Warm	Sets the screen color to a reddish tone.		
Color Temp	Medium	Sets the screen color to between a red and blue tone.		
	Cool	Sets the screen color to a bluish tone.		
	Manual	The user can fine-tune the color temperature.		

# Input

Settings > Input	Description			
Input List	Selects the input mode.	elects the input mode.		
	When automatic input switc	When automatic input switch is set to <b>On</b> , display will automatically switch to new input when connected.		
Auto Input Switch	On	Enables Auto Input Switch.		
	Off	Disables Auto Input Switch.		
	Adjusts the aspect ratio of the screen.			
Aspest Patie	Full Wide	Displays the video in widescreen, regardless of the video signal input.		
Aspect Ratio	16:9	Displays the video in 16:9.		
	4:3	Displays the video in 4:3.		
PBP	Displays the screens of two input modes on one monitor.			
Main/Sub Screen Change	Toggles between the main screen and sub screen in <b>PBP</b> mode.			
Main/Sub Sound Change	Toggles between the audio of the main screen and sub screen in <b>PBP</b> mode.			

# [PBP]

Settings > Input	Description				
	Displays the screens of two input modes on one monitor.				
	Main Input List	Diago refer to the tal	Diago vafor to the table below for persible DDD combinations		
	Sub Input List	Please refer to the tai	Please refer to the table below for possible PBP combinations.		
Input List	DDD C	nnection	Sub Screen (Right)		
	PBP CO	milection	НОМІ	DisplayPort	
	Main Carean (Laft)	HDMI	-	0	
	Main Screen (Left)	DisplayPort	0	-	
	Adjusts the aspect ratio of the screen.				
Aspect Ratio	Main Aspect Ratio	Full Wide	Displays the video to fit the PBP screen, regardless of the video signal input.		
		Original	Displays the video in the aspect ratio of the video signal input on the PBP screen.		
	Sub Aspect Ratio	Full Wide	Displays the video to fit the PBP screen, regardless of the video signal input.		
		Original	Displays the video in the aspect ratio of the video signal input on the PBP screen.		
РВР	You can disable the feature that displays images from two input modes simultaneously on one monitor.				
Main/Sub Screen Change	Toggles between the main screen and sub screen in PBP mode.				
Main/Sub Sound Change	Toggles between the audio of the main screen and sub screen in <b>PBP</b> mode.				

# Picture



• The **Picture Mode** that can be set depends on the Input signal.

# [Picture Mode on SDR (Non-HDR) signal]

Settings > Picture	Description			
	Custom	Allows the user to adjust each element.		
	Vivid	Heightens contrast, brightness and sharpness to display vivid images.		
	HDR Effect	Optimizes the screen for high dynamic range.		
	Reader	Optimizes the screen for reading documents. You can brighten the screen in the OSD menu.		
Picture Mode	Cinema	Optimizes the screen to improve the visual effects of a video.		
	FPS	This mode is optimized for FPS games.		
	RTS	This mode is optimized for RTS Game.		
	Color Weakness	This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.		

# [Picture Mode on HDR signal]

Settings > Picture	Description		
	Custom	Allows the user to adjust each element.	
	Vivid	Optimized the screen for HDR vivid colors.	
	Cinema	Optimized the screen for HDR video.	
	FPS	This mode is optimized for FPS games.It is suitable for very dark FPS games.	
Picture Mode	RTS	This mode is optimized for RTS Game.	
	<b>NOTE</b>		
	<ul> <li>HDR content may not display correctly depending on Windows 10/ macOS settings, please check HDR On/Off settings in Windows</li> <li>When the HDR function is turned on, the characters or picture quality may be poor according to Graphic card performance.</li> <li>While the HDR function is on, screen flickering or cracking may occur when changing the monitor input or power on/off according to Graphic card performance.</li> </ul>		

Settings > Picture	Description		
	Brightness	Adjusts the brightness of the screen.	
	Contrast	Adjusts the co	ontrast of the screen.
	Sharpness	Adjusts the sh	narpness of the screen.
		High	Optimizes the screen for crystal clear images. Best for high-definition video or games.
	SUPER RESOLUTION+	Middle	Optimizes the screen for comfortable viewing, with images at the middle level between the low and high modes. Best for UCC or SD videos.
		Low	Optimizes the screen for smooth and natural images. Best for still images or images with less movement.
Picture Adjust		Off	Displays in the most common setting. Disables <b>SUPER RESOLUTION+</b> .
		• NOTE	
			is a function to increase the sharpness of low resolution pictures, it is not recommended to use for normal text or for desktop icons. Doing so may result in unnecessarily high sharpness.
		Sets the offset level.	
		Offset: as a reference for a video signal, this is the darkest color the monitor can display.	
		High	Keeps the current contrast ratio of the screen.
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.
	DFC	Adjusts the brightness automatically according to the screen.	

Settings > Picture	Description		
Game Adjust	Response Time	For a normal e	se time for displayed pictures based on the speed of the screen. environment, it is recommended that you use Fast. ving picture, it is recommended that you use Faster.  Mode is selected, Motion Blur may occur depending on the content.  Sets the response time to Faster.
		Fast	Sets the response time to <b>Fast</b> .
		Normal	Sets the response time to <b>Normal</b> .
		IVOTIIIAL	Sets the response time to <b>Normal</b> .
		Off	Disables the feature.
	Black Stabilizer		ol the black contrast to have better visibility in dark scenes. v distinguish objects on dark game screens.

Settings > Picture	Description		
	Gamma	Mode 1, Mode 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.
		Mode 4	If you do not need to adjust the gamma settings, select <b>Mode 4</b> .
		Set your own	color temperature.
		Custom	The user can adjust it to red, green, or blue by customization.
	Color Temp	Warm	Sets the screen color to a reddish tone.
		Medium	Sets the screen color to between a red and blue tone.
Color Adjust		Cool	Sets the screen color to a bluish tone.
		Manual	The user can fine-tune the color temperature.
	Red/Green/Blue	You can custo	mize the picture color using red, green, and blue colors.
	Six Color		er requirements for colors by adjusting the hue and saturation of the six colors (red, green, blue, a, and yellow) and then saving the settings.
		Hue	Adjusts the tone of the screen colors.
		Saturation	Adjusts the saturation of the screen colors. The lower the value, the less saturated and brighter the colors become. The higher the value, the more saturated and darker the colors become.
Picture Reset	Do you want to reset your picture settings?	No	Cancel the select.
		Yes	Returns to the default settings.

# General

Settings > General	Description			
Language	Sets the menu screen to the desired language.			
	Conserve energy by using lu	Conserve energy by using luminance compensation algorithm.		
	High	Saves energy using the high-efficiency <b>SMART ENERGY SAVING</b> feature.		
	Low	Saves energy using the low-efficiency <b>SMART ENERGY SAVING</b> feature.		
SMART ENERGY SAVING	Off	Disables the feature.		
	<b>● NOTE</b>			
	The value of energy saving	g data may differ depending on panel and panel suppliers.		
	• If you select the option of <b>SMART ENERGY SAVING</b> is <b>High</b> or <b>Low</b> , monitor luminance become lower or higher depend on source.			
	When Deep sleep mode is e	enabled, power consumption is minimized while the monitor is in standby mode.		
Deep Sleep Mode	On	Enables Deep sleep Mode.		
	Off	Disables Deep sleep Mode.		
Power LED	On The power LED turns on automatically.			
Power LED	Off The power LED turns off.			
Automatic Standby	Feature that automatically turns off the monitor when there is no movement on the screen for a period of time. You can set a timer for the auto-off function.  (8 H, 6 H, 4 H, and Off)			
Input Compatibility Version	Set Input Compatibility Version to the same version as the connected external device.  - In case of DisplayPort input, set to 1.4 or over to use the HDR function.  - In case of HDMI input, set to 2.0 or over to use the HDR function.			

Settings > General	Description			
	This feature lets you set the sound generated from Buzzer when your monitor powers on.			
Buzzer	On	Enables your monitor's <b>Buzzer</b> .		
	Off	Disables your monitor's <b>Buzzer</b> .		
	This feature disables the co	nfiguration and adju	stment of menus.	
	On	Enables OSD Lock.		
OSD Lock	Off	Disables OSD Lock.		
OSD LOCK	● NOTE			
	All features are disabled except Brightness, Contrast, Volume, Input List, Auto Input Switch, Aspect Ratio, PBP, OSD Lock, Open Source Software License and Information.			
Information	The following display information will be shown; Total Power On Time, Resolution.			
Open Source Software License	You can check the Open Source Software notice information.			
Reset to Initial Settings	Do you want to reset	No	Cancel the select.	
you	your settings?	Yes	Returns to the default settings.	

# **TROUBLESHOOTING**

Nothing is displayed on the screen.	
Is the monitor's power cord plugged in?	Check if the power cord is correctly plugged into the power outlet.
Is the power LED on?	Check the power cable connection and press the power button.
Is the power on and the power LED displaying white?	Check that the connected input is enabled (Settings > Input).
Is the power LED blinking?	If the monitor is in sleep mode, move the mouse, or press any key on the keyboard, to switch the display on.     Check if the computer is turned on.
Is the The screen is not currently set to the recommended resolution. If you have no video or the screen flickers, see the troubleshooting guide in the product owner's manual. message being displayed?	This occurs when signals transferred from the PC (graphics card) are out of the recommended horizontal or vertical frequency range of the monitor. Please see the Product Specification section of this manual to set the appropriate frequency.
Is the <b>No Signal</b> message being displayed?	This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.
Have you installed the display driver?	Be sure to install the display driver from our web site: http://www.lg.com.  Make sure to check if the graphics card supports Plug and Play function.

Some features are disabled.	
Are some functions not available when	The OSD is locked. Go to <b>Settings</b> > <b>General</b> and set <b>OSD Lock</b> to <b>Off</b> .
you press the Menu button?	

The screen retains an image.	
Does image sticking occur even when the	Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image.
monitor is turned off?	To extend the lifetime of the monitor, use a screensaver.

Screen display is unstable and shaky. / Images displayed on the monitor leave shadow trails.		
Did you select the appropriate resolution?	n? • If the selected resolution is HDMI 1080i 60/50 Hz (interlaced), the screen may be flickering. Change the resolution to 1080p or	
	the recommended resolution.	

## NOTE

- Vertical Frequency: In order to display an image, the screen must be refreshed dozens of times per second, like a fluorescent lamp. The number of times the screen is refreshed per second is called vertical frequency, or refresh rate, and is represented by Hz.
- Horizontal Frequency: The time it takes to display one horizontal line is called the horizontal cycle. If 1 is divided by the horizontal interval, the result is the number of horizontal lines displayed per second. This is called horizontal frequency and is represented by kHz.
- Check if the graphics card's resolution or frequency is within the range allowed by the monitor and set it to the recommended (optimal) resolution **Control Panel** > **Display** > **Menu** in Windows. (The settings may differ depending on the operating system (OS) you use.)
- Not setting the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area or misalignment of the display.
- The setting methods may be different depending on the computer or operating system, and some resolutions may not be available depending on the performance of the graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
- Some graphics cards may not support 1920 x 1080 resolution. If the resolution cannot be displayed, contact the manufacturer of your graphics card.

The display color is abnormal.	The display color is abnormal.		
Does the display appear discolored (16 colors)?	• Set the color to 24 bit (true color) or higher. In Windows, go to <b>Control Panel</b> > <b>Display</b> > <b>Menu</b> > <b>Color Quality</b> . (The settings may differ depending on the operating system (OS) you use.)		
Does the display color appear unstable or monochrome?	Check if the signal cable is connected properly. Reconnect the cable or reinsert the PC's graphics card.		
Are there spots on the screen?	When using the monitor, pixilated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LCD screen. It is not an error, nor is it related to the monitor's performance.		

No sound from the headphone port.	
Are images displayed using DP (DisplayPort) or HDMI input without sound?	<ul> <li>Make sure that the headphone port connections are made properly.</li> <li>Try increasing the volume with the joystick.</li> <li>Set the audio output of the PC to the monitor you are using. On Microsoft Windows, go to Control Panel &gt; Hardware and Sound &gt; Sound &gt; set the Monitor as default device. (The settings may differ depending on the operating system (OS) you use.)</li> </ul>

# **PRODUCT SPECIFICATION**

LCD Screen	Color Depth	8-bit / 10-bit color is supp	ported.	
Resolution	Max Resolution	3440 x 1440 @ 100 Hz (HDMI)		
		3440 x 1440 @ 120 Hz (	(DP)	
	Recommended Resolution	3440 x 1440 @ 100 Hz (	(HDMI)	
		3440 x 1440 @ 120 Hz (	(DP)	
Power Sources	Power Rating	19 V <del></del> 2.0 A		
AC/DC Adapter	ADS-45SQ-19-3 19040E, manufactured b	y SHENZHEN HONOR ELEC	TRONIC	
	ADS-45FSQ-19 19040EPG-1, manufactur	ed by SHENZHEN HONOR E	ELECTRONIC	
	ADS-45FSQ-19 19040EPK-1, manufacture	ed by SHENZHEN HONOR E	ELECTRONIC	
	ADS-45FSQ-19 19040EPCU-1, manufactu	ured by SHENZHEN HONOR	ELECTRONIC	
	ADS-45FSQ-19 19040EPBR-1, manufactu	-45FSQ-19 19040EPBR-1, manufactured by SHENZHEN HONOR ELECTRONIC		
	ADS-45FSQ-19A 19040EPB-1, manufactu	B-1, manufactured by SHENZHEN HONOR ELECTRONIC		
	AD10530LF, manufactured by PI Electronic	iics (H.K.) Ltd.		
	AD2137S20, manufactured by PI Electronic	ics (H.K.) Ltd.		
	AD2137620, manufactured by PI Electroni	tronics (H.K.) Ltd.		
	AD2182R20, manufactured by PI Electroni	nics (H.K.) Ltd.		
	Output: 19 V 2.1 A			
Environmental Conditions	Operating Conditions	Temperature	0 °C to 40 °C (32 °F to 104 °F)	
		Humidity	Less than 80 %	
	Storing Conditions	Temperature	-20 °C to 60 °C (-4 °F to 140 °F)	
		Humidity	Less than 85 %	

Dimensions	Monitor Size (Width x Height x Depth)		
	With Stand 809.0 x 533.8 x 230.0 (mm)		
		31.8 x 21.0 x 9.0 (inches)	
	Without Stand	809.0 x 358.9 x 91.5 (mm)	
		31.8 x 14.1 x 3.6 (inches)	
Weight (Without Packaging)	With Stand	7.7 kg (16.9 lbs)	
	Without Stand	4.9 kg (10.8 lbs)	

Specifications are subject to change without notice.

The symbol ~ means alternating current, and the symbol \_\_\_ means direct current.

The Power Consumption level can be different by operating condition and monitor setting.

# Factory Support Mode (Preset Mode, PC)

### HDMI

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
640 x 480	31.469	59.940	-/-	
800 x 600	37.879	60.317	+/+	
1024 x 768	48.363	60.004	-/-	
1920 x 1080	67.500	60.000	+/+	
3440 x 1440	43.764	29.955	+/-	
1720 x 1440	88.739	59.919	+/-	
3440 x 1440	73.631	49.953	+/-	Recommended Timing - Input Compatibility Version : 1.4
3440 x 1440	127.351	84.957	+/-	
3440 x 1440	150.996	99.997	+/-	Recommended Timing - Input Compatibility Version : 2.0

#### DP

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
640 x 480	31.469	59.940	-/-	
800 x 600	37.879	60.317	+/+	
1024 x 768	48.363	60.004	-/-	
1920 x 1080	67.500	60.000	+/+	
1720 x 1440	88.739	59.919	+/-	
3440 x 1440	88.841	59.987	+/-	
3440 x 1440	127.351	84.957	+/-	
3440 x 1440	150.996	99.997	+/-	Recommended Timing - Input Compatibility Version : 1.2
3440 x 1440	182.986	119.991	+/-	Recommended Timing - Input Compatibility Version : 1.4

If you use an input timing that is outside the supported frequency, you may experience poor response speed or image quality.

# **HDMI Timing (Video)**

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Remarks
480P	31.5	60	
720P	45.0	60	
1080P	67.5	60	
2160P	135.0	60	

# **Beep Guide**

Menu	Location
Quick Settings	1
Quick Settings - Brightness	11
Quick Settings - Brightness	1 1 1 Slider
Quick Settings - Contrast	12
Quick Settings - Contrast	1 2 1 Slider
Quick Settings - Volume	13
Quick Settings - Volume	1 3 1 Slider
Quick Settings - Color Temp	1 4
Quick Settings - Color Temp - Custom	141
Quick Settings - Color Temp - Warm	142
Quick Settings - Color Temp - Medium	143
Quick Settings - Color Temp - Cool	144
Quick Settings - Color Temp - Manual	1 4 5
Quick Settings - Color Temp - Manual	1 4 5 1 Slider
Input (PBP Off)	2
Input (PBP Off) - Input List	21
Input (PBP Off) - Input List - HDMI	211
Input (PBP Off) - Input List - DisplayPort	212
Input (PBP Off) - Auto Input Switch	2 2 Toggle
Input (PBP Off) - Aspect Ratio	23
Input (PBP Off) - Aspect Ratio - Full Wide	2 3 1
Input (PBP Off) - Aspect Ratio - 16:9	232

Menu	Location
Input (PBP Off) - Aspect Ratio - 4:3	233
Input (PBP Off) - PBP	2 4
Input (PBP Off) - PBP - Off	2 4 1
Input (PBP Off) - PBP - PBP(1:1)	2 4 2
Input (PBP Off) - Main/Sub Screen Change	2 5
Input (PBP Off) - Main/Sub Sound Change	2 6
Input (PBP On)	2
Input (PBP On) - Input List	2 1
Input (PBP On) - Input List - Main Input	211
Input (PBP On) - Input List - Main Input - HDMI	2111
Input (PBP On) - Input List - Main Input - DisplayPort	2112
Input (PBP On) - Input List - Sub Input	212
Input (PBP On) - Input List - Sub Input - HDMI	2121
Input (PBP On) - Input List - Sub Input - DisplayPort	2122
Input (PBP On) - Auto Input Switch	2 2
Input (PBP On) - Aspect Ratio	23
Input (PBP On) - Aspect Ratio - Main Aspect Ratio	231
Input (PBP On) - Aspect Ratio - Main Aspect Ratio - Full Wide	2311

Menu	Location
Input (PBP On) - Aspect Ratio - Main Aspect Ratio - Original	2312
Input (PBP On) - Aspect Ratio - Sub Aspect Ratio	232
Input (PBP On) - Aspect Ratio - Sub Aspect Ratio - Full Wide	2321
Input (PBP On) - Aspect Ratio - Sub Aspect Ratio - Original	2322
Input (PBP On) - PBP	2 4
Input (PBP On) - PBP - Off	2 4 1
Input (PBP On) - PBP - Off - HDMI	2411
Input (PBP On) - PBP - Off - DisplayPort	2412
Input (PBP On) - PBP - On	2 4 2
Input (PBP On) - PBP - On - HDMI	2421
Input (PBP On) - PBP - On - DisplayPort	2422
Input (PBP On) - Main/Sub Screen Change - On	25
Input (PBP On) - Main/Sub Sound Change - On	26
Picture	3
Picture - Picture Mode	3 1
Picture - Picture Mode - Custom	311
Picture - Picture Mode - Vivid	312
Picture - Picture Mode - HDR Effect	313
Picture - Picture Mode - Reader	314

Menu	Location
Picture - Picture Mode - Cinema	315
Picture - Picture Mode - FPS	316
Picture - Picture Mode - RTS	317
Picture - Picture Mode - Color Weakness	318
Picture - Picture Adjust	3 2
Picture - Picture Adjust - Brightness	3 2 1
Picture - Picture Adjust - Brightness	3 2 1 1 Slider
Picture - Picture Adjust - Contrast	322
Picture - Picture Adjust - Contrast	3 2 2 1 Slider
Picture - Picture Adjust - Sharpness	323
Picture - Picture Adjust - Sharpness	3 2 3 1 Slider
Picture - Picture Adjust - SUPER RESOLUTION+	3 2 4
Picture - Picture Adjust - SUPER RESOLUTION+ - High	3 2 4 1
Picture - Picture Adjust - SUPER RESOLUTION+ - Middle	3242
Picture - Picture Adjust - SUPER RESOLUTION+ - Low	3243
Picture - Picture Adjust - SUPER RESOLUTION+ - Off	3 2 4 4
Picture - Picture Adjust - Black Level	3 2 5
Picture - Picture Adjust - Black Level - High	3 2 5 1

Menu	Location
	Location
Picture - Picture Adjust - Black Level - Low	3 2 5 2
Picture - Picture Adjust - DFC	3 2 6 Toggle
Picture - Game Adjust	3 3
Picture - Game Adjust - Response Time	331
Picture - Game Adjust - Response Time - Faster	3311
Picture - Game Adjust - Response Time - Fast	3312
Picture - Game Adjust - Response Time - Normal	3313
Picture - Game Adjust - Response Time - Off	3314
Picture - Game Adjust - Black Stabilizer	3321
Picture - Game Adjust - Black Stabilizer	3321
Ficture - Garrie Aujust - Black Stabilizer	Slider
Picture - Color Adjust	3 4
Picture - Color Adjust - Gamma	3 4 1
Picture - Color Adjust - Gamma - Mode 1	3411
Picture - Color Adjust - Gamma - Mode 2	3412
Picture - Color Adjust - Gamma - Mode 3	3413
Picture - Color Adjust - Gamma - Mode 4	3414
Picture - Color Adjust - Color Temp	3 4 2
Picture - Color Adjust - Color Temp - Custom	3 4 2 1

Menu	Location
Picture - Color Adjust - Color Temp - Warm	3 4 2 2
Picture - Color Adjust - Color Temp - Medium	3423
Picture - Color Adjust - Color Temp - Cool	3 4 2 4
Picture - Color Adjust - Color Temp - Manual	3 4 2 5
Picture - Color Adjust - Color Temp - Manual	3 4 2 5 1 Slider
Picture - Color Adjust - Red	3 4 3
Picture - Color Adjust - Red	3 4 3 1 Slider
Picture - Color Adjust - Green	3 4 4
Picture - Color Adjust - Green	3 4 4 1 Slider
Picture - Color Adjust - Blue	3 4 5
Picture - Color Adjust - Blue	3 4 5 1 Slider
Picture - Color Adjust - Six Color	3 4 6
Picture - Color Adjust - Six Color - Red Hue	3 4 6 1
Picture - Color Adjust - Six Color - Red Hue	3 4 6 1 1 Slider
Picture - Color Adjust - Six Color - Red Saturation	3 4 6 2
Picture - Color Adjust - Six Color - Red Saturation	3 4 6 2 1 Slider

Menu	Location
Picture - Color Adjust - Six Color - Green Hue	3463
Picture - Color Adjust - Six Color - Green Hue	3 4 6 3 1 Slider
Picture - Color Adjust - Six Color - Green Saturation	3 4 6 4
Picture - Color Adjust - Six Color - Green Saturation	3 4 6 4 1 Slider
Picture - Color Adjust - Six Color - Blue Hue	3465
Picture - Color Adjust - Six Color - Blue Hue	3 4 6 5 1 Slider
Picture - Color Adjust - Six Color - Blue Saturation	3466
Picture - Color Adjust - Six Color - Blue Saturation	3 4 6 6 1 Slider
Picture - Color Adjust - Six Color - Cyan Hue	3467
Picture - Color Adjust - Six Color - Cyan Hue	3 4 6 7 1 Slider
Picture - Color Adjust - Six Color - Cyan Saturation	3468
Picture - Color Adjust - Six Color - Cyan Saturation	3 4 6 8 1 Slider
Picture - Color Adjust - Six Color - Magenta Hue	3469
Picture - Color Adjust - Six Color - Magenta Hue	3 4 6 9 1 Slider

Menu	Location
Picture - Color Adjust - Six Color - Magenta Saturation	3 4 6 10
Picture - Color Adjust - Six Color - Magenta Saturation	3 4 6 10 1 Slider
Picture - Color Adjust - Six Color - Yellow Hue	3 4 6 11
Picture - Color Adjust - Six Color - Yellow Hue	3 4 6 11 1 Slider
Picture - Color Adjust - Six Color - Yellow Saturation	3 4 6 12
Picture - Color Adjust - Six Color - Yellow Saturation	3 4 6 12 1 Slider
Picture - Picture Reset	3 5
Picture - Picture Reset - No	3 5 1
Picture - Picture Reset - Yes	352
General	4
General - Language	4 1
General - Language - English	411
General - Language - German	412
General - Language - French	413
General - Language - Spanish	414
General - Language - Italian	415
General - Language - Swedish	416
General - Language - Finnish	417
General - Language - Portuguese	418
General - Language - Portuguese (Brazil)	419
General - Language - Polish	4 1 10

Menu	Location
General - Language - Russian	4 1 11
General - Language - Turkish	4 1 12
General - Language - Ukrainian	4 1 13
General - Language - Chinese	4 1 14
General - Language - Traditional Chinese	4 1 15
General - Language - Japanese	4 1 16
General - Language - Korean	4 1 17
General- Language -Arabic	4 1 18
General - SMART ENERGY SAVING	4 2
General - SMART ENERGY SAVING - High	421
General - SMART ENERGY SAVING - Low	422
General - SMART ENERGY SAVING - Off	423
General - Deep Sleep Mode	4 3 Toggle
General - Power LED	4 4 Toggle
General - Automatic Standby	4 5
General - Automatic Standby - 8H	451
General - Automatic Standby - 6H	452
General - Automatic Standby - 4H	453
General - Automatic Standby - Off	454
General - Input Compatibility Version	4 6
General - Input Compatibility Version - 2.0/1.4	461
General - Input Compatibility Version - 1.4/1.2	462

Menu	Location
General - Buzzer	4 7 Toggle
General - OSD Lock	4 8 Toggle
General - Information	4 9
General - Information	491
General - Open Source Software License	4 10
General - Open Source Software License	4 10 1
General - Reset to Initial Setting	4 11
General - Reset to Initial Setting - No	4 11 1
General - Reset to Initial Setting - Yes	4 11 2

# **LIMITED WARRANTY (USA)**

THE PRODUCT'S FULL LIMITED WARRANTY TERMS AND CONDITIONS ARE AVAILABLE AT https://www.lq.com/us AND/OR YOUR WARRANTY.

**ARBITRATION NOTICE**: THIS LIMITED WARRANTY CONTAINS AN ARBITRATION PROVISION THAT REQUIRES YOU AND LG ELECTRONICS ("LG") TO RESOLVE DISPUTES BY BINDING ARBITRATION INSTEAD OF IN COURT, UNLESS YOU CHOOSE TO OPT OUT. IN ARBITRATION, CLASS ACTIONS AND JURY TRIALS ARE NOT PERMITTED. PLEASE SEE THE SECTION TITLED "PROCEDURE FOR RESOLVING DISPUTES" BELOW.

#### PROCEDURE FOR RESOLVING DISPUTES:

ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. BINDING ARBITRATION MEANS THAT YOU AND LG ARE EACH WAIVING THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

**Definitions.** For the purposes of this section, references to "LG" mean LG Electronics U.S.A., Inc., its parents, subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors in interest, successors, assigns and suppliers; references to "dispute" or "claim" shall include any dispute, claim or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

**Notice of Dispute.** In the event you intend to commence an arbitration proceeding, you must first notify LG in writing at least 30 days in advance of initiating the arbitration by sending a letter to LG at LG Electronics, USA, Inc. Attn: Legal Department- Arbitration 111 Sylvan Avenue, Englewood Cliffs, NJ 07632. You and LG agree to engage in good faith discussions in an attempt to amicably resolve your claim. The notice must provide your name, address, and telephone number, identify the product that is the subject of the claim; and describe the nature of the claim and the relief being sought. If you and LG are unable to resolve the dispute within 30 days, either party may proceed to file a claim for arbitration.

Agreement to Binding Arbitration and Class Action Waiver. Upon failure to resolve the dispute during the 30 day period after sending written notice to LG, you and LG agree to resolve any claims between us only by binding arbitration on an individual basis, unless you opt out as provided below. Any dispute between you and LG shall not be combined or consolidated with a dispute involving any other person's or entity's product or claim. More specifically, without limitation of the foregoing, any dispute between you and LG shall not under any circumstances proceed as part of a class or representative action. Instead of arbitration, either party may bring an individual action in small claims court, but that small claims court action may not be brought on a class or representative basis.

Arbitration Rules and Procedures. To begin arbitration of a claim, either you or LG must make a written demand for arbitration. The arbitration will be administered by the American Arbitration Association ("AAA") and will be conducted before a single arbitrator under the AAA's Consumer Arbitration Rules that are in effect at the time the arbitration is initiated (referred to as the "AAA Rules") and under the procedures set forth in this section. The AAA Rules are available online at <a href="https://www.adr.org/consumer">www.adr.org/consumer</a>. Send a copy of your written demand for arbitration, as well as a copy of this provision, to the AAA in the manner described in the AAA Rules. You must also send a copy of your written demand to LG at LG Electronics, USA, Inc. Attn: Legal Department- Arbitration 111 Sylvan Avenue, Englewood Cliffs, NJ 07632. If there is a conflict between the AAA Rules and the rules set forth in this section, the rules set forth in this section, the rules set forth in this section will govern. This arbitration provision is governed by the Federal Arbitration Act. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. All issues are for the arbitrator to decide, except that issues relating to the scope and enforceability of the arbitration provision and to the arbitrability of the dispute are for the court to decide. The arbitrator is bound by the terms of this provision.

**Governing Law.** The law of the state of your residence shall govern this Limited Warranty and any disputes between us except to the extent that such law is preempted by or inconsistent with applicable federal law.

Fees/Costs. You do not need to pay any fee to begin an arbitration. Upon receipt of your written demand for arbitration, LG will promptly pay all arbitration filing fees to the AAA unless you seek more than \$25,000 in damages, in which case the payment of these fees will be governed by the AAA Rules. Except as otherwise provided for herein, LG will pay all AAA filing, administration and arbitrator fees for any arbitration initiated in accordance with the AAA Rules and this arbitration provision. If you prevail in the arbitration, LG will pay your attorneys' fees and expenses as long as they are reasonable, by considering factors including, but not limited to, the purchase amount and claim amount. Notwithstanding the foregoing, if applicable law allows for an award of reasonable attorneys' fees and expenses, an arbitrator can award them to the same extent that a court would. If the arbitrator finds either the substance of your claim or the relief sought in the demand is frivolous or brought for an improper purpose (as measured by the standards set forth in Federal Rule of Civil Procedure 11(b)), then the payment of all arbitration fees will be governed by the AAA Rules. In such a situation, you agree to reimburse LG for all monies previously disbursed by it that are otherwise your obligation to pay under the AAA Rules. Except as otherwise provided for, LG waives any rights it may have to seek attorneys' fees and expenses from you if LG prevails in the arbitration.

**Hearings and Location.** If your claim is for \$25,000 or less, you may choose to have the arbitration conducted solely on the basis of (1) documents submitted to the arbitrator, (2) through a telephonic hearing, or (3) by an in-person hearing as established by the AAA Rules. If your claim exceeds \$25,000, the right to a hearing will be determined by the AAA Rules. Any in-person arbitration hearings will be held at a location within the federal judicial district in which you reside unless we both agree to another location or we agree to a telephonic arbitration.

**Opt Out.** You may opt out of this dispute resolution procedure. If you opt out, neither you nor LG can require the other to participate in an arbitration proceeding. To opt out, you must send notice to LG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the product by either. (i) sending an e-mail to optout@lge. com, with the subject line: "Arbitration Opt Out" or (ii) calling 1-800-980-2973. You must include in the opt out e-mail or provide by telephone: (a) your name and address; (b) the date on which the product was purchased; (c) the product model name or model number, and (d) the serial number (the serial number can be found (i) on the product; or (ii) online by accessing <a href="https://www.lg.com/us/support">https://www.lg.com/us/support</a> and clicking on "How do I find my model number?").

You may only opt out of the dispute resolution procedure in the manner described above (that is, by e-mail or telephone); no other form of notice will be effective to opt out of this dispute resolution procedure.

Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the full benefits of the Limited Warranty. If you keep this product and do not opt out, then you accept all terms and conditions of the arbitration provision described above.

# **LIMITED WARRANTY (CANADA)**

THE PRODUCT'S FULL LIMITED WARRANTY TERMS AND CONDITIONS ARE AVAILABLE AT https://www.la.com/ca\_en/ AND/OR YOUR WARRANTY.

ARBITRATION NOTICE: THIS LIMITED WARRANTY CONTAINS AN ARBITRATION PROVISION THAT REQUIRES YOU AND LG TO RESOLVE DISPUTES BY BINDING ARBITRATION INSTEAD OF IN COURT, UNLESS THE LAWS OF YOUR PROVINCE OR TERRITORY DO NOT PERMIT THAT, OR, IN OTHER JURISDICTIONS, IF YOU CHOOSE TO OPT OUT. FOR FURTHER CLARITY, THIS ARBITRATION PROVISION IS NOT APPLICABLE TO CONSUMERS RESIDING IN ONTARIO AND QUÉBEC. IN ARBITRATION, CLASS ACTIONS AND JURY TRIALS ARE NOT PERMITTED. PLEASE SEE THE SECTION TITLED "PROCEDURE FOR RESOLVING DISPUTES" BELOW.

#### DISCLAIMER:

IF YOU ARE A CONSUMER SUBJECT TO QUÉBEC AND ONTARIO'S CONSUMER PROTECTION ACT, THE EXCLUSION OF WARRANTIES CONTAINED IN THIS SECTION DO NOT EXCLUDE OR LIMIT THE RIGHTS AND REMEDIES THAT YOU MAY HAVE UNDER SUCH ACT, INCLUDING THE RIGHT TO MAKE A CLAIM UNDER ANY OF THE STATUTORY WARRANTIES PROVIDED THEREUNDER.

#### PROCEDURE FOR RESOLVING DISPUTES:

EXCEPT WHERE PROHIBITED AT LAW (INCLUDING WITH RESPECT TO QUÉBEC AND ONTARIO CONSUMERS), ALL DISPUTES BETWEEN YOU AND LG ARISING OUT OF OR RELATING IN ANY WAY TO THIS LIMITED WARRANTY OR THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH BINDING ARBITRATION, AND NOT IN A COURT OF GENERAL JURISDICTION. EXCEPT WHERE PROHIBITED AT LAW (INCLUDING WITH RESPECT TO QUÉBEC AND ONTARIO CONSUMERS), YOU AND LG BOTH IRREVOCABLY AGREE TO WAIVE THE RIGHT TO A JURY TRIAL AND TO BRING OR PARTICIPATE IN A CLASS ACTION.

**Definitions.** For the purposes of this section, references to "LG" mean LG Electronics Canada, Inc., its parents, subsidiaries and affiliates, and each of their officers, directors, employees, agents, beneficiaries, predecessors in interest, successors, assigns and suppliers; references to "dispute" or "claim" shall include any dispute, claim or controversy of any kind whatsoever (whether based in contract, tort, statute, regulation, ordinance, fraud, misrepresentation or any other legal or equitable theory) arising out of or relating in any way to the sale, condition or performance of the product or this Limited Warranty.

**Notice of Dispute.** In the event you intend to commence an arbitration proceeding, you must first notify LG in writing at least 30 days in advance of initiating the arbitration by sending a letter to LGECI Legal Team at 20 Norelco Drive, North York, Ontario, Canada M9L 2X6 (the "Notice of Dispute"). You and LG agree to engage in good faith discussions in an attempt to amicably resolve your claim. The notice must provide your name, address, and telephone number, identify the product that is the subject of the claim; and describe the nature of the claim and the relief being sought. If you and LG are unable to resolve the dispute within 30 days of LG's receipt of the Notice of Dispute, the dispute shall be resolved by binding arbitration in accordance with the procedure set out herein. You and LG both agree that, during the arbitration proceeding, the terms (including any amount) of any settlement offer made by either you or LG will not be disclosed to the arbitrator until the arbitrator determines the dispute.

Agreement to Binding Arbitration and Class Action Waiver. Upon failure to resolve the dispute during the 30 day period after LG's receipt of the Notice of Dispute, you and LG agree to resolve any claims between you and LG only by binding arbitration on an individual basis, unless you opt out as provided below, or you reside in a jurisdiction that prevents full application of this clause in the circumstances of the claims at issue (in which case if you are a consumer, this clause will only apply if you expressly agree to the arbitration). To the extent permitted by applicable law, any dispute between you and LG shall not be combined or consolidated with a dispute involving any other person's or entity's product or claim. More specifically, without limitation of the foregoing, except to the extent such a prohibition is not permitted at law, any dispute between you and LG shall not under any circumstances proceed as part of a class or representative action. Instead of arbitration, either party may bring an individual action in small claims court, but that small claims court action may not be brought on a class or representative basis except to the extent this prohibition is not permitted at law in your province or territory of jurisdiction as it relates to the claims at issue between you and LG. This does not apply to consumers in Ontario and Québec. In accordance with provincial legislation, the consumer and LG may agree to resolve the dispute using any procedure available, including commencing the action before the competent courts of those provinces.

Arbitration Rules and Procedures. To begin arbitration of a claim, either you or LG must make a written demand for arbitration. The arbitration will be private and confidential, and conducted on a simplified and expedited basis before a single arbitrator chosen by the parties under the provincial or territorial commercial arbitration law and rules of the province or territory of your residence. You must also send a copy of your written demand to LG at LG Electronics, Canada, Inc., Attn: Legal Department- Arbitration, 20 Norelco Drive, North York, Ontario M9L 2X6. This arbitration provision is governed by your applicable provincial or territorial commercial arbitration legislation. For consumers in Ontario and Québec, the applicable arbitration legislation only applies if consumers agree to submit the dispute to arbitration. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction. All issues are for the arbitrator to decide, except that, issues relating to the scope and enforceability of the arbitration provision and to the arbitrability of the dispute are for the court to decide. The arbitrator is bound by the terms of this provision.

**Governing Law.** The law of the province or territory of your purchase shall govern this Limited Warranty and any disputes between you and LG except to the extent that such law is preempted by or inconsistent with applicable federal or provincial/territorial law. Should arbitration not be permitted for any claim, action, dispute or controversy between you and LG, you and LG attorn to the exclusive jurisdiction of the courts of the province or territory of your purchase for the resolution of the claim, action, dispute or controversy between you and LG.

Fees/Costs. You do not need to pay any fee to begin an arbitration. Upon receipt of your written demand for arbitration, LG will promptly pay all arbitration filing fees unless you seek more than \$25,000 in damages, in which case the payment of these fees will be governed by the applicable arbitration rules. Except as otherwise provided for herein, LG will pay all filing, administration and arbitrator fees for any arbitration initiated in accordance with the applicable arbitration rules and this arbitration provision. If you prevail in the arbitration, LG will pay your attorneys' fees and expenses as long as they are reasonable, by considering factors including, but not limited to, the purchase amount and claim amount. Notwithstanding the foregoing, if applicable law allows for an award of reasonable attorneys' fees and expenses, an arbitrator can award them to the same extent that a court would. If the arbitrator finds either the substance of your claim or the relief sought in the demand is frivolous or brought for an improper purpose (as measured by the applicable laws), then the payment of all arbitration fees will be governed by the applicable arbitration rules. In such a situation, you agree to reimburse LG for all monies previously disbursed by it that are otherwise your obligation to pay under the applicable arbitration rules. Except as otherwise provided for, LG waives any rights it may have to seek attorneys' fees and expenses from you if LG prevails in the arbitration.

**Hearings and Location.** If your claim is for \$25,000 or less, you may choose to have the arbitration conducted solely (1) on the basis of documents submitted to the arbitrator, (2) through a telephonic hearing, or (3) by an in-person hearing as established by the applicable arbitration rules. If your claim exceeds \$25,000, the right to a hearing will be determined by the applicable arbitration rules. Any in-person arbitration hearings will be held at the nearest, most mutually-convenient arbitration location available within the province or territory in which you reside unless you and LG both agree to another location or agree to a telephonic arbitration.

**Severability and Waiver.** If any portion of this Limited Warranty (including these arbitration procedures) is unenforceable, the remaining provisions will continue in full force and effect to the maximum extent permitted by applicable law. Should LG fail to enforce strict performance of any provision of this Limited Warranty (including these arbitration procedures), it does not mean that LG intends to waive or has waived any provision or part of this Limited Warranty.

**Opt Out.** The arbitration provision requires you and LG to resolve disputes by binding arbitration instead of court, unless the laws of your province or territory do not permit that, or, in other jurisdictions, if you choose to opt out. The arbitration provision does not apply to consumers in Ontario and Québec.

For individuals that fall within the binding arbitration provisions, you may opt out of this dispute resolution procedure. If you opt out, neither you nor LG can require the other to participate in an arbitration proceeding. To opt out, you must send notice to LG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the product by either (i) sending an e-mail to optout@lge.com, with the subject line: "Arbitration Opt Out;" or (ii) calling 1-800-980-2973. You must include in the opt out e-mail or provide by telephone: (a) your name and address; (b) the date on which the product was purchased; (c) the product model name or model number, and (d) the serial number (the serial number can be found (i) on the product; or (ii) online by accessing <a href="https://www.lg.com/ca\_en/findmodel\_serial">https://www.lg.com/ca\_en/findmodel\_serial</a>).

In the event that you "Opt Out", the law of the province or territory of your residence shall govern this Limited Warranty and any disputes between you and LG except to the extent that such law is preempted by or inconsistent with applicable federal or provincial/territorial law. Should arbitration not be permitted for any claim, action, dispute or controversy between you and LG, you and LG agree to attorn to the exclusive jurisdiction

of the courts of the province or territory of your residence for the resolution of the claim, action, dispute or controversy between you and LG.

You may only opt out of the dispute resolution procedure in the manner described above (that is, by e-mail or telephone); no other form of notice will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the full benefits of the Limited Warranty. If you keep this product and do not opt out, then you accept all terms and conditions of the arbitration provision described above.

Conflict of Terms. In the event of a conflict or inconsistency between the terms of this Limited Warranty and the End User License Agreement ("EULA") in regards to dispute resolution, the terms of this Limited Warranty shall control and govern the rights and obligations of the parties and shall take precedence over the EULA.



### Supplier's Declaration of Conformity

Trade Name LG

Responsible Party LG Electronics USA, Inc.

Address 1

111 Sylvan Avenue, North Building,

Englewood Cliffs, NJ 07632

E-mail lg.environmental@lge.com

The model and serial number of the product are located on the back and on one side of the product.

Record them below in case you ever need service.

Model	
Serial No.	
00.101.101	