

Congratulations! You've purchased the  
**HIGHEST QUALITY  
 COMFORT LIFT RECLINER**  
 on the market with the  
**BEST HAND CONTROL**  
 for lifelong use.

To make your comfort experience seamless,  
 here are the most commonly used hand control  
 functions. **Simply detach and keep in the pocket  
 of your recliner for easy reference.**

UC476 / UC478 / UC682

### CALIBRATION

#### When to use:

- Footrest/ backrest don't come all the way up
- Positioning seems a bit off
- Periodically for general care and maintenance

#### How to use:

*While standing next to the chair, press and hold the highlighted buttons at the same time until the chair stops moving PLUS 5 additional seconds.*



### RESET 'ZG' 'TV' 'SIT' & 'SLEEP' BUTTONS

#### When to use:

- When you want these buttons to go back to the original pre-programmed position

#### How to use:

*Press and hold 'M' until the lights start flashing, then press and release the highlighted buttons in numerical order.*



### PREVENT MOVEMENT & FULLY LOCK YOUR CHAIR

#### When to use:

- When you want to disable your recliner without unplugging it

#### How to use:

*Press and Hold 'M' until the lights start flashing, then press Rise. Repeat the process to unlock your recliner and allow movement.*



**See Owner's Manual  
 for more Hand Control features!**