

Congratulations! You've purchased the
**HIGHEST QUALITY
COMFORT LIFT RECLINER**
on the market with the
BESTHAND CONTROL
for lifelong use.

To make your comfort experience seamless,
here are the most commonly used hand control
functions. **Simply detach and keep in the pocket
of your recliner for easy reference.**



UC562

CALIBRATION

When to use:

- Footrest/ backrest don't come all the way up
- Positioning seems a bit off
- Periodically for general care and maintenance

How to use:

While standing next to the chair, press and hold the highlighted buttons at the same time until the chair stops moving PLUS 5 additional seconds.



RESET 'ZG' 'TV' 'SIT' & 'REJUV' BUTTONS

When to use:

- When you want these buttons to go back to the original pre-programmed position

How to use:

Press and hold 'M' until the lights start flashing, then press and release the highlighted buttons in numerical order.



PREVENT MOVEMENT & FULLY LOCK YOUR CHAIR

When to use:

- When you want to disable your recliner without unplugging it

How to use:

Press and Hold 'M' until the lights start flashing, then press Rise. Repeat the process to unlock your recliner and allow movement.

**See Owner's Manual
for more Hand Control features!**