

**NOTA: ES MUY IMPORTANTE
LEER Y SEGUIR LAS DIRECCIONES
EN LAS INSTRUCCIONES DE
INSTALACIÓN ANTES DE PROCEDER
CON ESTA PLANTILLA DE PARED
POSTERIOR.**


Esta plantilla es para localizar el corte de escape horizontal. No use esta plantilla para escape de recirculación o vertical.

1. Coloque la plantilla de manera plana contra la pared posterior, alineando los círculos **A.** y **B.** con los agujeros correspondientes previamente perforados en la pared posterior para los agujeros A y B del plato de la pared.
2. Con la plantilla alineada en los agujeros, pegue con cinta adhesiva la plantilla a la pared posterior.
3. Use un sable o una sierra de agujero para cortar el área sombreada **F.** a través de la pared posterior.
4. Remueva la plantilla de la pared posterior.
5. **REGRESE Y PROCEDA CON LAS INSTRUCCIONES DE INSTALACIÓN.**

Turn over for English.

Parte No. 164D3370P166
Pub. No. 49-40177
4922W5A024A

1-01 JR
Impreso in Corea

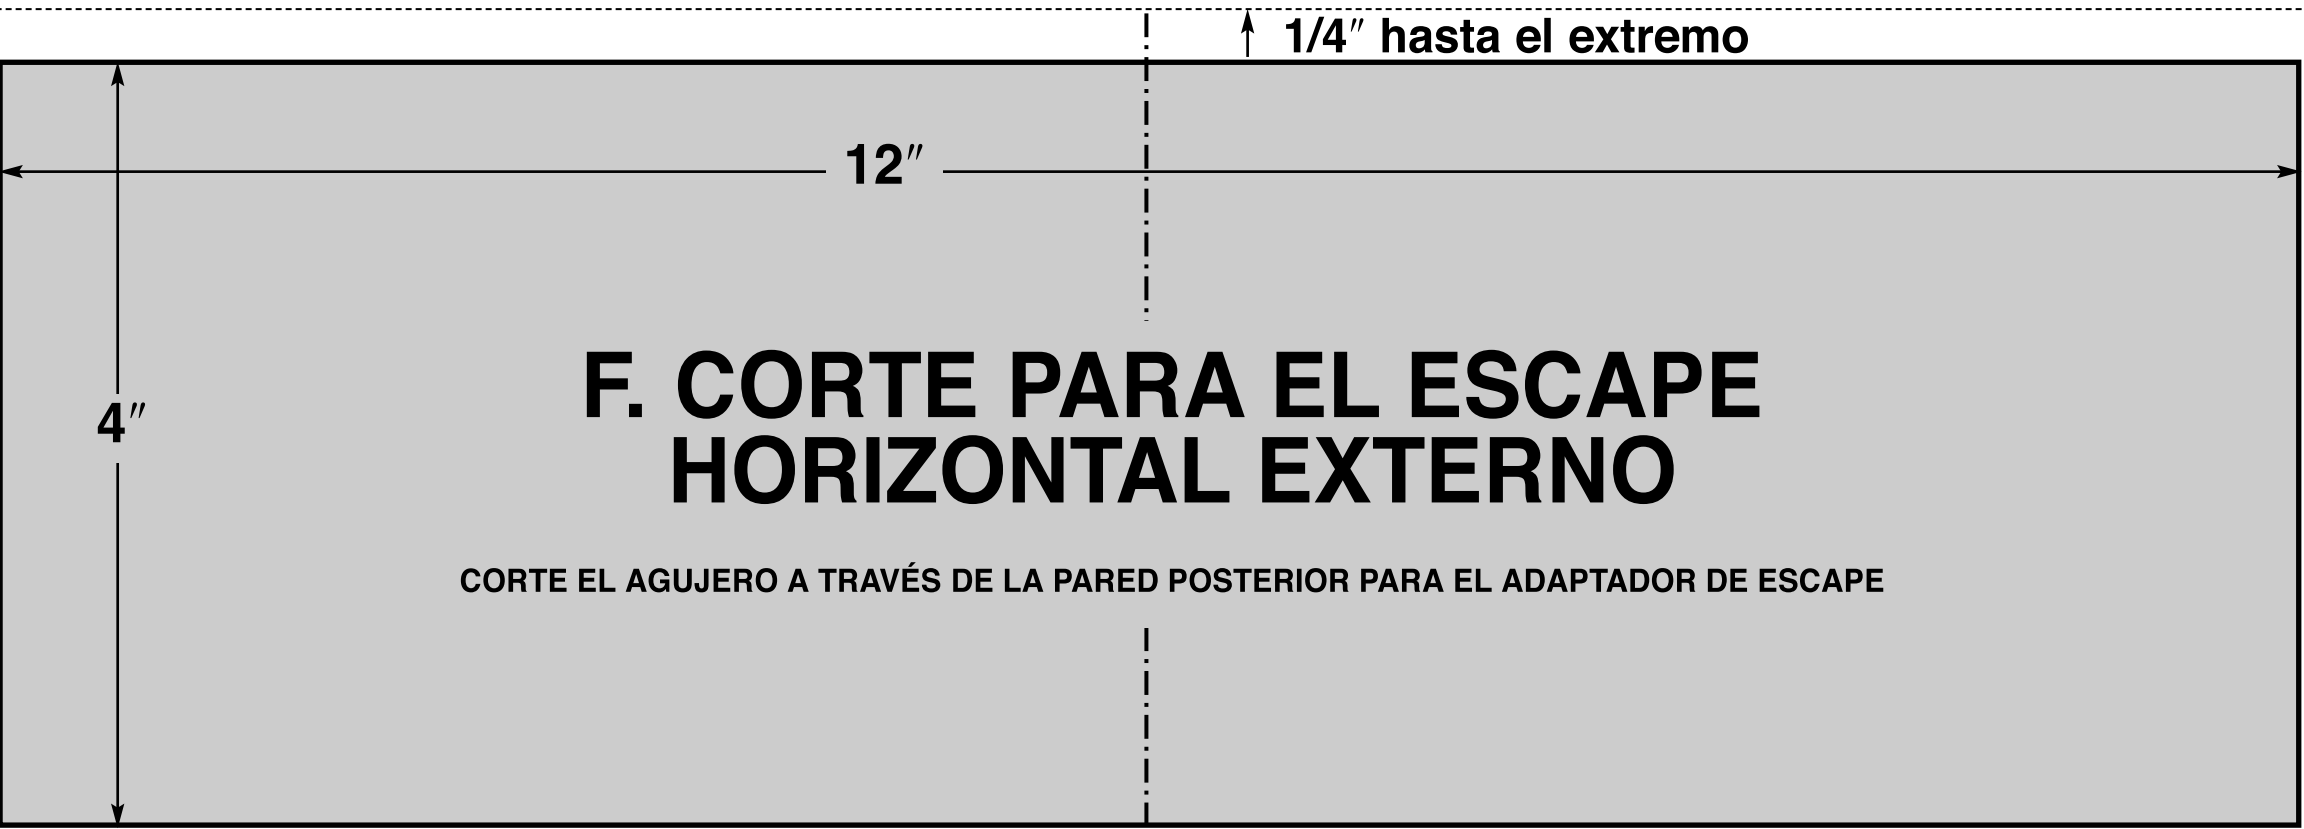

PRECAUCIÓN – SI EL ADAPTADOR DE ESCAPE ESTÁ COLOCADO MÁS ALLÁ DE LAS DIMENSIONES RECOMENDADAS, AIRE CARGADO CON GRASA SE DESCARGARÁ HACIA LA ESTRUCTURA DE LA CASA.

PLANTILLA DE PARED POSTERIOR

**NOTE: IT IS VERY IMPORTANT TO
READ AND FOLLOW THE DIRECTIONS
IN THE INSTALLATION INSTRUCTIONS
BEFORE PROCEEDING WITH THIS
REAR WALL TEMPLATE.**


This template is for locating the horizontal exhaust cutout. Do not use this template for vertical or recirculation exhaust.

1. Place the template flat against the rear wall, aligning the circles **A.** and **B.** with the corresponding holes previously drilled in the rear wall for holes A and B of the wall plate.
2. With the template aligned to the holes, tape the template to the rear wall.
3. Use a saber or keyhole saw to cut out the shaded area **F.** through the rear wall.
4. Remove the template from the rear wall.
5. **RETURN TO AND PROCEED WITH THE INSTALLATION INSTRUCTIONS.**

**Darle vuelta a la hoja para consultar la
versión en Español.**

Part No. 164D3370P166
Pub. No. 49-40177
4922W5A024A

1-01 JR
Printed in Korea

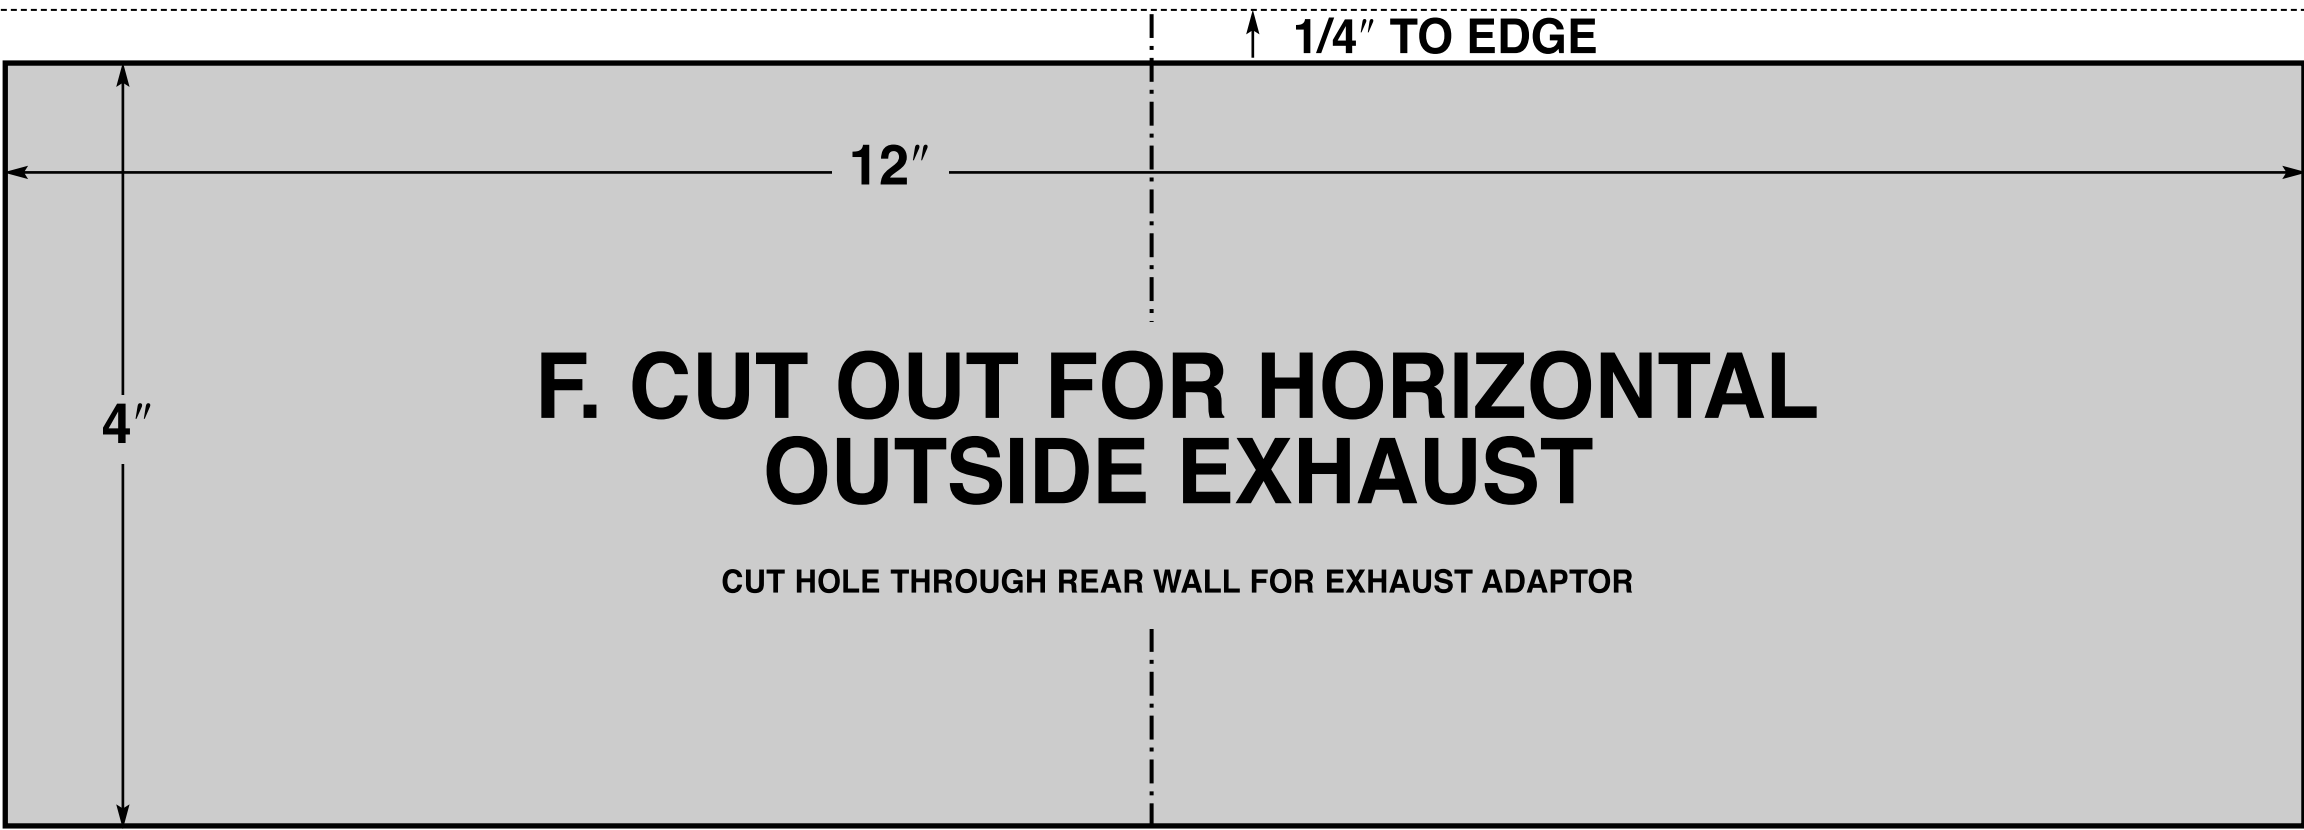

CAUTION – IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE RECOMMENDED DIMENSION, GREASE LADEN AIR WILL DISCHARGE INTO HOUSE STRUCTURE.

REAR WALL TEMPLATE