


DRYER QUICK START GUIDE

PRODUCT REGISTRATION & OWNER INFORMATION

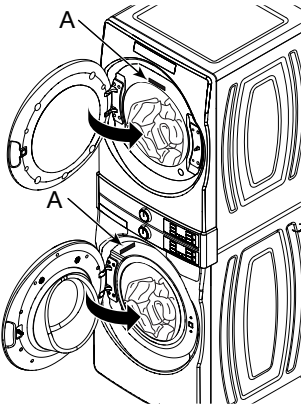

A. Find your serial tag on your product, as shown in the diagram.

YOUR QR CODE UNLOCKS... product registration and warranty information, installation instructions, product guide, cycle guide, how-to videos, and additional accessories to get the most out of your product. If you purchased a smart appliance, your QR code will provide instructions on how to download the app and connect. You can access the full Installation, User Maintenance and Operating Instructions, Warranty details, and more by visiting our website at www.whirlpool.com/owners or www.whirlpool.ca/owners. This may save you the cost of a service call. To receive a free printed copy of the information online, call us at **1-866-698-2538** (U.S.A.)/**1-800-807-6777** (Canada) or write to us at:

Whirlpool Brand Appliances
Customer eXperience Center
PO Box #8
St. Joseph, MI 49085

Whirlpool Brand Appliances
Customer eXperience Center Unit
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

Register to access warranty information and receive important notifications related to your product. Scan the Photo Registration Card or QR code to register your product.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

Appliance Troubleshooting & Support:

In the rare event you require service, parts, accessories, or you are interested in an extended service plan, Whirlpool offers a variety of options to ensure your peace of mind. For more info and to see a library of appliance troubleshooting resources, visit www.whirlpool.com/owners.

Maintenance & Cleaning:

Your appliances are an important purchase. Keep them working as hard as you do with your machine's "Clean with affresh®" cycle and affresh® Washing Machine Cleaner Tablets, designed to deep clean and remove odor-causing residues and grime daily loads leave behind.

OPERATING INSTRUCTIONS

⚠ WARNING


Fire Hazard
No washer can completely remove oil.
Do not dry anything that has ever had any type of oil on it (including cooking oils).
Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.
Failure to follow these instructions can result in death or fire.

⚠ WARNING

Explosion Hazard
Keep flammable materials and vapors, such as gasoline, away from dryer.
Do not dry anything that has ever had anything flammable on it (even after washing).
Failure to follow these instructions can result in death, explosion, or fire.


WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Step 1. Clean Lint Screen

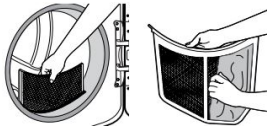


Step 2. Load Clothes


Step 3. Press Power Button

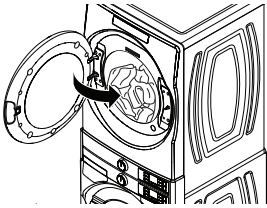

Step 4. Select Desired Cycle. Adjust cycle settings and options if desired.

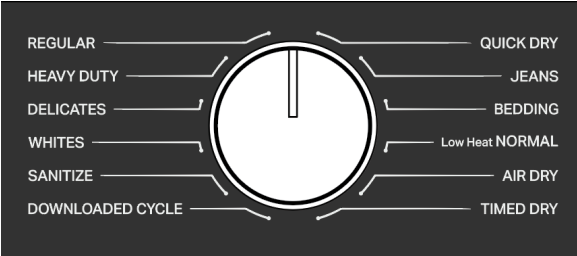

Step 5. Press, hold and release Start Button

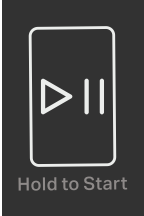

Button Descriptions

1. POWER/CANCEL

Touch to turn the dryer on and off. Touch to stop/cancel a cycle at any time.

2. START/PAUSE

Touch and hold until LCD counts down "3-2-1" and the dryer starts; then let go to start a cycle, or touch once while a cycle is in process to pause it.

3. MODIFIERS

Use to select available modifiers for your dryer. Not all cycles and options are available on all models. See the online "Cycle Guide" for details.

Temp

When using Timed Dry/Quick Cycle, you may select a dry temperature based on the type of load you are drying. Use the warmest setting that is acceptable for the garments in the load. Follow garment label instructions.

NOTE: Automatic Cycles will give you up to 4 temperatures to adjust, depending on the selections that have been made.

Drying Levels

You may adjust the Dryness on Automatic Cycles (except for the Sanitize cycle), if desired.

NOTE: Dryness is for use with Automatic Cycles only.

More Time/Less Time

Touch More Time or Less Time with Timed Dry/Quick Dry Cycles to increase or decrease the length of the cycle.

4. OPTIONS

Use to select available options for your dryer. Not all cycles and options are available on all models.

Wrinkle Shield™ Option

If you will be unable to remove a load immediately, touch Wrinkle Shield™ to add up to 150 minutes of periodic tumbling to help reduce wrinkling.

NOTE: If you open the dryer door prior to the end of the Wrinkle Shield™ option, the dryer will pause.

Cycle Signal

Use this to turn the signal indicating the end of a drying cycle to low, medium, high, or off. The volume you select here will also be applied to the Damp Dry Signal.

NOTE: You may also turn off the tones that sound when a feature, setting, or option is touched. Touch and hold Cycle Signal for about 3 seconds to turn sounds to low, medium, high, or off.

Damp Dry Signal

Touch to select the Damp Dry Signal on or off. When selected, a series of beeps will sound when the load is damp, but not completely dry. This will allow you to take clothes out of the load that do not need to dry completely. The Damp Dry Signal is selected as a default for the Bulky Items cycles, as a reminder to manually reposition bulky loads midway through the cycle. This option is not available for all cycles. See the online "Cycle Guide" for details.

Control Lock

Use this option to lock the controls of the dryer and avoid an accidental unintended change in cycle options or preferences during a drying cycle. Touch and hold Control Lock or Damp Dry Signal (depending on the model) for 3 seconds to lock or unlock the controls of the dryer. During this time, the LCD Display will count down "3-2-1." Once the controls are locked, the LCD Display will display "Loc."

NOTE: The Control Lock function may be enabled when recovering from a power failure. To unlock the control, touch and hold Control Lock or Damp Dry Signal (depending on the model) for at least 3 seconds.

EcoBoost™ Option

The EcoBoost™ option will default on only for the Regular/Normal cycle and is only available on that cycle. This option allows you to increase your energy savings by using a slightly lower heat level. The EcoBoost™ option will increase drying times by approximately 40 minutes, which will be reflected on the LCD display. If optimal time is desired, touch ECOBOOST to turn off this option.

5. Remote Start 3 sec for Wi-Fi

You can control this smart dryer remotely to manage laundry day from your smartphone. Access Favorite Cycles from the Whirlpool® app to send laundry cycles to your dryer and start the load remotely.

6. LCD DISPLAY

When you select a cycle, its default settings will light up and the estimated time remaining (for Automatic Cycles) will vary depending on selections or actual time remaining for Timed Dry cycles (for Manual Cycles) will be displayed.

Check Vent

The Check Vent indicator is a feature available for Automatic Cycles only. This indicator will show the status of airflow through the dryer and the dryer vent system for the dryer's life. During the sensing phase at the beginning of the cycle, the Check Vent light will come on if a blocked vent or low airflow issue is detected. This light will stay on for the entire cycle. Should the Check Vent light illuminate, refer to the online "Troubleshooting" section for potential solutions to the issue.

The light will be cleared upon completion of the cycle, touching Power, or opening the door. The Check Vent light will continue to illuminate during the cycle unless the root cause is resolved.

NOTE: The dryer will continue to operate even while the indicator is lit, but poor airflow can impact dry times and overall performance. See "Check Your Vent System for Good Airflow" in the Owner's Manual.

NOTE: If there are other error issues during a cycle, the Check Vent indicator will not light up. See the online "Troubleshooting" section.

Cycle Guide

For a full cycle guide, see the Cycle Guide literature found online with the QR code above.

Cycle Name:	Cycle Description:
Normal (Low Heat)	Uses low heat to dry normal cottons and mixed fabrics.

NOTE: These clothes dryer's Government energy certifications were based on the Low Heat Normal Cycle, Ecobost Defaulted ON, Highest Temperature and Normal Dryness Level. The as-shipped defaults of Low Heat Normal, Ecobost ON, Medium Temperature and Wrinkle Shield Off were used. Cycles that are available for post-sale download may use more energy than the Low Heat Normal cycle, upon which the energy use rating of this dryer is based upon.


CONNECT YOUR SMART APPLIANCE

GET THE WHIRLPOOL® APP to stay in control and efficiency manage from laundry from anywhere.* Stay on top of laundry with end of cycle notifications on your smart device to ensure finished loads aren't left behind. Get step-by-step pretreating instructions in the Stain Guide to take on everyday tough stains and maximize the power of your Whirlpool™ appliances.

*Appliance must be set to remote enable/start. WiFi & App Required. Features subject to change. Once installed, launch the app and you will be guided through the steps to create your user account to connect to your appliance. You can get connectivity instructions, terms of use, and privacy policy information at www.whirlpool.com/connect or in Canada at www.whirlpool.ca/connect. If you have any problems or questions, call Whirlpool® Connected Appliances at **1-866-698-2538**.

Guide de démarrage rapide de la sècheuse

ENREGISTREMENT DU PRODUIT ET INFORMATIONS POUR LE PROPRIÉTAIRE

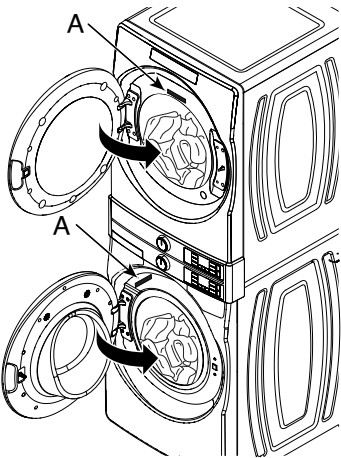

A. Trouver l'étiquette signalétique sur votre produit, comme indiqué dans le diagramme.

INSTRUCTIONS D'UTILISATION

AVERTISSEMENT

Risque d'incendie

Aucune laveuse ne peut complètement éliminer l'huile.

Ne jamais faire sécher d'articles tachés d'huile (huiles de cuisson comprises).

Les articles contenant mousse, caoutchouc ou plastique doivent être séchés sur une corde à linge ou par le programme de séchage à l'air.

Le non-respect de ces instructions peut causer un décès ou un incendie.

AVERTISSEMENT

Risque d'explosion


Garder les matières et les vapeurs inflammables, telles que l'essence, à l'écart de la sècheuse.

Ne pas faire sécher un article qui a déjà été touché par un produit inflammable (même après un lavage).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.


AVERTISSEMENT : Pour réduire le risque d'incendie, de décharge électrique ou de blessures, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ du guide d'utilisation de votre appareil avant de faire fonctionner cet appareil.

STEP 1 : Nettoyer le filtre à charpie

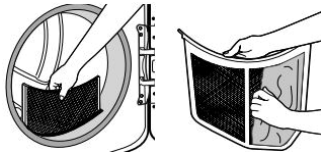


STEP 2 : Charger les vêtements

STEP 3 : Appuyer sur le bouton Power (Mise sous tension)

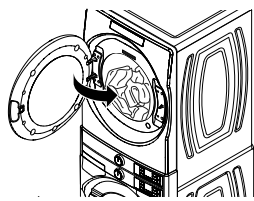

STEP 4 : Sélectionner le programme désiré. Modifier les réglages et options du programme si désiré.

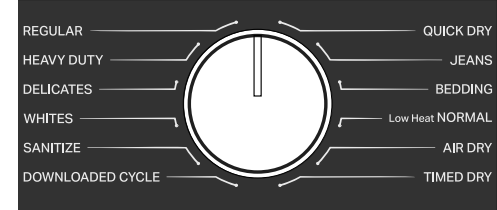

STEP 5 : Maintenir enfoncé, puis relâcher le bouton Start (Mise en marche)



VOTRE CODE À BARRES 2D DÉBLOQUE... des informations sur l'enregistrement et la garantie du produit, des instructions d'installation, le guide du produit, le guide des programmes, des vidéos pratiques et des accessoires supplémentaires pour tirer le meilleur parti de votre produit. Si vous avez acheté un appareil intelligent, votre code à barres 2D vous indiquera comment télécharger l'application et vous connecter. Vous pouvez accéder à l'ensemble des instructions d'installation, d'entretien et d'utilisation, aux détails de la garantie et à d'autres informations en visitant notre site web au www.whirlpool.com/owners ou www.whirlpool.ca/proprietaire. Cette vérification peut vous faire économiser le coût d'une intervention de dépannage. Pour recevoir une copie imprimée gratuite des informations en ligne, nous appeler au **1 866 698-2538** (États-Unis)/ **1 800 807-6777** (Canada) ou nous écrire à :

Whirlpool Brand Appliances
Customer eXperience Center
PO Box #8
St. Joseph, MI 49085

Whirlpool Brand Appliances
Customer eXperience Center Unit
200-6750 Century Ave
Mississauga, Ontario L5N 0B7

Enregistrez-vous pour accéder aux informations relatives à la garantie et recevoir des notifications importantes concernant votre produit. Balayez la carte d'enregistrement photo ou le code à barres 2D pour enregistrer votre produit.

AVERTISSEMENT : Pour réduire le risque d'incendie, de décharge électrique ou de blessures corporelles, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ avant de faire fonctionner cet appareil.

Réparation des appareils et assistance :

Dans le cas rare où vous auriez besoin d'un entretien, de pièces et d'accessoires, ou si vous êtes intéressé par un plan d'entretien prolongé Whirlpool offre une variété d'options pour assurer votre tranquillité d'esprit. Pour obtenir plus d'informations et pour consulter une bibliothèque de ressources sur le dépannage des appareils, visiter le www.whirlpool.com/owners.

Entretien et nettoyage :

Votre électroménager est un achat important. Faites en sorte qu'ils travaillent aussi durs que vous avec le programme « Clean with affresh® » (Nettoyage avec affresh®) de votre machine et les pastilles de nettoyage pour laveuse affresh® qui sont conçues pour nettoyer en profondeur et éliminer les résidus responsables des odeurs et la saleté que les charges quotidiennes laissent derrière elles.

Description des boutons

1. POWER/CANCEL (alimentation/annuler)

Toucher ce bouton pour mettre la sècheuse en marche et pour l'éteindre. Toucher ce bouton pour arrêter/annuler un programme à tout moment.

2. START/PAUSE (mise en marche/pause)

Maintenir enfoncé jusqu'à ce que l'écran ACL effectue un compte à rebours « 3-2-1 » et que la sècheuse se mette en marche; laisser ensuite le programme se poursuivre ou appuyer une fois pendant que le programme est en cours pour le mettre sur pause.

3. MODIFIERS (modificateurs)

Utiliser ces boutons pour sélectionner les modificateurs offerts sur la sècheuse. Les programmes et options ne sont pas tous offerts sur tous les modèles. Consulter le « Guide de programmes » en ligne pour plus de détails.

Temp (température)

Lorsque l'on utilise les programmes Timed Dry/Quick (Séchage minuté et Rapide), il est possible de sélectionner une température de séchage en fonction du type de charge à sécher. Utiliser le réglage le plus chaud possible acceptable pour les vêtements de la charge. Suivre les instructions figurant sur l'étiquette des vêtements.

NOTE : Les programmes automatiques donnent le choix entre jusqu'à 4 températures de réglage, en fonction des sélections effectuées.

Niveau de séchage

Le niveau de séchage peut au besoin être réglé si désiré pour les programmes automatiques (sauf pour le programme Sanitize [assainissement])

NOTE : Le réglage du niveau de séchage ne peut être utilisé qu'avec les programmes automatiques.

More Time (plus de temps)/Less Time (moins de temps)

Toucher More Time (plus de temps) ou LESS TIME (moins de temps) lors des programmes Timed Dry/Quick cycle (séchage minuté/rapide) pour augmenter ou réduire la durée du programme.

4. OPTIONS

Utiliser ces boutons pour sélectionner les options offertes sur la sècheuse. Les programmes et options ne sont pas tous offerts sur tous les modèles.

Wrinkle Shield™ (antifroissement)

Si l'on n'est pas en mesure de retirer la charge immédiatement, appuyer sur Wrinkle Shield™ (Antifroissement) pour ajouter jusqu'à 150 minutes de culbutage périodique afin d'aider à réduire le froissement.

NOTE : Si la porte de la sècheuse est ouverte avant la fin de l'option Wrinkle Shield™ (antifroissement), la sècheuse passe pause.

Signal de programme

Appuyer sur ce bouton pour régler le signal sonore de fin d'un programme de séchage sur faible, moyen, élevé ou désactivé. Le volume sélectionné ici s'applique aussi au signal Damp Dry Signal (séchage humide).

NOTE : Il est également possible de désactiver les signaux sonores qui retentissent lorsqu'on appuie sur un bouton de caractéristique, de réglage ou d'option.

Toucher et maintenir enfoncé sur Cycle Signal (signal de programme) pendant environ 3 secondes pour régler le volume sur faible, moyen, élevé ou désactivé.

Guide des programmes

Pour obtenir un guide complet des programmes, voir la documentation du Guide des programmes disponible en ligne en utilisant le code à barres 2D suivant.

Nom du programme :	Descriptions du programme :
Normal (Chaleur faible)	Utilise un bas niveau de chaleur pour sécher les cotons normaux et les tissus mélangés.

NOTE : La certification énergétique gouvernementale de cette sècheuse est basée sur le programme Low Heat Normal (Normal à faible chaleur), EcoBoost (Puissance Éco) activé par défaut, température la plus élevée et niveau de séchage Normal. Les réglages par défaut de l'appareil, à savoir Low Heat Normal (Normal à faible chaleur), EcoBoost (Puissance Éco) activé, température moyenne et Wrinkle Shield (Antifroissement) désactivée ont été utilisés. Les programmes disponibles pour le téléchargement après-vente peuvent consommer plus d'énergie que le programme Low Heat Normal (Normal à faible chaleur), sur lequel la cote de consommation d'énergie de cette sècheuse est basée.

CONNEXION DE VOTRE APPAREIL INTELLIGENT

UTILISER L'APPLICATION WHIRLPOOL® pour garder la maîtrise et gérer efficacement vos vêtements depuis n'importe où.* Vos vêtements n'auront jamais le dessus grâce aux notifications de fin de programme qui s'affichent sur votre appareil intelligent pour vous assurer que les charges terminées ne sont pas oubliées. Trouver des instructions de prétraitement étape par étape dans le Guide des tâches pour venir à bout des tâches difficiles de tous les jours et maximiser la puissance de vos appareils électroménagers Whirlpool™.

*L'appareil doit être sur remote enable/start (Activation/mise en marche à distance). Wi-Fi et application requis. Caractéristiques indiquées sous réserve de modifications. Une fois installée, lancer l'application et suivre les étapes pour créer votre compte utilisateur et vous connecter à votre appareil. Pour obtenir les instructions d'abonnement et de connectivité, les conditions d'utilisation et la politique de confidentialité, visiter le www.whirlpool.com/connect ou le www.whirlpool.ca/connect pour les résidents du Canada. Si vous avez des problèmes ou des questions, appelez Whirlpool Connected Appliances au **1 866 698-2538**.