


1	CONDIMENT RAIL TOP GLASS ASSY	80-55662-52
2	HOOKS, TOP GLASS	80-55662-59
3	MOTOR COMPARTMENT TOP PANEL	80-55662-49
4	COMPRESSOR, CONDIMENT TRAY	80-55662-47
5	FAN MOTOR 15V 60HZ UL-CSA	80-55662-50
6	CONDENSER FAN BLADE HP9	80-55662-58
7	FAN HOLDER	80-55662-57
8	EVAPORATOR FAN ASSEMBLY	80-55630-00
9	CONTROLLER MODULE	80-55625-01
10	MAIN SWITCH	80-55635-00
11	AIRFLOW DUCT	80-55662-56
12	CONDENSER COIL, CONDIMENT RAIL	80-55662-62


## Granite Rail Components

- A. 2-Side rails
- B. 1-Back splash rail
- C. 1-Tube NSF silicone caulk (Not included)


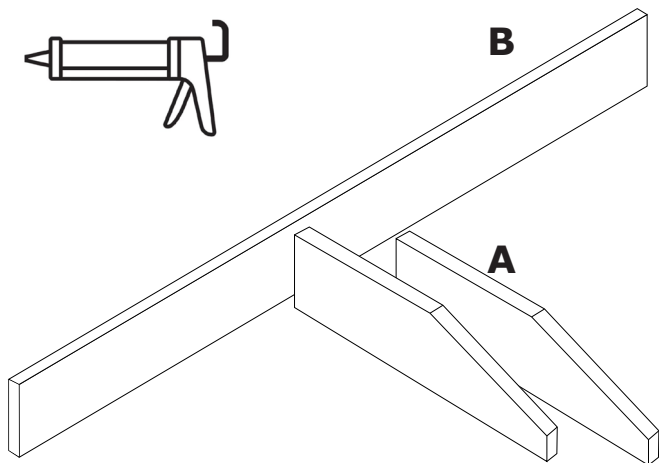


## Glass-Top Components

- A. 2-Side glass
- B. 1-Back glass 86 13/16" X 9"
- C. 1-Top glass 87 9/16" X 11 3/16"


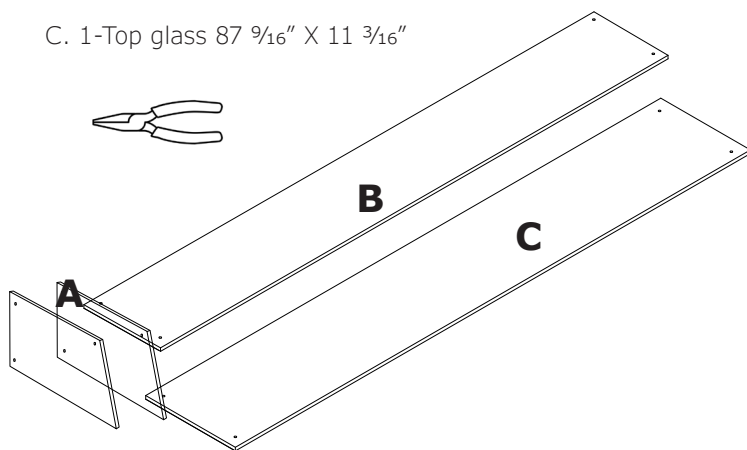


- Hardware
  - 2 corner brackets
  - 4 side brackets
  - 14 nylon washers
  - 14 knurled screws



## Assemble Granite Rails

1. Thoroughly clean granite top to remove any dust or oily residue.
2. When the granite top is dry, apply a bead of NSF silicone along the whole length of the back edge.
3. Carefully set the long back piece of granite down onto the back edge, centering it between the 2 sides.
4. Apply beads of caulk along each side of the granite top to the length of the side rails - 27 1/2".
5. Apply beads of caulk on the end surfaces of the back splash rail and on the ends of the side rails, on the inside surface.
6. Carefully set down each side rail, even with the sides of the granite top. Press together and downward for good adhesion.
7. Consider using a pipe clamp to hold the side rails to the back splash rail (see bottom illustration).

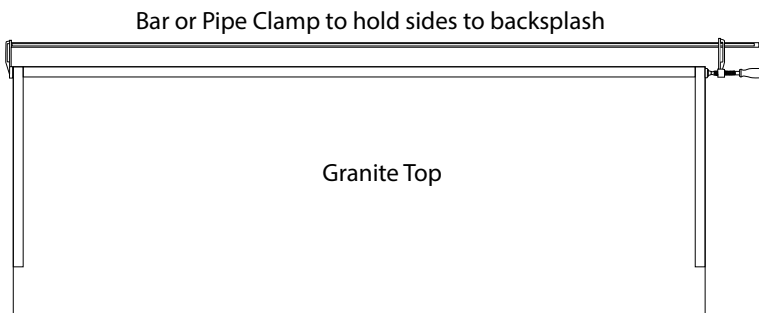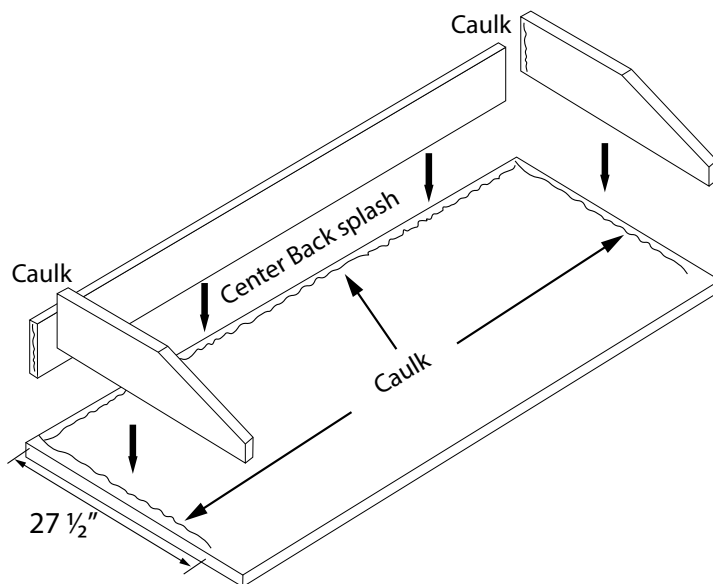


## Install Refrigerated Condiment Rail

1. Apply a bead of caulk along the top of the granite rails.
2. Carefully lower condiment rail onto the top of the granite.



### WARNING

**Do not rush this step. Once the condiment rail is all the way down, do not attempt to shift it. This may result in damage or injury.**

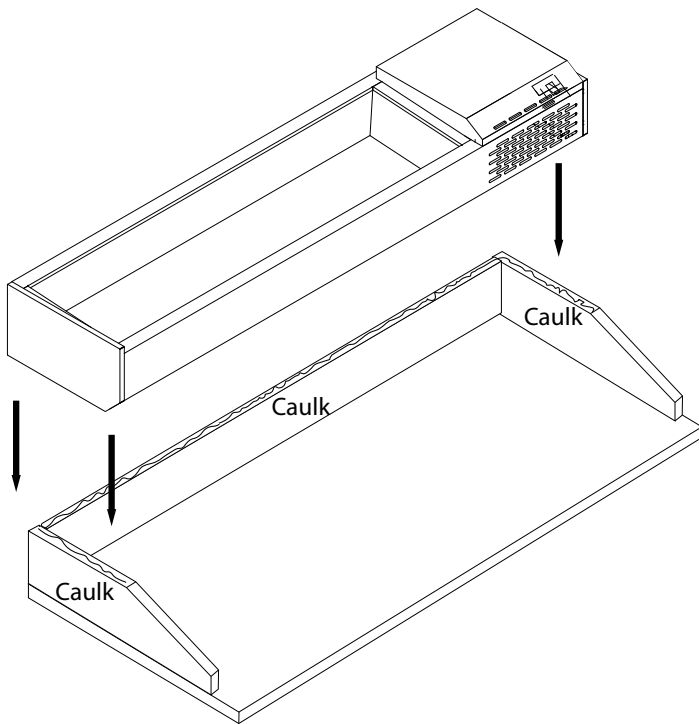

## Assemble Glass Top

1. Locate 1 corner bracket, 2 side brackets, 3 nylon washers, and 3 knurled screws.
2. Locate 1 side glass.
3. Slide nylon washers onto screws.
4. Attach corner bracket and side brackets to side glass - slightly tighten. Repeat process with other side glass.
5. On one side of the condiment rail, slide side glass into the two side guides. Do not push all the way back. Repeat on the other side.

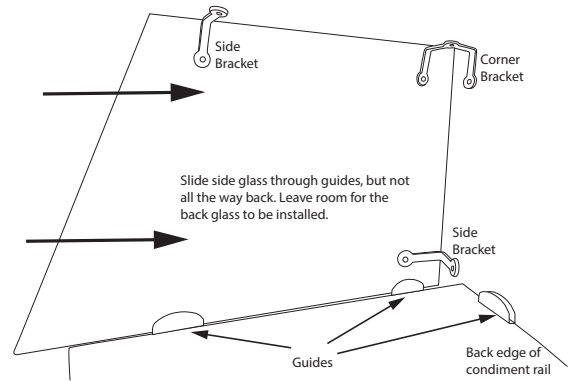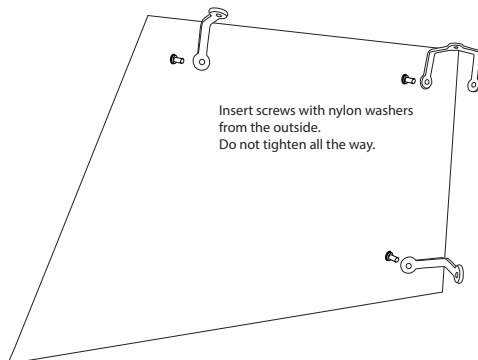

6. Slide back glass through the two rear guides on the back of the condiment rail.
7. Locate 4 knurled screws and 4 nylon washers.
8. Slide nylon washers onto knurled screws.
9. At each corner, secure the back glass to the side glass. Once all four screws are in place, use a pliers to tighten the screws. Be very careful not to over tighten.
10. Set top glass on top of assembled side and back assembly. Line up the holes with the brackets.
11. Locate the remaining 4 knurled screws and 4 nylon washers.
12. Attach top glass at the corners.
13. Tighten all screws with a pliers - just past hand-tight.

**ALLOW 24 HOURS BEFORE OPERATING**

