



GE APPLIANCES

Installation Instructions for your new **RAD10**

For Installation on an

RAB71* (Steel), or RAB80* (Steel),
RAB81* (Steel), RAB77* (Molded),
RAB26* (Steel), or RAB46B* (Steel), RAB78B*
(Molded) Wall Sleeve, or RAB24* (Steel)

*all versions

Before you begin - Read these instructions completely and carefully.

IMPORTANT – OBSERVE ALL GOVERNING CODES AND ORDINANCES.

Note to Installer – Be sure to leave these instructions with the Consumer.

Note to Consumer – Keep these instructions with your Owner's Manual for future reference.

NOTE: Parts in this kit will allow for two different types of installations onto the wall sleeve (external or internal.) A combination of different parts is required. Depending on the type of installation selected, there may be some extra parts.

Parts Included



Hex Head Screw
for external drains
(4)



Pan Head Screw
for internal drains
(2)



Nut
(2)



3" x 1/2" Straight
Tube
(1)



Drain Tube
(1)



Neoprene
Foam Gasket
(3)



Steel Mounting
Plate
(1)



Steel Mounting
Plate (2)

To Install the External Drain

The External Drain Kit is installed on the Zoneline Sleeve if it desired to direct the sleeve overflow water to the exterior and completely away from the installation.

1. The gasket should be placed on the cover plate (with 1/2" hole) with screw holes in the gasket lined up with screw holes in cover plate. Then insert drain tube (from gasket side) through gasket and cover plate (see Fig. 1).

Enter screw
through the back
of mounting plate

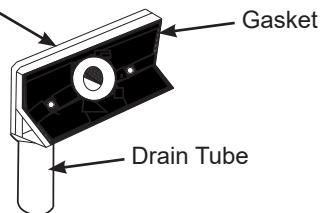


Fig. 1

2. This assembly may now be installed into either the left or right drain holes on the rear flange of the sleeve, using two (2) of the screws (Type A for Metal cabinet or Type B for Molded) included.

NOTE: The drain kit may be installed on the sleeve either before or after the sleeve is installed in the wall, and with or without the rear protective cover installed on the sleeve. The stamped rear grille must be removed or the drain kit installation made before the grille is installed. The installation of the drain kit may be made from the outside (rear of sleeve) or from the roomside (inside) by removing the rear protective cover or rear grille.

To Install the External Drain (cont.)

3. The solid gasket (without hole) should be properly placed on the rear of the solid cover plate and the assembly installed over the drain hole in the sleeve that it is not used to drain. Using two (2) of the screws included (Type A or B depending on the type of sleeve, attach to cabinet (see Fig. 2).

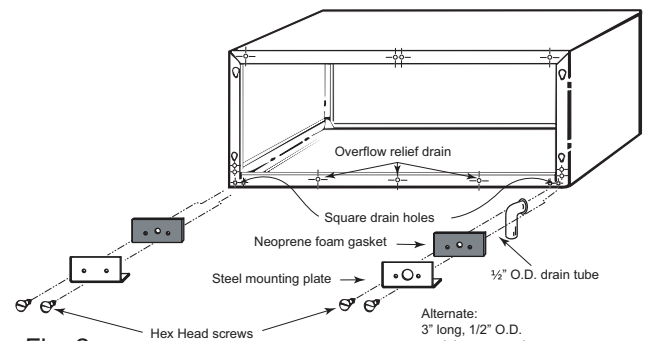


Fig. 2

4. A tube or hose 1/2" I. D. (obtained locally) may be installed onto the drain tube to drain any overflow water away from the installation (to a gutter or the ground).

NOTE: To redirect the drain tube to another direction (toward the side, downward, etc.) merely loosen the two screws, rotate the drain tube to the desired direction and retighten the screws.

CAUTION

DO NOT point the drain tube above the horizontal position.

Installation Instructions

Install the Internal Drain

Location of the Drain in the Cabinet Bottom

1. The Drain Kit must be installed on the bottom of the wall sleeve prior to installation of the sleeve in the wall. The location should not be in the area of chassis supports or molded ribs (molded sleeve only).

NOTE: If installation in the wall requires the use of a sub-base, the location of the drain should be at least 3" from the front edge of the wall sleeve.

2. After location of Drain Kit is determined, locate and drill 3 holes per dimensions on Fig. 3. The steel mounting plate with the 1/2" center hole can also be used as a template to mark holes. Repaint edges of drilled holes on metal cabinet to prevent rust or corrosion.

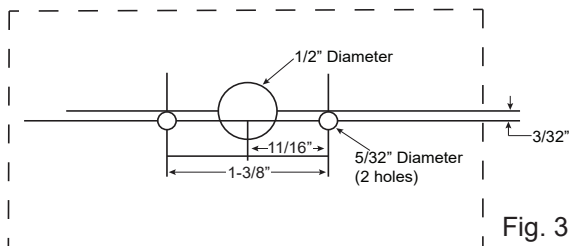


Fig. 3

3. The gasket should be placed on the steel mounting plate (with 1/2" hole) with screw holes in gasket lined up with screw holes in steel mounting plate. Then insert drain tube through gasket and steel mounting plate, as shown in Fig. 4.

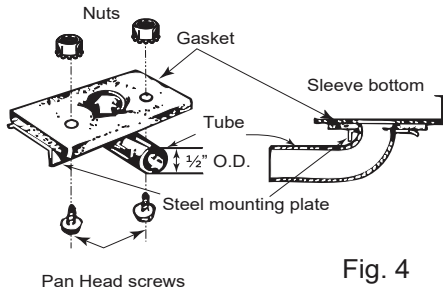


Fig. 4

Screw "A" for metal sleeves	Screw "B" for molded sleeves

Install the Internal Drain (cont.)

4. Attach this assembly to bottom of the wall sleeve with two Type A screws through the cover plate, gasket, and wall sleeve. On molded sleeve, the 2 speed nuts must be used to secure drain kit wall sleeve using the two Type A screws.
5. Seal external drain holes. Prepare the remaining mounting plates/gasket assemblies as shown in Fig. 2. Using the screws (Type A for Steel or Type B for Molded sleeve) attach plate/gasket assemblies to the bottom exterior flange over both as shown.
6. Install the wall sleeve into the wall opening (level in all directions) and secure with adequate fasteners per instructions packed with the wall sleeve.
7. A tube or hose 1/2" I.D. (obtained locally) must be installed on the drain and connected to the internal drain system in the building.