



Pro Wall Hood Duct Cover Installation


wolfappliance.com 800.222.7820

CONTENTS


- | | |
|---|------------------|
| 1 | Cover, duct |
| 8 | Screw, #8 x 1/2" |
| 6 | Screw, #10 x 2" |

PRO WALL HOOD DUCT COVER INSTALLATION

- 1 Install the ventilation hood using the instructions provided with the hood.
- 2 For indoor hoods only, remove and discard the existing screws from the top of the hood.

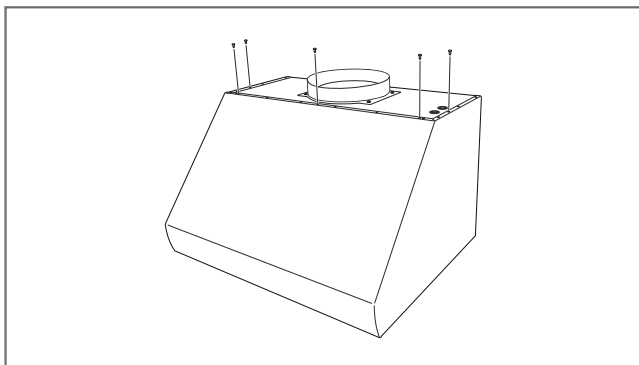

- 3 Place the duct cover on the hood.
- 4 Loosely install eight #8 x 1/2" screws.

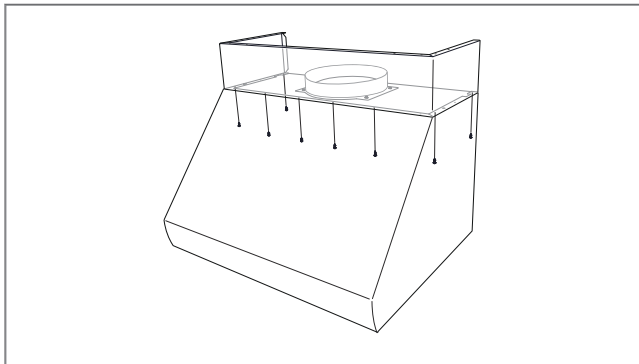

- 5 Verify the duct cover alignment, then tighten the screws.
- 6 If accessible, use the six additional screws to secure the top of the duct cover to an upper cabinet or soffit.

