



1) Install Sides with
3 screws each

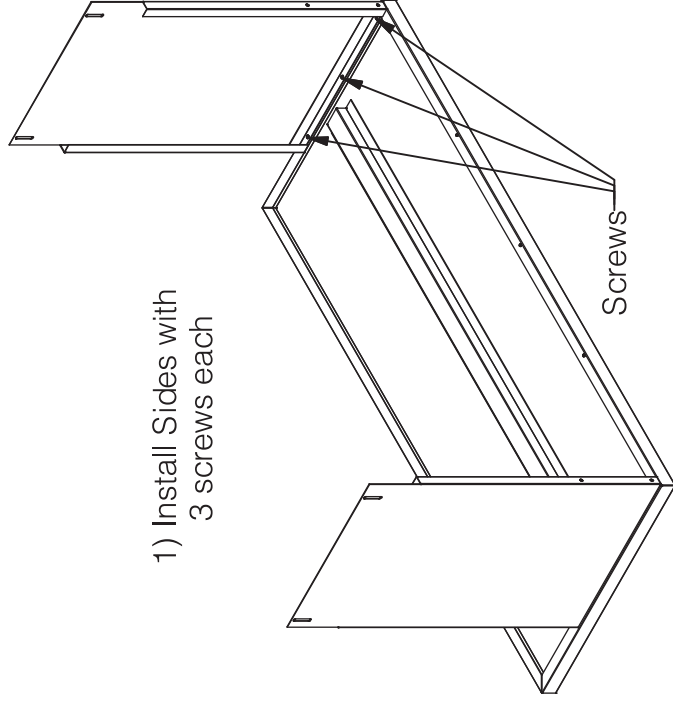


2) Install Back Panel
with 7 screws

3) If unit is Stainless, attach
Side Panels with
double-sided tape

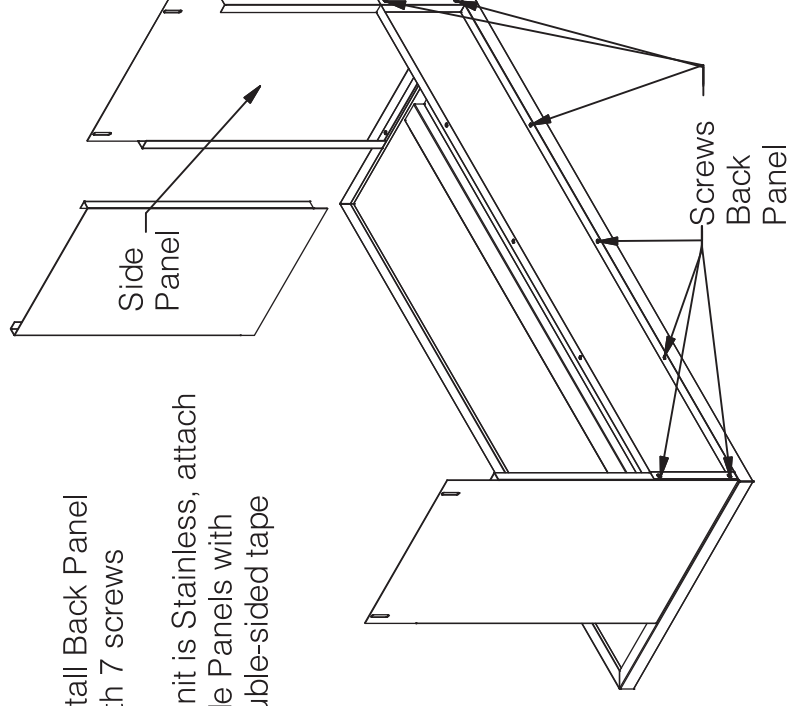

4) Place unit on rear of cabinet
and align with holes in bracket.
Remove existing screws and
remount

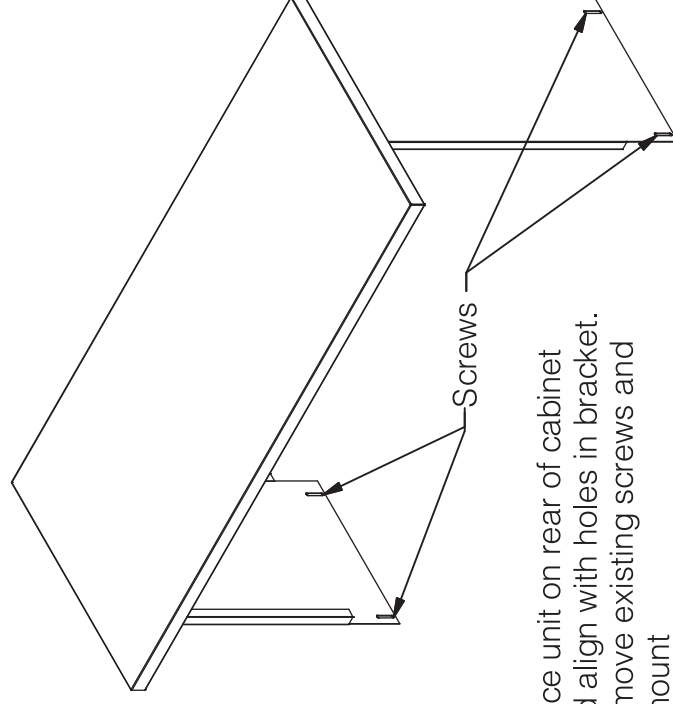

SUMMIT

For additional assistance, contact our parts or
support team at 718-893-3900 or visit us online
at summitappliance.com