

Z9 - 3/4 (755.0 mm)

Top of 80" Panel

84" Panel will extend above this template

Directions For Using Templates:

1. Align template bottom with bottom of door/drawer panel.
 2. Tape the template of the door/drawer panel.
 3. Drill all of 0.125" pilot holes.
 4. Remove the template from the panel.

Solid Door Template


Custom Panel

Pilot holes 0.125" diameter, 0.300" depth


E1 Important: Before drilling holes for brackets, please make sure they do not line up with thin areas on the panel. **B1**

WHEN LINE LENGTH IS CORRECT	31-1000149 01-19
-----------------------------	---------------------

BACK VIEW

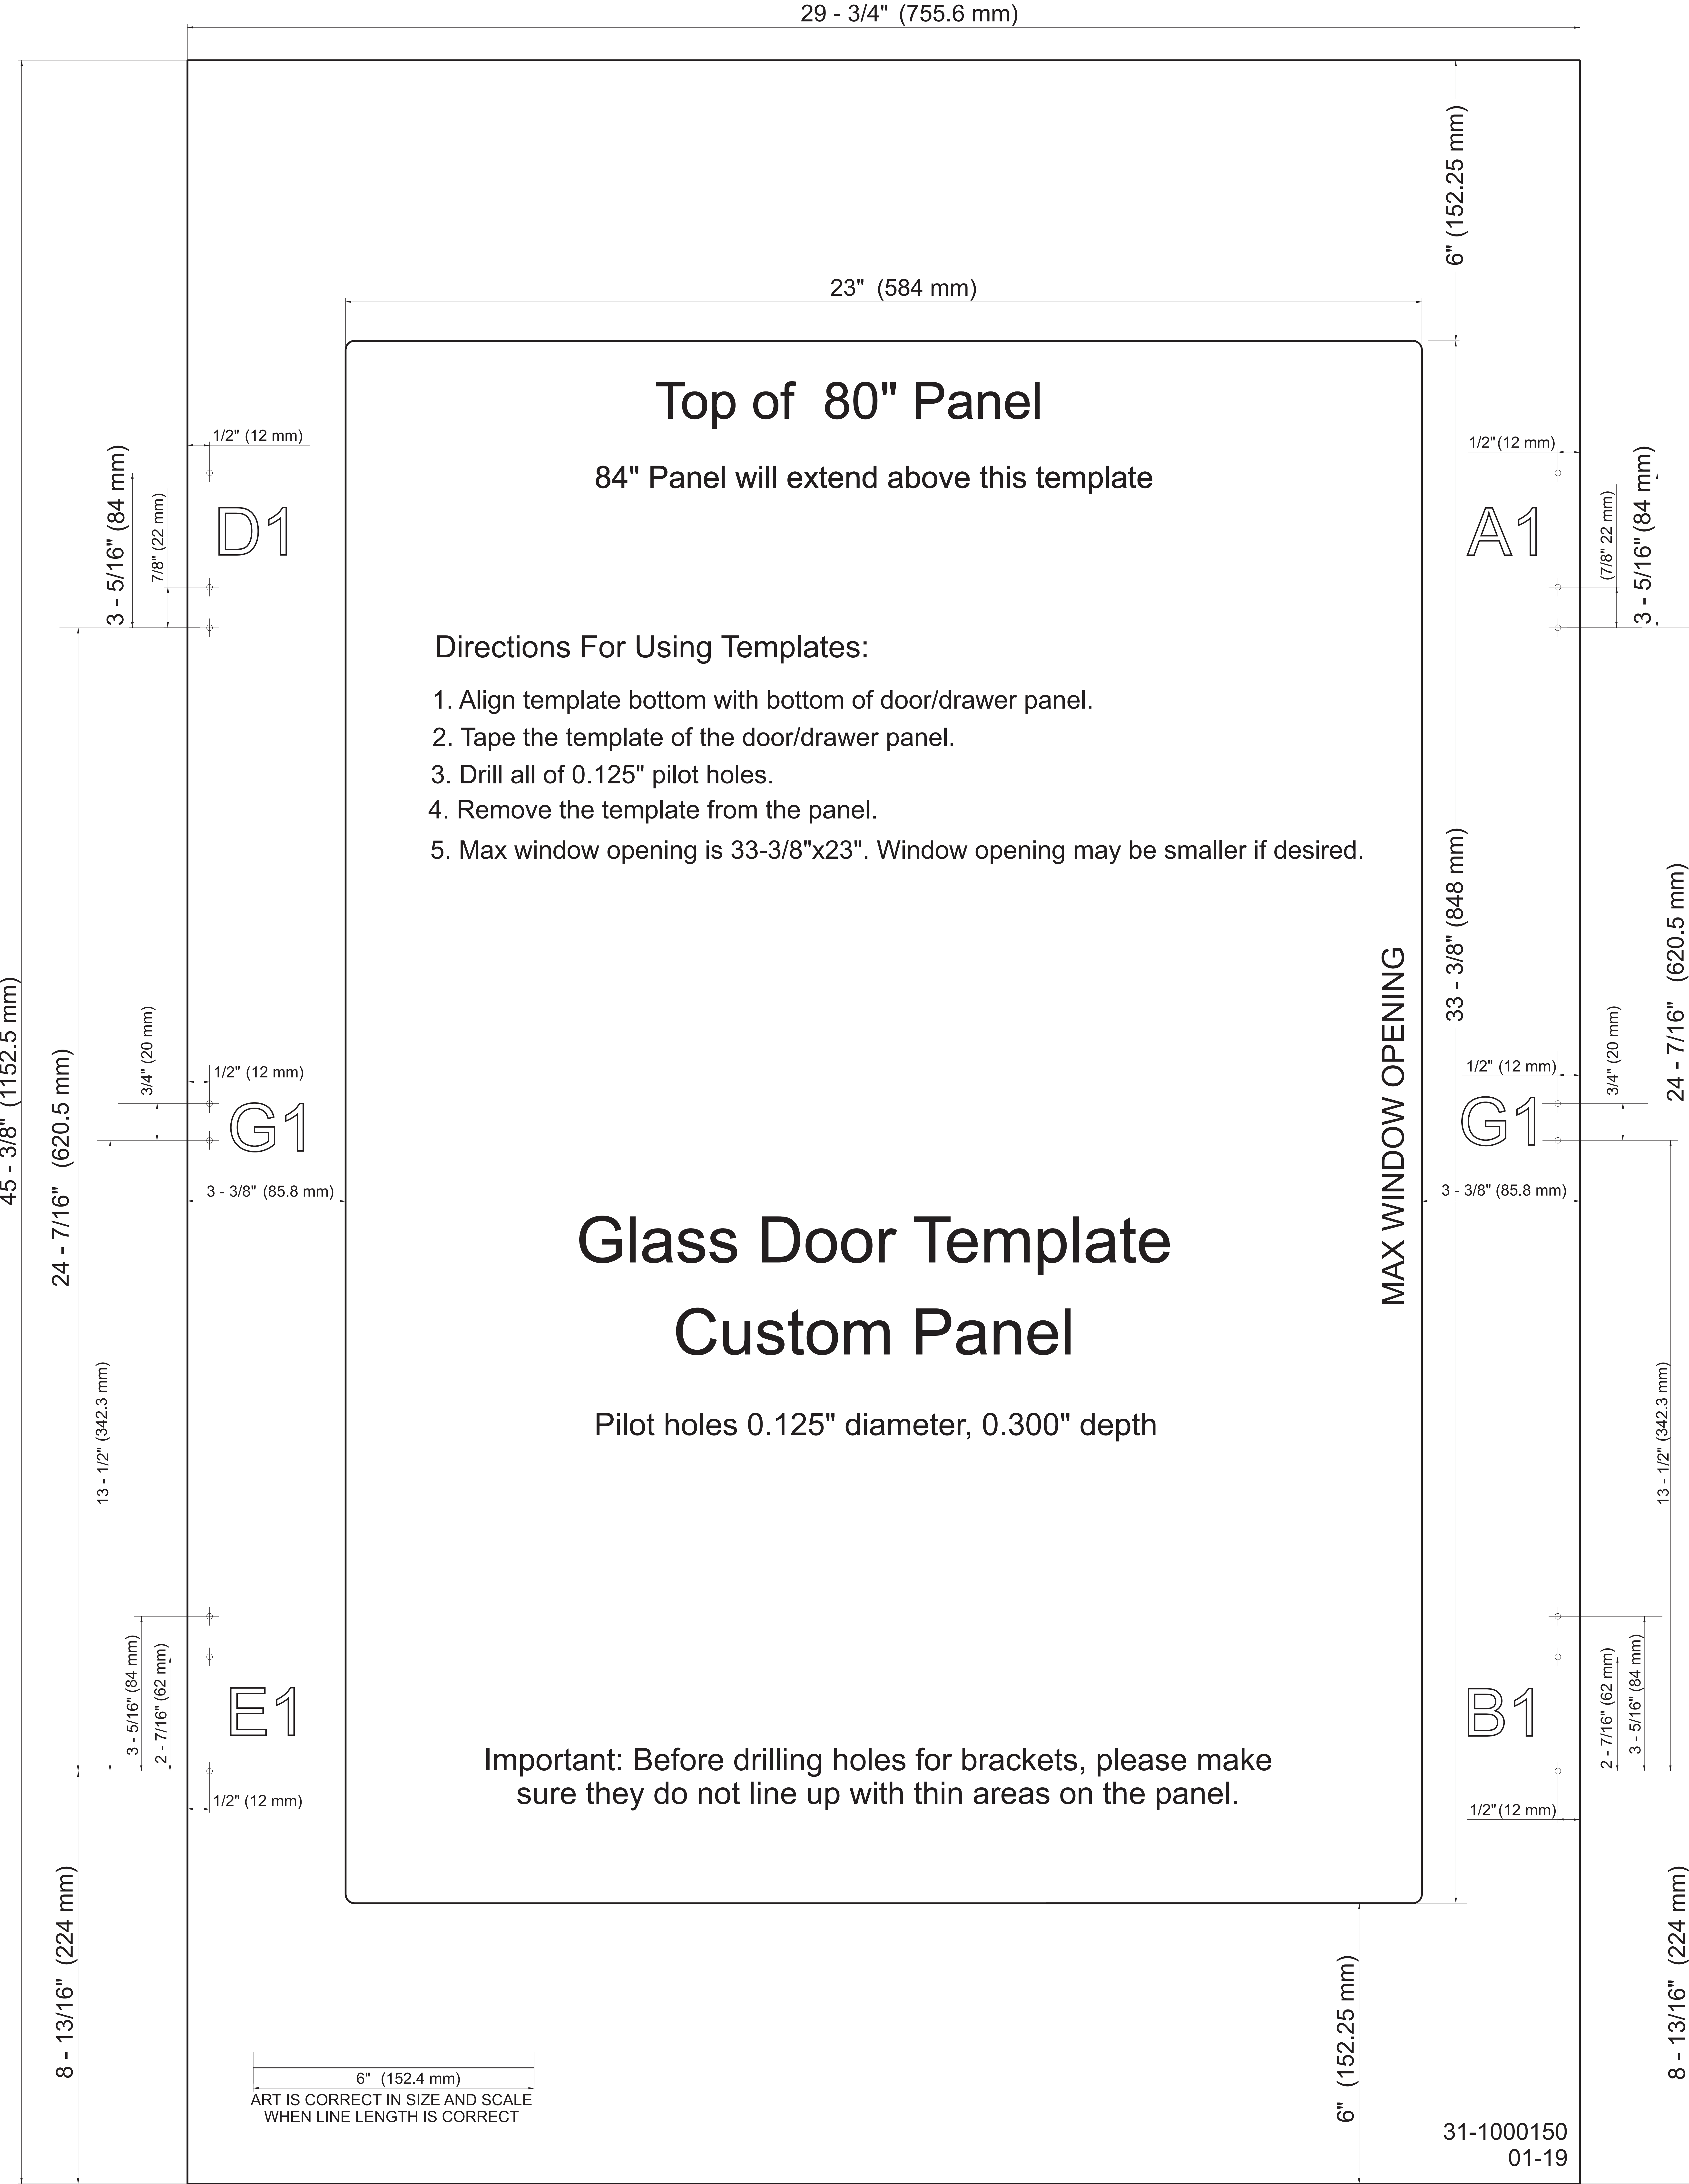

BACK VIEW

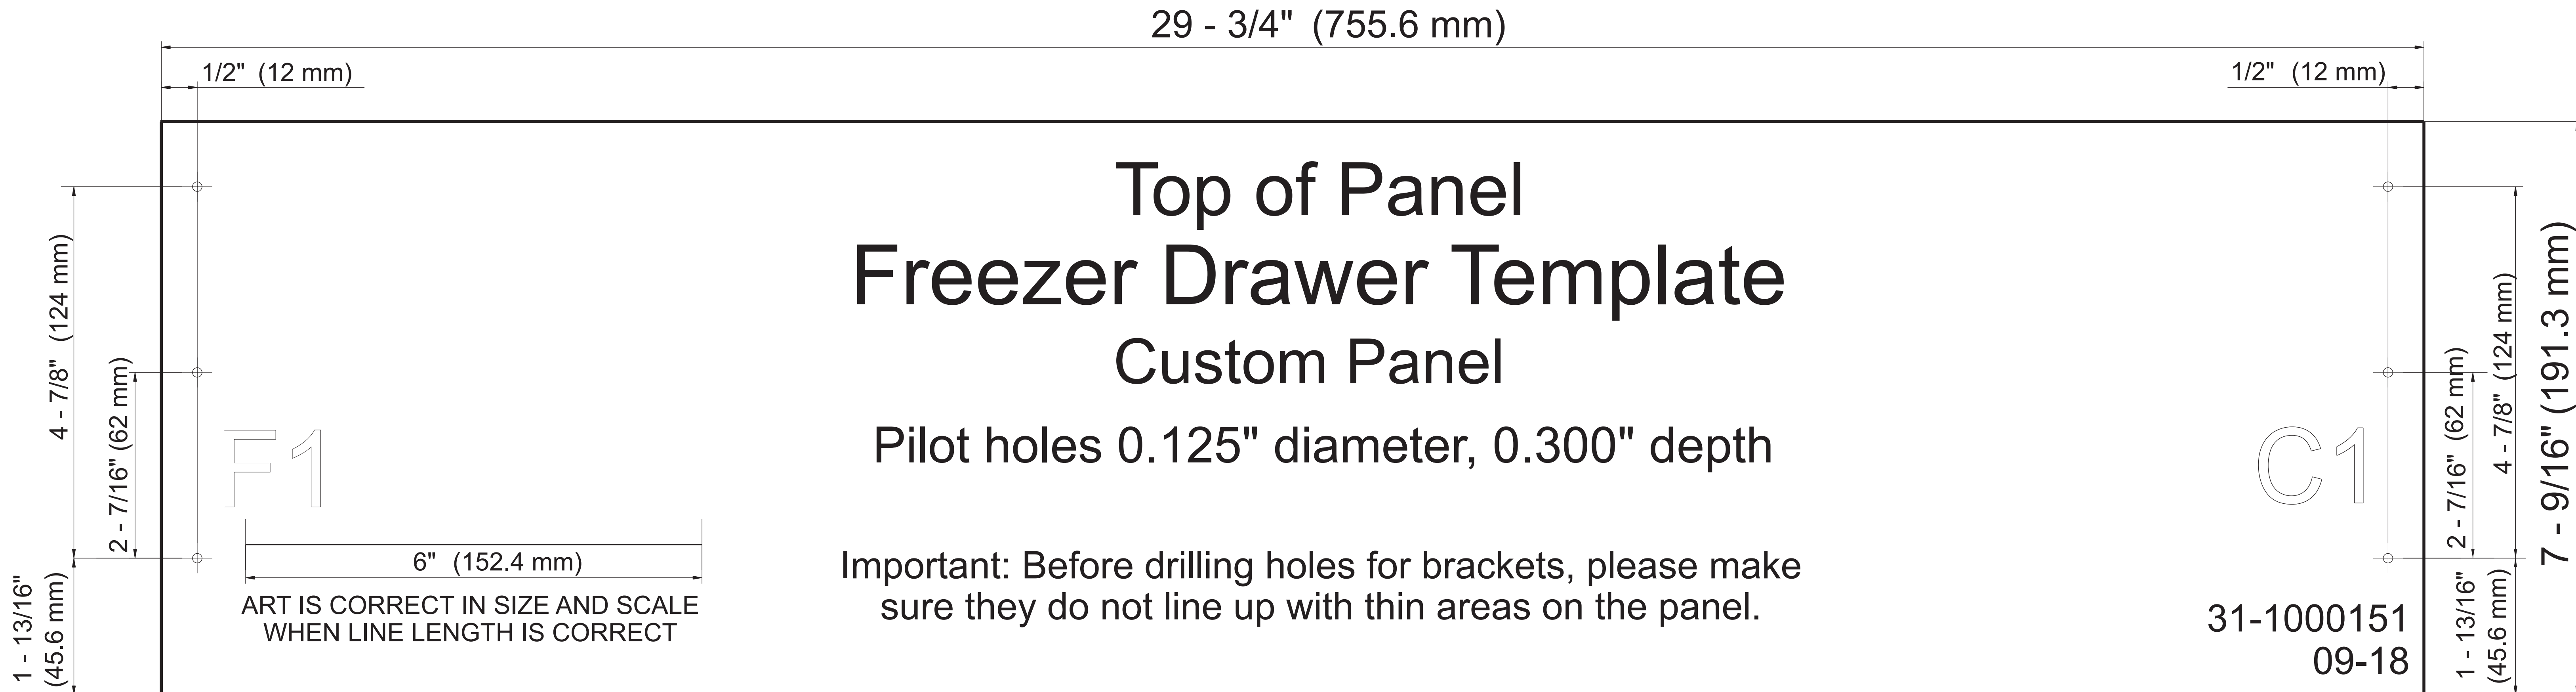

BACK VIEW

