


# INSTALLATION INSTRUCTIONS

## 357NDK DUCTLESS CONVERSION KIT FOR THRU SOFFIT VENTING

### FOR USE WITH PM390 POWER MODULE

1. Install PM390 per installation instructions shipped with power module.
2. Remove aluminum filters and replace with **combination filter** furnished with kit and aluminum filter that was removed.
3. Remove backdraft damper. (Damper supplied with power module.)
4. Install the 6" round to 7" round **transition** over exhaust of unit.
5. Connect **7" round duct** to transition.
6. Cut hole in bottom of **soffit** to allow clearance for the **90° angle boot**.
7. Locate center of **4¼" x 10¼" opening** on soffit - at **horizontal centerline of hood** and **25"** above top of **liner**.
8. Layout 4¼" x 10¼" pattern and cut opening in soffit.
9. Insert 90° angle boot into soffit opening and connect boot to 7" round duct.
10. Install **grille** (included) into soffit opening.
11. Use duct tape to make all connections secure and air tight.

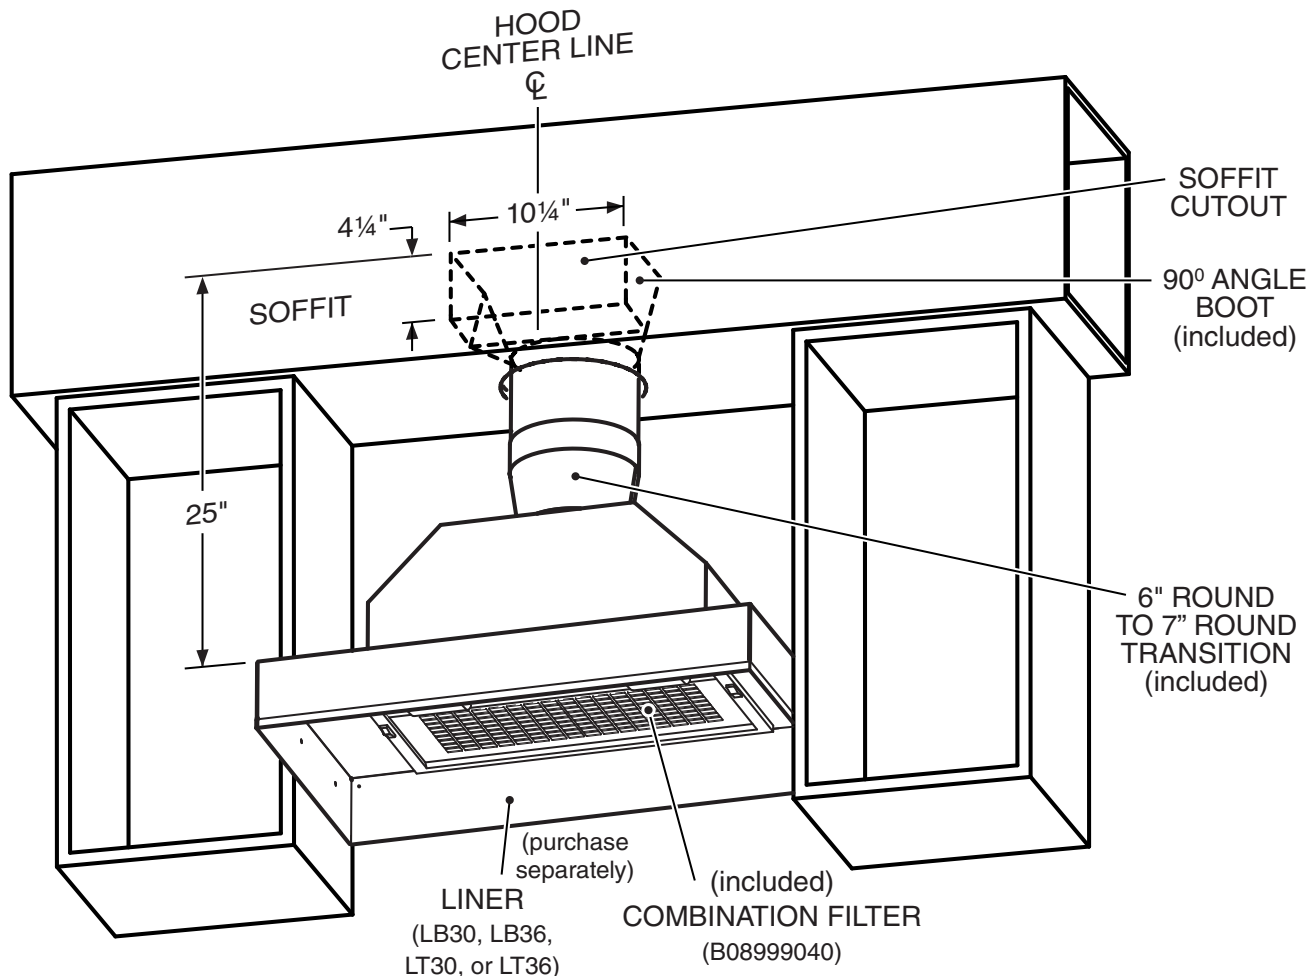

# DIRECTIVES D'INSTALLATION

## ENSEMBLE DE CONVERSION SANS CONDUITS 357NDK

### À SORTIE AU TRAVERS DE LA SOFFITE POUR MODULE MOTORISÉ PM390

1. Installez le module PM390 selon les directives d'installation qui l'accompagnent.
2. Enlevez les filtres d'aluminium et remplacez-les par le **filtre combiné** fourni avec l'ensemble et l'un des filtres d'aluminium enlevés.
3. Enlevez le clapet antirefoulement. (Le clapet est fourni avec le module motorisé.)
4. Installez la **transition** ronde de 15,2 cm (6 po) à 17,8 cm (7 po) sur la sortie de l'appareil.
5. Raccordez le **conduit rond de 17,8 cm (7 po)** à la transition.
6. Découpez une ouverture dans la **soffite** pour permettre le passage de la **gaine coudée à 90°**.
7. Localisez le centre de l'**ouverture de 10,8 x 26 cm (4¼ x 10¼ po)** sur la soffite – vis-à-vis la **ligne de centre horizontale de la hotte** et à **63,5 cm (25 po)** au-dessus du haut de la **jupe de la hotte**.
8. Tracez un rectangle de 10,8 x 26 cm (4¼ x 10¼ po) et découpez l'ouverture dans la soffite.
9. Insérez la gaine coudée à 90° dans l'ouverture de la soffite et raccordez-la au conduit rond de 17,8 cm (7 po).
10. Installez la **grille** (incluse) dans l'ouverture de la soffite.
11. Utilisez du ruban pour canalisations pour fixer solidement tous les raccords et assurer leur étanchéité.

