


Directions for Applying Overlay Panel

Materials Supplied:

- 1 - Drill Bit 3/16"
- 4 - Screws M4 x 25 Flat Hd Phillips (For Handle)
- 8 - Screws #10 x 2.25" Phillips

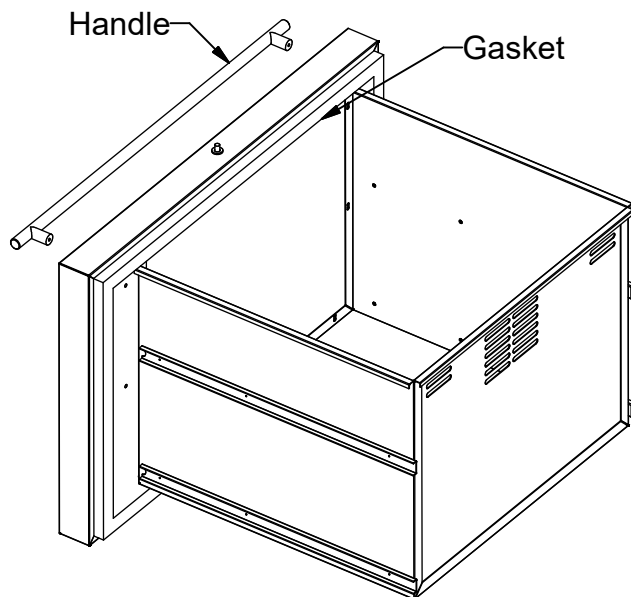



Step 1

- 1) Remove both drawers from unit by opening drawers and pushing in black tabs on either side of the slides. You must hold in tabs to disengage slide.
- 2) Peel back gasket (Fig A) and remove 2 screws to remove handle.
- 3) Throw out the 2 screws that attach the handle.

Step 2


- 1) Drill the bottom 2 holes shown in the drawing using the supplied drill bit on the drawer front.
- 2) Cut overlay panels as follows:
 - Top (outdoor unit): 23-7/16 x 16-5/16
 - Top (indoor unit): 23-7/16 x 15-11/16
 - Bottom (outdoor unit): 23-7/16 x 13-3/16
 - Bottom (indoor unit): 23-7-16 x 12-9/16

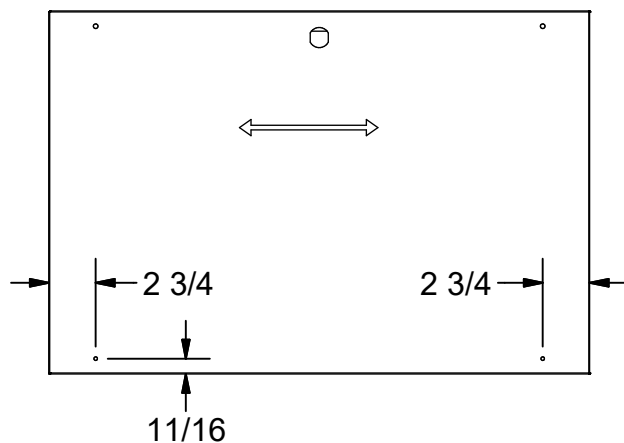

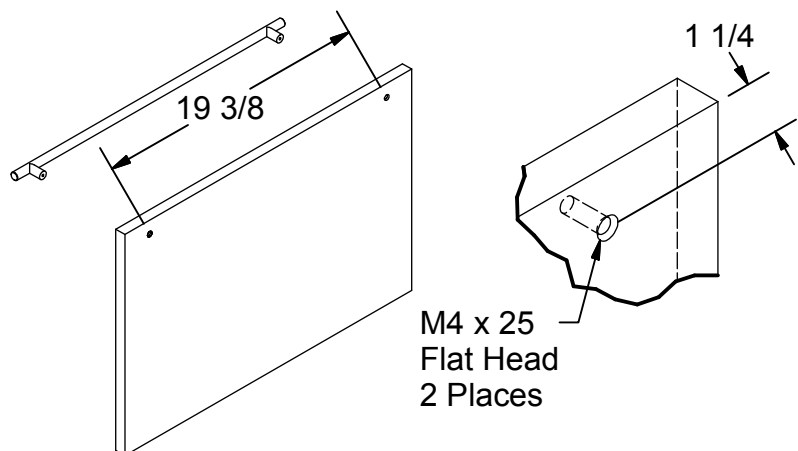

Step 3

- 1) If reusing the handle that came with the unit, drill two holes 19 3/8" apart and a minimum of 1 1/4" from the top.
- 2) Screw handle on using the supplied screws. Drive screws flush with panel. Screws are designed for 3/4" overlay panel. If thickness other than this is used, customer will supply.

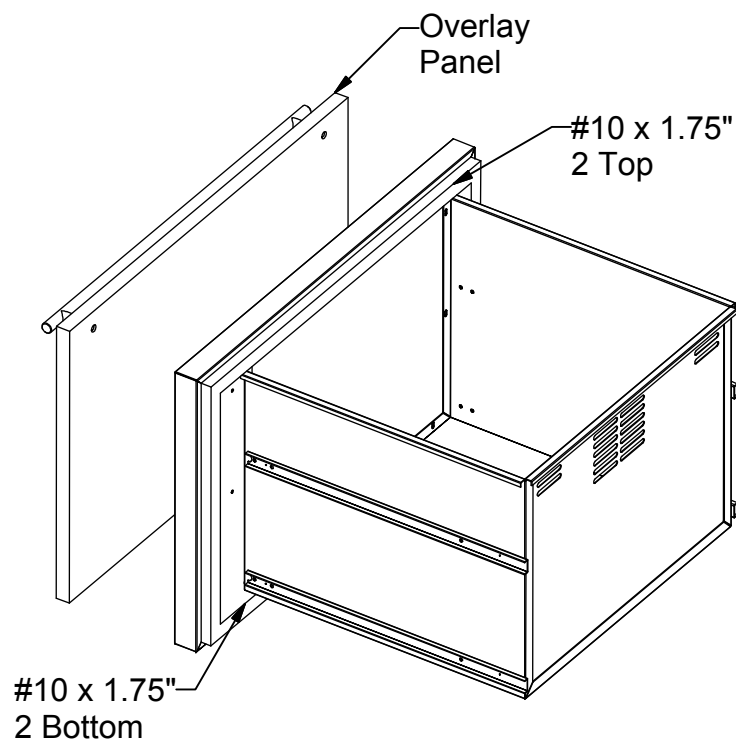

Step 4

- 1) Peel back the gasket and attach the overlay panel to the drawer face using the 4 supplied screws and thru the 4 existing clearance holes.
- 2) Install both drawers back into unit.