

2100 Lifestyles Collection

1 amazing seating experience, 5 beautiful styles!



2100 Casual

Reduces Outside Width by 2" per arm



2100 Classic



2100 Modern

Reduces Outside Width by 3.5" per arm




2100 Traditional

Reduces Outside Width by 4" per arm




2100 Transitional

Reduces Outside Width by 3.5" per arm

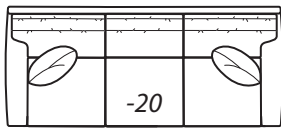


-20 Sofa

Outside: 97W Inside: 79W
COM: S

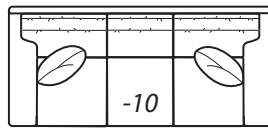


-10 Sofa

Outside: 88W Inside: 70W
COM: R

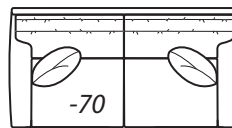


-70 Sofa

Outside: 78W Inside: 63W
COM: P

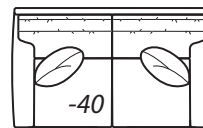

-40 Loveseat

Outside: 71W Inside: 53W
COM: P

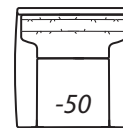


-50 Chair

Outside: 43W Inside: 25W
COM: I




-55 Ottoman
24W X 19D X 18H
COM: D

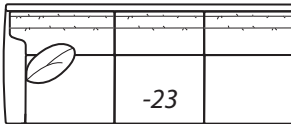


-23 Left Arm Sofa

One Arm Sofa

Outside: 99W
Inside: 90W
COM: R

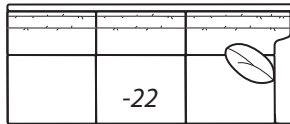


-22 Right Arm Sofa

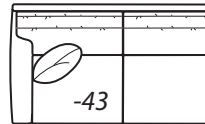


-43 Left Arm Loveseat

One Arm Loveseat

Outside: 70W
Inside: 61W
COM: N

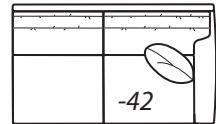


-42 Right Arm Loveseat

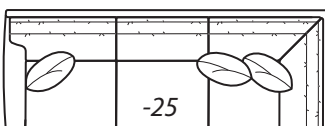


-25 Left Arm Corner Sofa

One Arm Corner Sofa

Outside: 111W
Inside: 84W
COM: Y

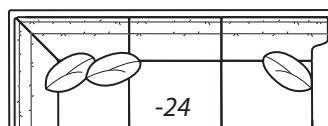


-24 Right Arm Corner Sofa



-51 Armless Chair

Outside: 29W Inside: 29W
COM: H

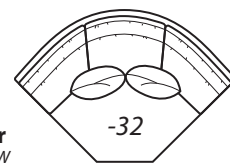

-32 Round Corner

Outside: 74W
Inside: 16W
Wall Depth: 52
COM: O



-31 Square Corner

Outside: 40W
Inside: 23W
COM: K

Overall Height	Overall Depth	Inside Depth	Seat Height	Seat Cushion
38	40	23	19	UD

Width measurements based on widest arm style, the Classic. Overall width will vary by style option: Casual: -2" per arm, Modern & Transitional -3.5" per arm, and Traditional -4" per arm. All dimensions listed are approximate.

Arm Height: 2100 Casual, 2100 Classic, 2100 Modern & 2100 Transitional 24", 2100 Traditional 23"