

Before installing baffle filters into your Power Pack the light panels must be re-positioned.

Light Panel Conversion

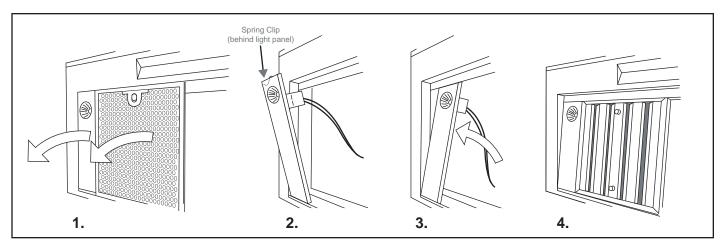


FIG 1

- 1. Light panel is flush with the bottom of the Power Pack. Remove decorative mesh filter.
- 2. Remove each light panel by pressing down on the spring clip behind the top of the light panel. Pull light panel out.
- 3. Postion top of light panel into the Power Pack and pivot up. Lock light panel in place so it is angled inwards.
- 4. Light panel shown is angled inwards. Install baffle filters.

Baffle Filter Installation

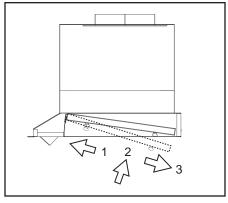


FIG 2

- 1. Insert baffle filter as shown into front of Power Pack frame.
- 2. Pivot baffle filter up so it is angled in the Power Pack.
- 3. Push baffle filter towards wall to lock into place.

OCT07.0101 www.zephyronline.com