



Duct Cover Hood Compatibility

AK0736AS AK7836ASX AK0742AS AK7842ASX AK0748AS AK7848ASX

1. Line up screw holes and attach the left and right side panels to the center panel with screws provided.

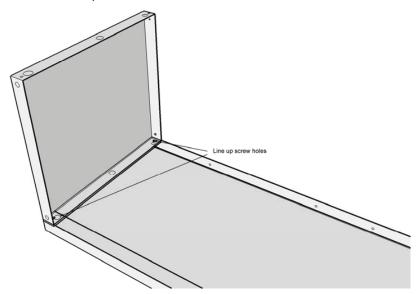

- 2. Place assembled duct cover on top of hood. Make sure the screw holes of the center panel are facing down and line up with the holes on top of hood.
- 3. Attach the duct cover to the top of hood by securing the rest of the screws to it from within the inside of the hood.

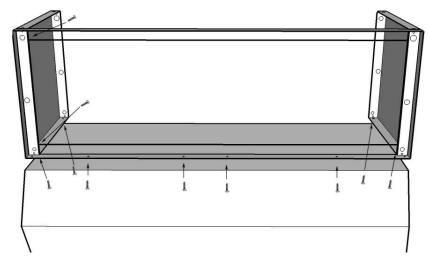

Zephyr Corporation

2277 Harbor Bay Pkwy, Alameda, CA 94502 Tel: 1.888.880.8368 Fax: 1.888.990.8368 e-mail: productsupport@zephyronline.com