


(refer pages 3-4 for metrical measurements)

* Maximum height with chimney extension accessories 55 1/8".

Note: Minimum installation height may be greater if required by your cooktop. Refer to cooktop installation instructions.

INDICATES CABINETRY CLEARANCES

90003065A



FISHER & PAYKEL

DATA SHEET


Wall Range Hood, 36", Box Chimney

Model nos:


HC36DCXB4

(refer pages 3-4 for metrical measurements)

Product Dimensions	In
Ⓐ Lower range hood attachment point width	22 13/16"
Ⓑ Lower range hood attachment point height	1 7/16"
Ⓒ Upper range hood attachment point height	11 5/16"
Ⓓ Chimney bracket attachment point height	22"
Ⓔ Light length	28 9/16"
Ⓕ Distance from center of light to front of product	2 3/16"

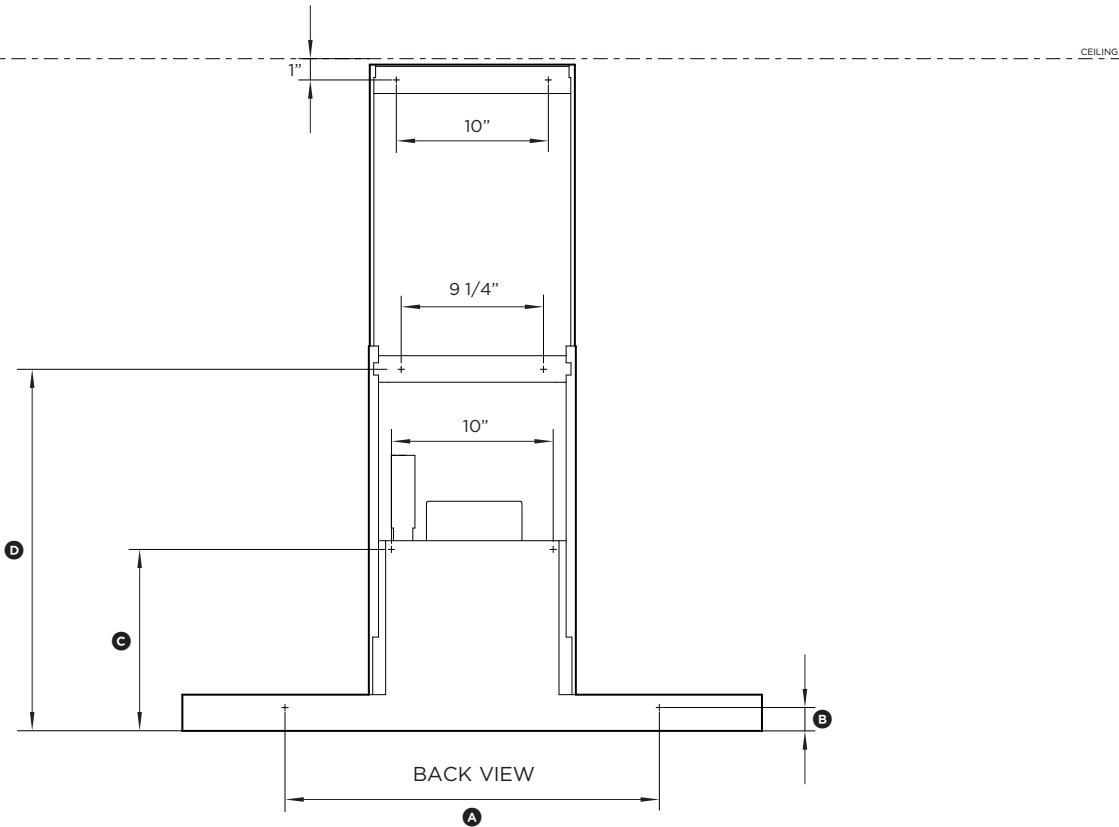

DATUM: REAR OF PRODUCT

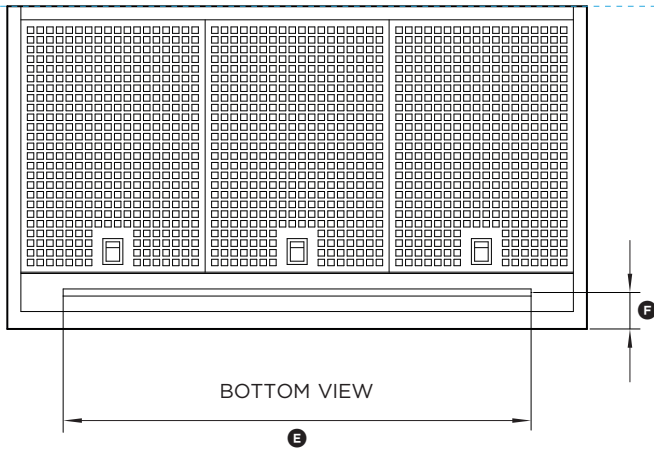

INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

DATE: 24.08.2023

90003065A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

FISHER & PAYKEL

DATA SHEET

Wall Range Hood, 36", Box Chimney

Model nos:

HC36DCXB4


(refer pages 1-2 for imperial measurements)

Product Dimensions	mm
Ⓐ Maximum height of range hood*	1035
Ⓑ Minimum overall height - recirculating	675
Ⓒ Minimum overall height	635
Ⓓ Overall width of range hood	898
Ⓔ Overall depth of range hood	500
Ⓕ Height of canopy	55
Ⓖ Width of chimney	320
Ⓜ Depth of chimney	290
① Distance from center plane to hard wiring box center	129
② Distance from back of product to center of wiring box	150
Ⓧ Ducting outlet diameter	150
③ Distance from center of ducting outlet to back of product	85
Ⓢ Height of datum to top of lower chimney section	595

* Maximum height with chimney extension accessories 1400mm.

Minimum distance above cooktops	mm
Height from base of product to cooking surface	min 610

Note: Minimum installation height may be greater if required by your cooktop. Refer to cooktop installation instructions.

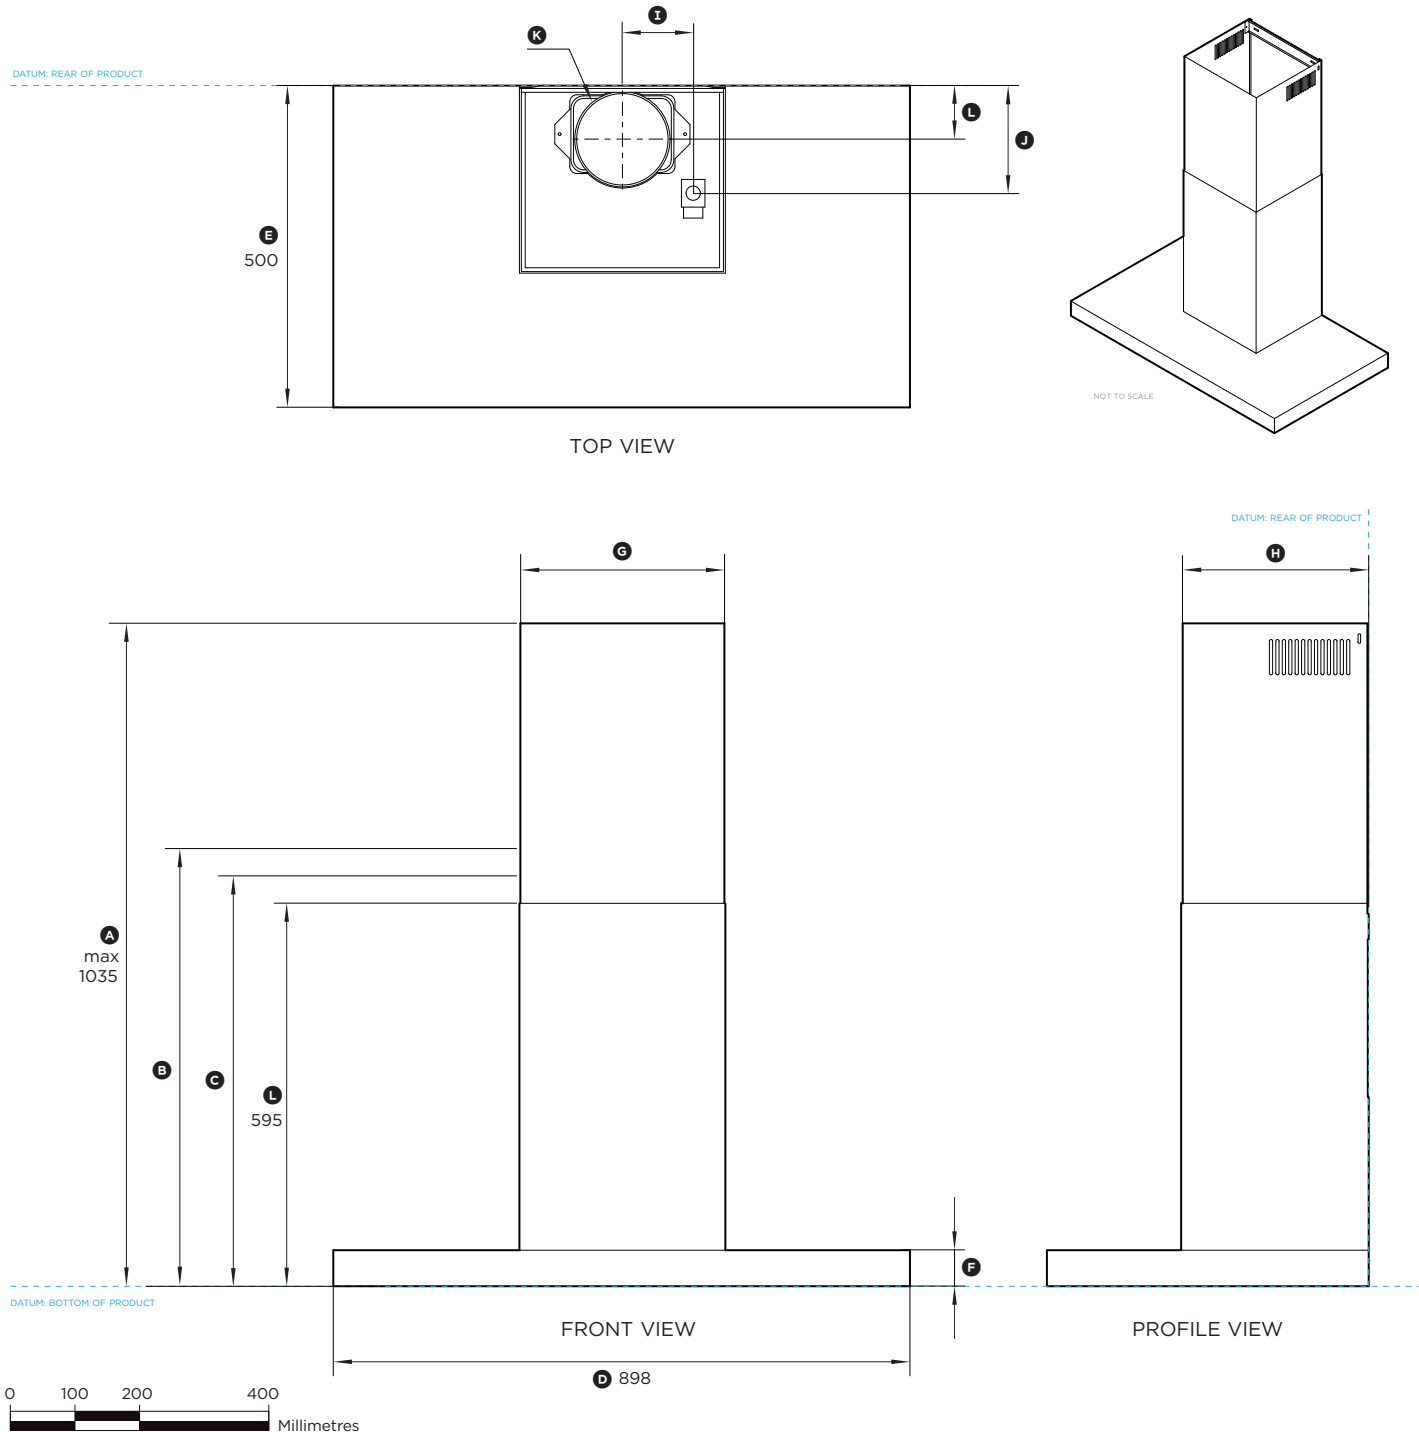

INDICATES PRODUCT DATUM
INDICATES CABINETRY CLEARANCES

DATE: 24.08.2023

90003065A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

FISHER & PAYKEL

DATA SHEET


Wall Range Hood, 36", Box Chimney

Model nos:


HC36DCXB4

(refer pages 1-2 for imperial measurements)

Product Dimensions	mm
Ⓐ Lower range hood attachment point width	580
Ⓑ Lower range hood attachment point height	36
Ⓒ Upper range hood attachment point height	288
Ⓓ Chimney bracket attachment point height	558
Ⓔ Light length	725
Ⓕ Distance from center of light to front of product	55

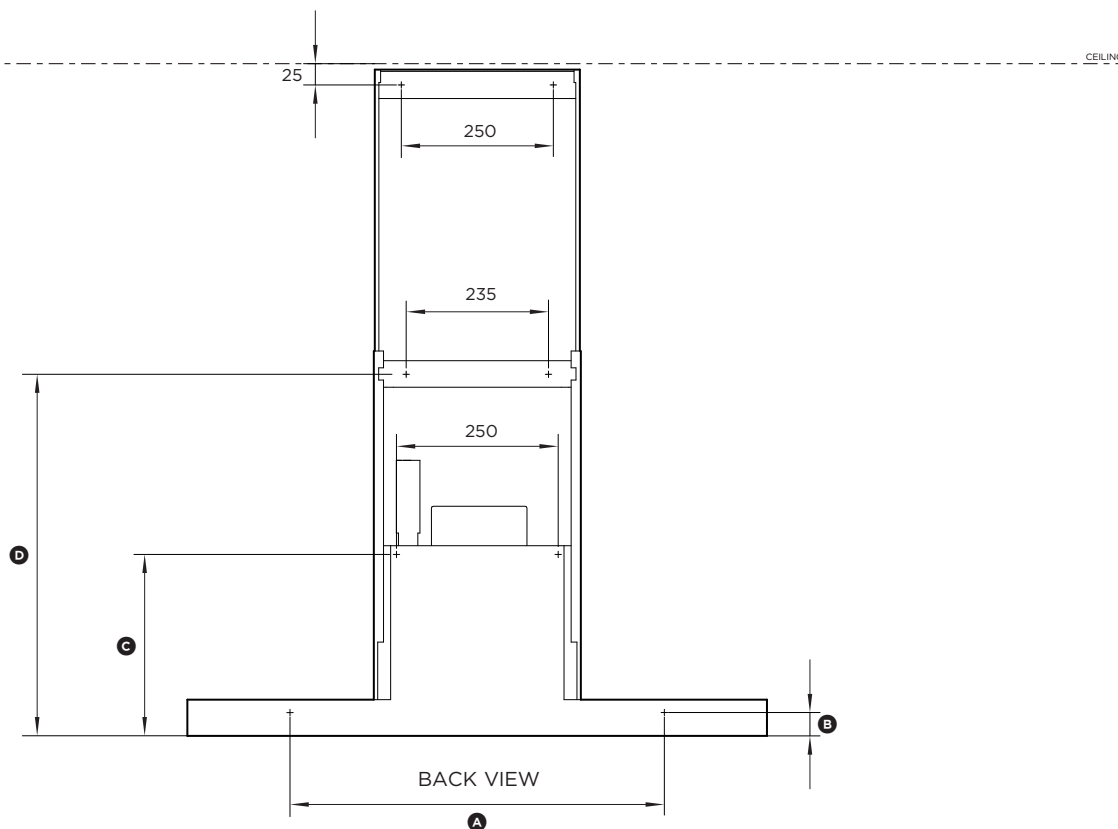

DATUM: REAR OF PRODUCT

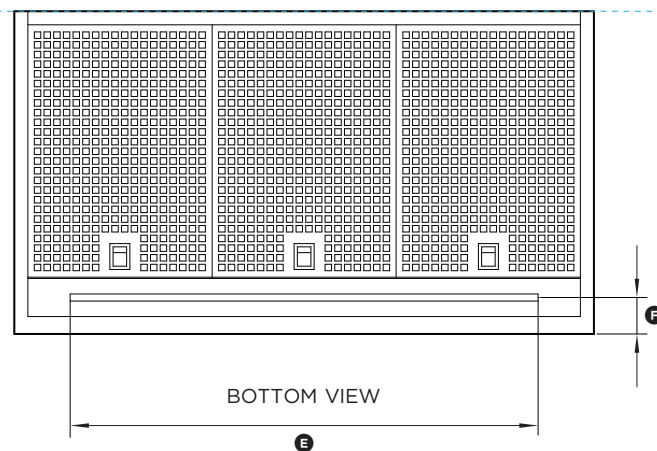

INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

DATE: 24.08.2023

90003065A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ± 2 mm (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com