

FISHER & PAYKEL

DATA SHEET 30" Gas on Steel Cooktop

Model no:

CG305DNGX1, CG305DLPX1

(refer page 2 for metric measurements)

Dimensions	in
Ⓐ Height of chassis (below top of countertop)	2 5/16"
Ⓑ Overall width of cooktop	29 1/2"
Ⓒ Overall depth of cooktop	20 7/8"
Ⓓ Height from counter datum to top of cooktop surface	1/4"
Ⓔ Depth of front control panel	3 3/8"
Ⓕ Depth of cooktop cooking area	17 3/8"
Ⓖ Width of chassis	27 3/4"
Ⓗ Depth of chassis	19 3/8"
① Distance from top of counter to centre of gas inlet on product	1 3/16"

Minimum Clearances	in
Minimum clearance from left edge of product to nearest vertical surface	5 1/8"
Minimum clearance from right edge of product to nearest vertical surface	4 1/2"
Minimum clearance from rear edge of product to nearest combustible surface	6 5/16"
Minimum clearance from rear edge of product to nearest non-combustible surface	1 3/4"
Minimum clearance from front edge of counter to front edge of product	1 1/4"
Minimum clearance from cooking surface to combustible surface centered above the cooking surface	30"
Maximum overall depth of overhead cabinetry	13"
Minimum clearance below top of countertop to nearest combustible surface	2 3/4"
Minimum clearance below top of countertop to Fisher & Paykel oven or nearest non-combustible surface	2 9/16"

Cutout Dimensions	in
Overall width of cutout*	27 3/4"
Overall depth of cutout*	19 1/2"

* Note cutout position is centred to the cooktop width but offset to the cooktop depth. Cutout front depth is 7/16" from the front edge of the product.

INDICATES CABINETRY / PRODUCT DATUM -----


INDICATES CABINETRY CLEARANCES -----

INDICATES CUTOUT -----

DATE : 9.11.2023

90001655B

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

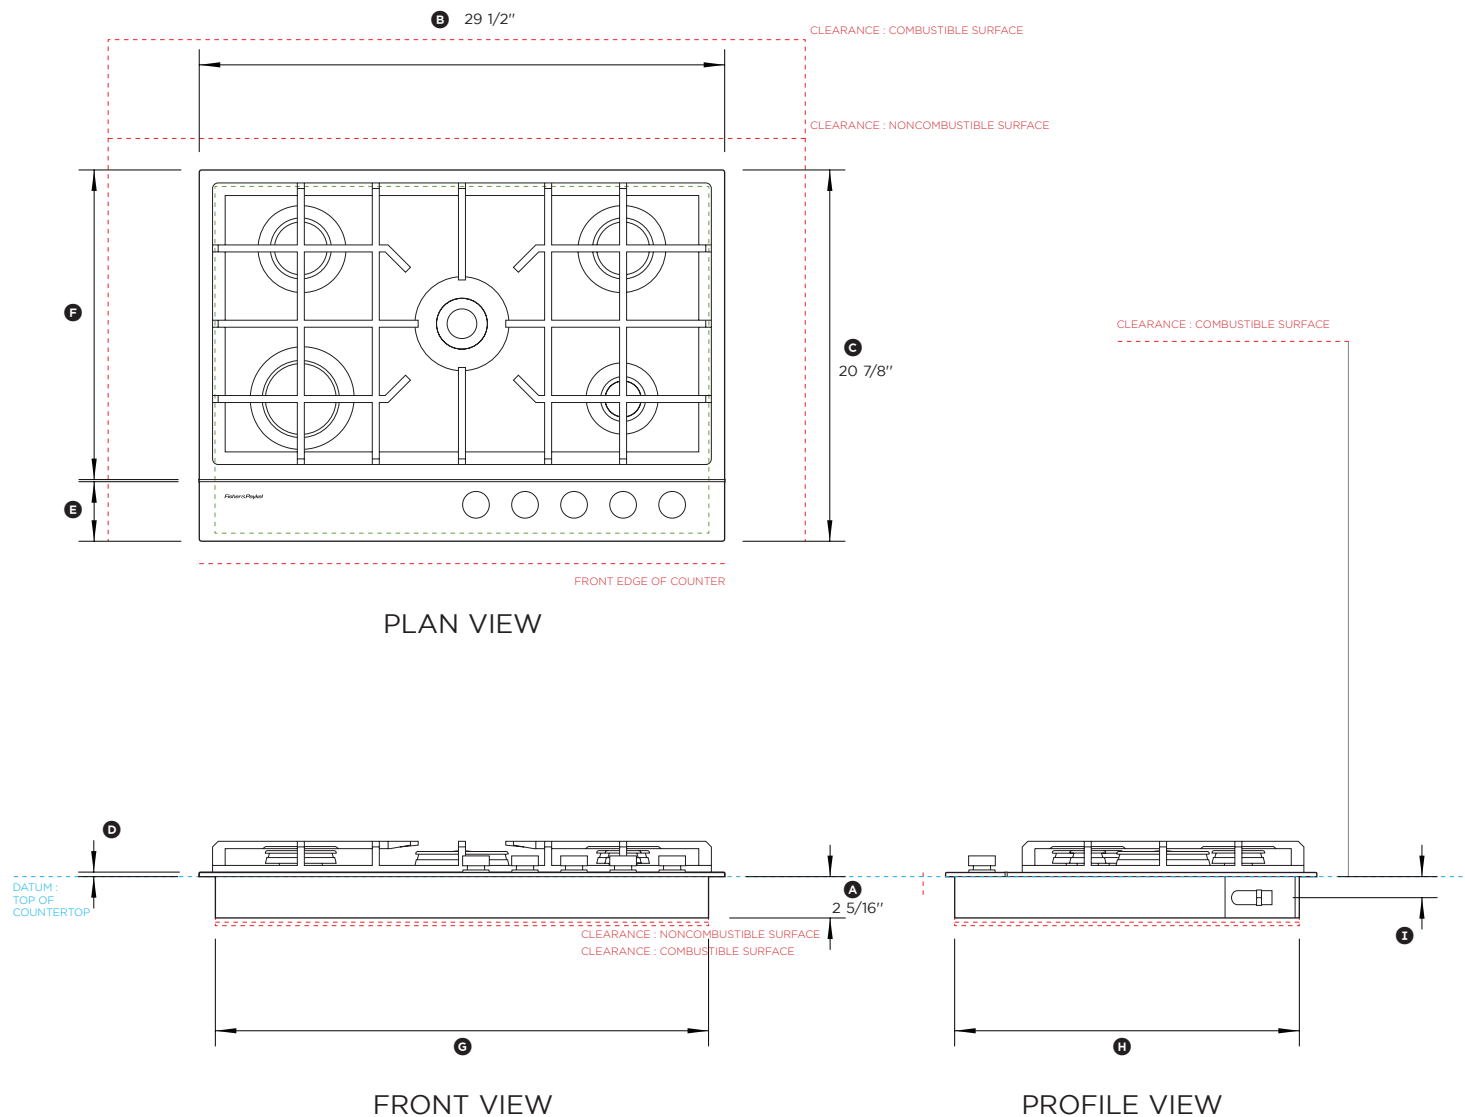

FISHER & PAYKEL

DATA SHEET 30" Gas on Steel Cooktop

Model no:
CG305DNGX1, CG305DLPX1
(refer page 1 for imperial measurements)

Dimensions	mm
Ⓐ Height of chassis (below top of countertop)	59
Ⓑ Overall width of cooktop	750
Ⓒ Overall depth of cooktop	530
Ⓓ Height from counter datum to top of cooktop surface	6
Ⓔ Depth of front control panel	85
Ⓕ Depth of cooktop cooking area	442
Ⓖ Width of chassis	704
Ⓗ Depth of chassis	492
⓫ Distance from top of counter to centre of gas inlet on product	30

Minimum Clearances	mm
Minimum clearance from left edge of product to nearest vertical surface	130
Minimum clearance from right edge of product to nearest vertical surface	115
Minimum clearance from rear edge of product to nearest combustible surface	186
Minimum clearance from rear edge of product to nearest non-combustible surface	45
Minimum clearance from front edge of counter to front edge of product	32
Minimum clearance from cooking surface to combustible surface centered above the cooking surface	762
Maximum overall depth of overhead cabinetry	330
Minimum clearance below top of countertop to nearest combustible surface	70
Minimum clearance below top of countertop to Fisher & Paykel oven or nearest non-combustible surface	65

Cutout Dimensions	mm
Overall width of cutout*	705
Overall depth of cutout*	495

* Note cutout position is centred to the cooktop width but offset to the cooktop depth. Cutout front depth is 7/16" from the front edge of the product.

INDICATES CABINETRY / PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----
INDICATES CUTOUT -----

DATE : 9.11.2023 90001655B

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

