

LG STUDIO

SDNTHS72S  
Top Control Wi-Fi Enabled Dishwasher


FlushFit™ Design

1-Hour wash & Dry

Quadwash Pro

Dynamic Heat Dry with AutoVent™ Dry


BlastZone Bottle Wash™

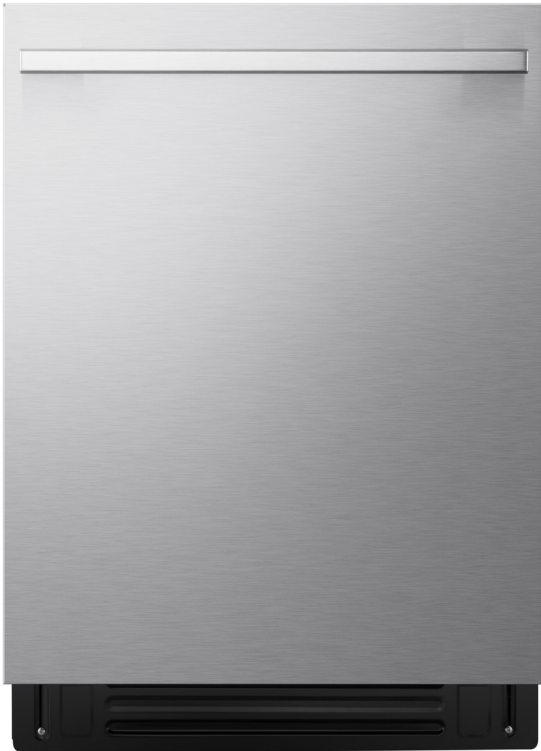

CAPACITY	
Total Place Setting	16 Place Setting
Maximum Height of Upper Rack	7.1 inch (180mm)
Maximum Height of Lower Rack	12.5 inch (320mm)
RACKS AND BASKETS	
Easy Rack Plus	Yes
Fold Down Tines	Upper: All Foldable Lower: Half Smart FD & Half Normal FD
Rack Handle / Deco	Yes
Rack Color (Handle / Tine)	Dark Grey
Cup Rack	Yes
Cup Rack Color	Cup Rack (Dark Grey), Rubber (Noble Gray)
Height Adjustable	Easy One Touch (3 Level)
Cutlery Baskets	Yes
3rd Rack	Yes, Normal Rail
Gliding Type	Upper: Gliding Rail Lower: Gliding Wheel
STYLE AND DESIGN	
Colors	PrintProof™ Stainless Steel
Remaining Time Indicator	Cycle Track™ Floor Display
Tub Material	Stainless Steel
Tub Light	Top Light
Touch	Yes
Control Panel (Location)	Top Control (Hidden Display)
Handle	Bar Handle
FEATURES	
No. Wash Cycles	5 (Auto, Heavy, Normal, 1-Hour; Download Cycle)
No. of Options	6 (Steam, High Temp, Dry Boost, Delay Start, Control Lock, Remote, Wi-Fi AP Mode)
TrueSteam™	Yes
Quadwash	Yes
Bottle Wash	Yes
SenseClean Wash System	Yes
Vario Wash	Yes
No. of Spray Arms	4 (Top, Upper, Lower, Bottle)
Detergent and Rinse-Aid Dispenser	Yes
Drying System	Dynamic Heat Dry with AutoVent™ Dry
End of Cycle Indicator	Beeper + END Indication on Display
Hidden Water Heater	Yes
Safety Float Switch (Leaks)	Yes
Soil (Turbidity) Sensor	Yes
Direct Drive Motor™	Yes

LoDecibel Quiet Operation	39dB
Tub Insulation	Damping Sheet, Sound Absorbing Material
BPA-Free Nylon Coated Racks and Tines	Yes
Anti-Bacterial Treatment (Drain Hose)	Yes
Balance Door	Yes
QUAD ARM	
STS Deco	Yes
Body Color	Pearl Dark Grey
Nozzle Color	Orange
SMART FEATURES	
Wi-Fi Enabled	Yes
POWER RATINGS	
ENERGY STAR® Qualified	Yes
Most Efficiency	Yes
CEE Tier	1
Energy Use (kWh/Year)	220
Water Use (Gallons/Cycle)	2.9
DIMENSIONS /CLEARANCES/WEIGHT	
Product (W x H x D)	23 3/4" x 33 5/8" x 23 3/4"
Depth with Door Closed (Handle)	23 3/4" (603mm) / 26 1/8" (664mm)
Depth with Door Open	48 1/2"
Carton Dimensions (W x H x D)	28 1/32" x 29 5/8" x 34 7/8"
Clearance (W x H x D)	24" x 24" x 33 5/8"
Weight (Unit / Carton)	93lbs / 104lbs
Container Stuffing Quantity	140
LIMITED WARRANTY	
Parts and Labor	2 Year
Main Control Board and Rack Parts	5 Year Limited
Stainless Steel Door Liner and Tub	5 Years
Direct Drive Motor	10 Years
UPC CODES	
SDNTHS72S	048231348119





## SDNTHS72S

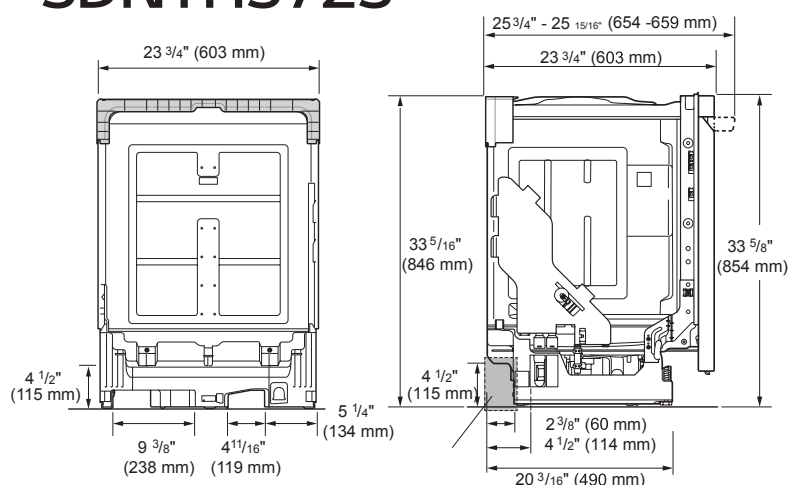

## DIMENSIONS

Product (W x H x D)	23 3/4" x 33 5/8" x 23 3/4"
Depth with Door Closed (Handle)	23 3/4" (603mm) / 26 1/8" (664mm)
Depth with Door Open	48 1/2"
Carton Dimensions (W x H x D)	28 1/32" x 29 5/8" x 34 7/8"
Clearance (W x H x D)	24" x 24" x 33 5/8"
Weight (Unit / Carton)	93lbs / 104lbs
Container Stuffing Quantity	140
Depth when lower door is fully opened	42 3/16" (1072.2mm)

- This dishwasher is designed to fit a standard dishwasher opening. An opening may be needed on both sides to route plumbing and electrical connections.
- Select a location as close to the sink as possible for easy connections to water supply line, drain hose and electrical connection.
- To ensure proper drainage, install the dishwasher no more than 12 ft. (3.65 m) from the sink.
- The location must have sufficient space for the dishwasher door to open easily and provide at least 0.1" (2 mm) between the dishwasher and the cabinet sides.
- If installing the dishwasher in a corner, leave a minimum of 2" (50 mm) between the dishwasher and the adjacent wall. The adjacent wall must be free of obstructions.
- To allow for proper clearance of plumbing and electrical, use the template included with the literature to determine the clearance on the side of the cabinet where the cabinet meets the back wall. Using a 2 1/2" diameter hole saw, drill a hole in the target area as shown on the template.
- If an extension drain hose is required, use a 5/8" or 7/8" inside diameter, 2–3 ft. length hose and a coupler for connecting the two hose ends.
- For flush installations only, you may remove the cabinet brace ① inside the cabinet.

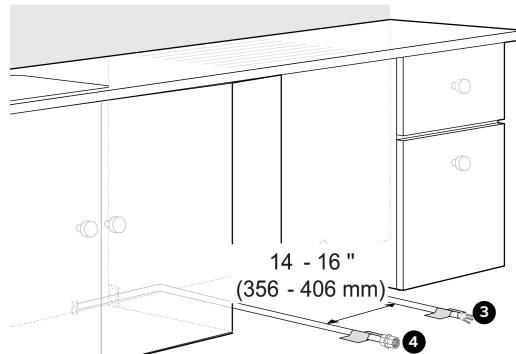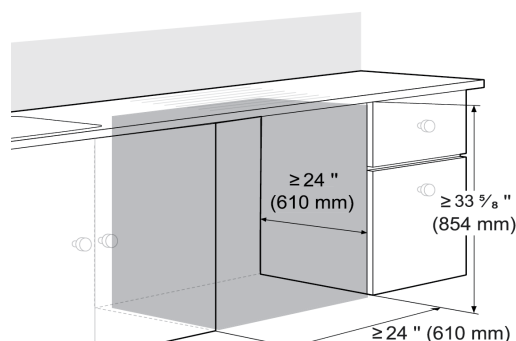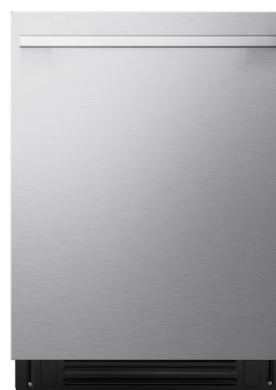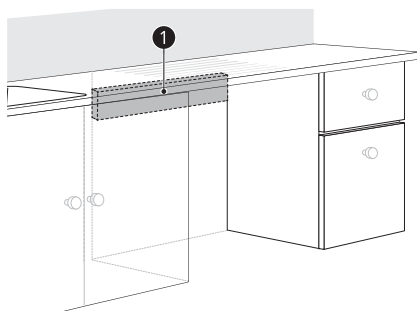

- ① ④ Water Supply Line
- ② ③ Electrical Cable

