

# USER GUIDE & SERVICE MANUAL



FRONT-VENTING REFRIGERATORS AND FREEZERS

## WELCOME TO U-LINE

Congratulations on your U-Line purchase. This product is part of our U-Line by Desmon Collection. Made by our sister company, Desmon in Italy, one of Europe's leading producers of commercial refrigeration products. It is designed and certified for commercial applications in North America.

U-Line offers products focused on functionality, style, and inspired innovations — paying close attention to even the smallest details. Applications include residential, outdoor, ADA height compliant, marine, and commercial. Complete product categories include Beverage Centers, Wine Refrigerators, Ice Machines, Refrigerators, Freezers, and Dispensers.

Our advanced refrigeration systems, large and flexible capacities, and Built-In to Stand Out® clean integrated look allow you to preserve the right product, in the right place, at the right temperature. Since 2014, U-Line has been part of the Middleby family of brands. Most products are designed, engineered, and assembled in Milwaukee, Wisconsin, USA, and select products are available worldwide.

## PRODUCT INFORMATION

Looking for additional information on your product? User Guides, Spec Sheets, CAD Drawings, Compliance Documentation, and Product Warranty information are all available for reference and download at [u-line.com](http://u-line.com).

## PROPERTY DAMAGE / INJURY CONCERNS

In the unlikely event property damage or personal injury is suspected related to a U-Line product, please take the following steps:

1. U-Line Customer Care must be contacted immediately at +1.414.354.0300.
2. Service or repairs performed on the unit without prior written approval from U-Line is not permitted. If the unit has been altered or repaired in the field without prior written approval from U-Line, claims will not be eligible.

## GENERAL INQUIRIES

U-Line Corporation  
8900 N. 55th Street  
Milwaukee, Wisconsin 53223 USA  
Monday - Friday 8:00 am to 4:30 pm CST  
T: +1.414.354.0300  
Email: [sales@u-line.com](mailto:sales@u-line.com)  
[u-line.com](http://u-line.com)

## SERVICE & PARTS ASSISTANCE

Monday - Friday 8:00 am to 4:30 pm CST  
T: +1.414.354.0300  
Service Email: [onlineservice@u-line.com](mailto:onlineservice@u-line.com)  
Parts Email: [onlineparts@u-line.com](mailto:onlineparts@u-line.com)

## CONNECT WITH US



# U-Line Corporation (U-Line) Commercial Limited Warranty

## Three Year Limited Warranty

For three years from the date of original purchase, this warranty covers all parts and labor to repair or replace any part of the product that proves to be defective in materials or workmanship. Service provided by U-Line under the above warranty must be performed by a U-Line factory authorized servicer, unless otherwise specified by U-Line. Service provided during normal business hours.

## Five Year Sealed System Limited Warranty

For five years from the date of original purchase, U-Line will repair or replace the following parts, labor not included, that prove to be defective in materials or workmanship: compressor, condenser, evaporator, drier, and all connecting tubing. All service provided by U-Line under the above warranty must be performed by a U-Line factory authorized servicer, unless otherwise specified by U-Line. Service provided during normal business hours.

## Terms

These warranties apply only to products installed in any one of the fifty states of the United States, the District of Columbia, or the ten provinces of Canada. The warranties do not cover any parts or labor to correct any defect caused by negligence, accident or improper use, maintenance, installation, service, repair, acts of God, fire, flood or other natural disasters. The product must be installed, operated, and maintained in accordance with your product's User Guide.

The remedies described above for each warranty are the only ones that U-Line will provide, either under these warranties or under any warranty arising by operation of law. U-Line will not be responsible for any consequential or incidental damages arising from the breach of these warranties or any other warranty, whether express, implied, or statutory. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties give you specific legal rights, and you may also have other rights which vary from state to state.

Any warranty that may be implied in connection with your purchase or use of the product, including any warranty of *merchantability* or any warranty *fit for a particular purpose* is limited to the duration of these warranties, and only extends to five years in duration for the parts described in the section related to the three-year limited warranty above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

- Service must be dispatched by the factory to be eligible for warranty coverage.
- The warranties only apply to the original purchaser and are non-transferable.
- Replacement water filters, light bulbs, and other consumable parts are not covered by these warranties.
- The start of U-Line's obligation begins on the shipment date from the factory.
- Food, beverage, and medicine loss are not covered by these warranties.
- If the product is located in an area where U-Line factory authorized service is not available, you may be responsible for a trip charge or you may be required to bring the product to a U-Line factory authorized service location at your own cost and expense.
- Any product purchased as a floor display is covered by a 90-day warranty only.
- Signal issues related to Wi-Fi connectivity are not covered by these warranties.

For parts and service assistance, or to find U-Line factory authorized service near you, contact U-Line:  
8900 N. 55th Street, Milwaukee, WI 53223 • u-line.com • onlineservice@u-line.com • +1.414.354.0300

# Index

<b>1. STANDARDS AND GENERAL WARNINGS .....</b>	<b>4</b>
1.1 TESTING AND INTENDED USE .....	6
1.2 INTRODUCTION .....	6
1.3 PRODUCT DESCRIPTION .....	6
1.4 CERTIFICATION .....	6
1.5 GENERAL SAFETY REGULATIONS .....	7
1.6 CUSTOMER'S RESPONSIBILITIES .....	7
1.7 CUSTOMER SERVICE REQUESTS .....	8
1.8 ORDERING OF SPARE PARTS .....	8
1.9 PRODUCT CONFIGURATION .....	8
1.10 .....	MATERIALS AND REFRIGERANTS
1.11 .....	WARNING LABELS
<b>2. INSTALLATION .....</b>	<b>10</b>
2.1 TRANSPORTATION AND HANDLING .....	10
2.2 POSITIONING.....	10
2.3 WIRING AND ELECTRICAL HOOK-UP .....	11
2.4 SET UP OPERATIONS.....	12
2.5 RE- INSTALLATION.....	12
2.6 SCRAPPING AND DISPOSAL .....	12
<b>3. OPERATION .....</b>	<b>13</b>
3.1 EWP974 EO CONTROLLER GENERAL DESCRIPTION.....	13
3.1.1 REGULATION.....	14
3.1.2 CONTROLLER USER INTERFACE AND MAIN FUNCTION.....	15
3.1.3 Switching the device ON/OFF .....	16
3.1.4 "MACHINE STATUS" MENU.....	16
3.1.5 MANUAL DEFROST CYCLE ACTIVATION.....	17
3.1.6 DIAGNOSTICS .....	17
3.1.7ALARMS .....	17
3.1.8 CONTROLLER'S INPUT/OUTPUT .....	19
3.1.9 PARAMETERS LIST DESCRIPTION.....	19
3.2 X35 CONTROLLER GENERAL DESCRIPTION.....	25
3.2.1 REGULATION.....	25
3.2.2 CONTROLLER USER INTERFACE AND MAIN FUNCTION.....	26
3.2.3 SET POINT PROGRAMMING.....	27
3.2.4 DISPLAYING MEASURED VARIABLES .....	27
3.2.5 MANUAL DEFROST .....	27
3.2.6 DIAGNOSTIC AND ALARMS .....	27
<b>4. MAINTENANCE AND REPAIR .....</b>	<b>28</b>
4.1 ROUTINE MAINTENANCE .....	28
4.1.1 Cleaning the interior and exterior of the appliance.....	28
4.1.2 Condenser cleaning .....	29
<b>5. TROUBLESHOOTING.....</b>	<b>29</b>
<b>6. SPARE PARTS .....</b>	<b>31</b>

# **1. STANDARDS AND GENERAL WARNINGS**

## **PRODUCTS APPLICABLE TO THIS MANUAL**

The present manual is valid and applicable to the following products range:

### **Adjustable temperature control range:**

- lowest T = -2 °C (28°F), highest T = +8 °C (46°F) for the refrigerator models.
- lowest T = -25 °C (-13°F), highest T = -10 °C (14°F) for the freezer models.

## **Environmental Operating Conditions**

- Nominal environmental operating condition: **Climatic class 5** ( 40°C, HR%=40%);
- Ambient temperature operating range: **10°C~40°C**;
- Humidity: **60% maximum, non-condensing**;
- Electrical supply: **115V/60Hz**;
- Altitude: **2000 meters MSL** (Mean Sea Level);
- Usage: **This product is intended for use indoors only.**

## STANDARDS AND GENERAL WARNINGS

**Note:** All relevant data referring to these products can be found on the data label visible on the rear part of the cabinet. Here is an example of the label:



### How to read the Serial Number:

**XX**

*Last two numbers of the production year*

**POP**

**XXXXXX**

*Progressive serial number of 6 numbers*

# STANDARDS AND GENERAL WARNINGS

## 1.1 TESTING AND INTENDED USE

This equipment is tested in compliance with established regulations and then shipped ready for use.

***“If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.”***

## 1.2 INTRODUCTION


This manual provides all instructions required for the correct use of the equipment and to keep it in optimal condition. It also contains important user safety information. The following professional roles are explained in order to define individual responsibilities:

**Installer:** a qualified technician who installs the equipment in accordance with these instructions.

**User:** the person who, after having read this manual carefully, uses the equipment in accordance with the intended specification of use described in this manual. User's responsibilities: ensure that the product is kept at suitable temperatures in an ambient environment less than +40°C (104°F); be aware of the regulations governing the conservation of products to refrigerate and to observe any whatsoever hygiene indications that may be applicable. The user is obliged to carefully read the manual and refer to its information at all times. Particular attention must be paid to safety warnings (refer to Section 1.5).

**Routine maintenance technician:** qualified operator able to perform routine maintenance of the equipment by following the instructions in this manual.

**Service engineer:** qualified technician, authorized by the manufacturer to perform extraordinary maintenance of the equipment.

The symbol  appears at certain points in the manual to draw the reader's attention to important safety information.

The manufacturer declines any responsibility in case of improper use of the equipment deviating from the reasonably construed intended use, and for all operations carried out that are not in compliance with the instructions reported in the manual.

This manual must be stored in an accessible and known place for all operators (installer, user, routine maintenance technician, service engineer).

## 1.3 PRODUCT DESCRIPTION

The equipment comprises a single body with paneling in various materials and insulation with expanded polyurethane foam. The equipment instruments are located on the front panel where the electrical wiring is housed. The motor unit and the evaporator unit are housed on the top of body. The interior parts are fitted with suitable supports for shelves. The doors are fitted with an automatic return device and magnetic seal elements. During the design and construction stage all measures have been adopted to implement total safety including radius interior corners, funnel-shaped base panel to convey condensate to exterior, no rough surfaces, fixed guards protecting moving or potentially dangerous parts.

## 1.4 CERTIFICATION

The appliances listed in this manual are manufactured in accordance with the following regulations:

- **UL 60335-1: SAFETY OF HOUSEHOLD AND SIMILAR APPLIANCES- Part1: General Requirements.**



# STANDARDS AND GENERAL WARNINGS

- UL 60335-2-89: HOUSEHOLD AND SIMILAR APPLIANCES - SAFETY - Part 2-89: Particular Requirements for Commercial Refrigerating Appliances with an Incorporated or Remote Refrigerant Unit or Compressor.
- NSF/ANSI7-2023 COMMERCIAL REFRIGERATORS AND FREEZERS.

## 1.5 GENERAL SAFETY REGULATIONS

Read this manual carefully and follow the instructions contained herein.

The user assumes full responsibility in case of operations carried out without observing the instructions in the manual.



**Do not use this product with flammable gases or flammable solvents.**



**Do not store flammable gases, flammable liquids or flammable solids in these units.**

Primary general safety regulations:

- Do not touch the unit with wet hands and/or feet. Do not use the equipment with bare feet;
- Do not insert screwdrivers or other pointed objects between guards or moving parts of the equipment;
- Do not pull the power cord to disconnect the equipment from the electrical mains. Make sure that the equipment is not used by unsuitably qualified persons;
- Before performing any cleaning or maintenance on the equipment disconnect it from the electrical mains by switching off the main switch and extracting the plug;
- **Never** use any metallic scouring pads, brushes, abrasive cleaners or strong alkaline solution on any surface.
- The relocation of the unit must be performed by qualified personnel. Do not shift the refrigerator from side to side as this may create leakage point across the cooling unit piping.
- In case of faults or malfunctions, switch off the equipment and do not attempt to repair it by yourself as doing so may void the warranty. All service and repair operations must be performed exclusively by a manufacturer's authorized engineer. (Authorized service technician, trained service personnel, authorized service personnel)
- Propane fridge/freezer, like any other appliance, must have access to fresh air/oxygen;
- Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING: Do not damage the refrigerant circuit.**



**Do not use FLAME to check for gas leak.**



**Do not under any circumstances** try to modify or repair valves, regulator, connectors, controls or any other appliance. Doing so creates the risk of a gas leak.

## 1.6 CUSTOMER'S RESPONSIBILITIES

The customer is required to:

- Execute the electrical connection of the equipment. Prepare the place of installation;
- Provide consumable materials for cleaning. Perform routine maintenance;
- In the case of power failures or malfunctions do not open the doors, in order to maintain the internal temperature for as long as possible. If the problem persists for more than a few hours, move the contents to a more suitable place.



# STANDARDS AND GENERAL WARNINGS

## 1.7 CUSTOMER SERVICE REQUESTS

- For all technical problems and any requests for technical service, refer exclusively to the manufacturer's authorized personnel;

## 1.8 ORDERING OF SPARE PARTS

- Orders of spare parts should be made by consulting the part reference code and the serial number of your unit. Consult your dealer.

## 1.9 PRODUCT CONFIGURATION

- The unit is designed solely for products storage, which requires various controls and warning in case of sudden alteration of temperature.






**PRODUCTS MUST BE STORED IN ORDER TO ENSURE EFFICIENT AIR CIRCULATION INSIDE THE UNIT AND SHALL NOT COME OUT OF THE SHELF PERIMETER.**

- All uses outside of manufacturer's intended use in section 1.1 shall be construed as "improper use" for which the manufacturer declines all responsibility.
- It's allowed to accommodate on the shelf a maximum of 45 kg per shelf according to the **UL60335** regulation.






## 1.10 MATERIALS AND REFRIGERANTS

- Materials in contact or potentially in contact with products are in compliance with the relevant directives. The equipment designed and built so that contact parts can be cleaned before each use. The refrigerants utilized comply with established regulations.


## 1.11 WARNING LABELS

Electrical Shock	LABEL A
	Use of this equipment involves power supplies which convert line voltage to low voltage power. Do not modify or use power supplies other than OEM equipment. Connection of the power supply may require a properly grounded receptacle. Potential for electrical shock or equipment damage exists if precautions are not followed.
Hot Surface	LABEL B
	Avoid contact with the hot surfaces potential for skin's burns.
Cold Surface	LABEL C
	Avoid contact with cold freezer surfaces potential for cold burns or skin sticking to cold surfaces.
Safety Alert	LABEL D

## STANDARDS AND GENERAL WARNINGS

	Important operating instructions. To reduce the risk of injury or poor performance of the unit read the user manual before putting the equipment into operation.
Warning	
	Indicates an immediately hazardous situation, which if not avoided, will result in death or serious injury.
Caution	
	Indicates an immediately hazardous situation, which if not avoided, may result in minor to moderate injury
Battery	LABEL E
	Indicates the location of the back-up battery
Risk of fire	LABEL F
	Risk of fire or explosion. Flammable refrigerant used. Follow handling instruction carefully. To be repaired only by trained service Personnel. Do not puncture Refrigerant Tubing.
<p>CAUTION - Risk Of Fire or Explosion due to Flammable Refrigerant Used. Follow Handling Instructions Carefully in Compliance with U.S. Government Regulations.</p> <p>AVERTISSEMENT - Risque d'incendie ou d'explosion dû au fluide frigorigène inflammable utilisé. Suivre les instructions de manutention conformément à la réglementation gouvernementale des États-Unis.</p> <p><i>Packaging markings</i></p>	<p>Packaging markings (Label attached upon the cartoon box)</p>
<p>DANGER - Risk Of Fire or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.</p> <p>AVERTISSEMENT - Risque de feu ou d'explosion. Fluide frigorigène inflammable utilisé. Doit être réparé uniquement par le personnel de service formé. Ne pas perforer le tubage de réfrigérant.</p> <p><i>Service markings 1</i></p>	<p>Service markings. (Label located near the cooling unit compartment)</p>

# STANDARDS AND GENERAL WARNINGS

<div data-bbox="256 212 608 539"> <p>CAUTION - Risk Of Fire or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.</p> <p>PRUDENCE - Risque de feu ou d'explosion. Fluide frigorigène inflammable utilisé. Consulter le manuel de réparation/guide du propriétaire avant de tenter d'installer ou de procéder à l'entretien de ce produit. Toutes les</p> <p>Service markings 2</p> </div>	<p>Service markings (Label located near the cooling unit compartment)</p>
<div data-bbox="256 584 608 898"> <p>CAUTION - Risk Of Fire or Explosion. Dispose Of Properly In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used.</p> <p>PRUDENCE - Risque de feu ou d'explosion. Éliminer correctement conformément aux règlements fédéraux ou locaux. Fluide frigorigène inflammable utilisé.</p> <p>Disposal</p> </div>	<p>Disposal (Marking attached upon the exterior of the cabinet)</p>
<div data-bbox="300 969 558 1043">  </div>	<p>Max high load</p>

## 2. INSTALLATION

### 2.1 TRANSPORTATION AND HANDLING



**The equipment must be transported and handled exclusively in upright position, in observance of the instructions printed on the packing.**

This precaution is necessary to avoid contamination of the refrigerant circuit with compressor lube oil with resulting valve and heat exchanger coil failure and problems starting the electric motor or the risk of a gas leak. The manufacturer is not responsible for any problems due to transport executed in conditions other than those specified herewith.


The equipment is secured to a wooden pallet base, wrapped in a plastic film and packaged into a three waves carton box..

The equipment must be handled using a fork lift truck or a pallet truck with suitable forks (fork length at least equal to 2/3 length of unit).

### 2.2 POSITIONING

Incorrect positioning can cause damage to the equipment and generate hazardous conditions for personnel. The installer must therefore observe the following general regulations:

- The unit can be recessed into a wall. No specific clearance are required. The room must be well ventilated.

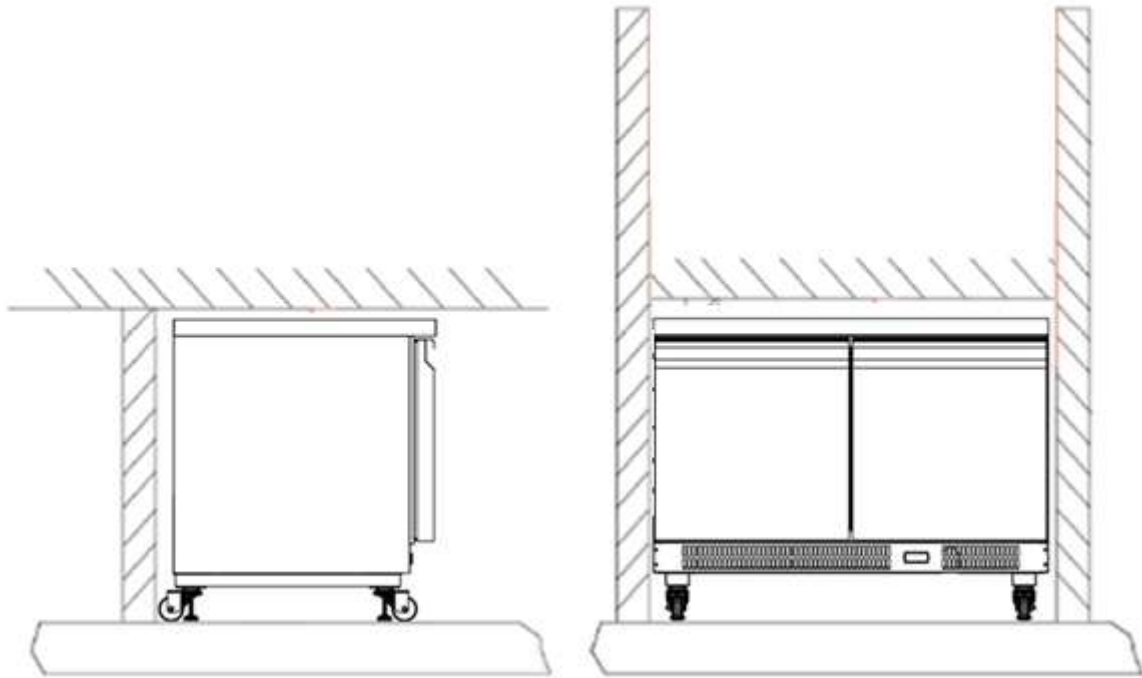

- Keep well away from sources of heat. Avoid direct sunlight.
- Remove packing material.
- Remove accessories from inside the unit.
- Cartoon box or Wood base removal: using a hammer, tilt the cabinet to one side and loosen the two thread-forming screws, drag the cabinet from the back side holding the base still until the four castors have gone out from the containing holes, slightly tilt the cabinet backward and take the base away pulling it from the front side.



*Use gloves when handling the 3 Waves cartoon box or the wooden base to protect the hands from splinters.*

- Position the equipment with the help of a level. Remove the protective PVC film from the external surfaces of the unit.
- Position the shelf runners in the holes in the uprights. Insert the shelves in the runners.

**Note:** the shelves included are n.01 per each door.  
The maximum load of each is 48 kg.

## 2.3 WIRING AND ELECTRICAL HOOK-UP

Receptacle installation and electrical wiring operations must be performed by a qualified electrician. For safety reasons adhere to the following indications:

- Check that the electrical plant is suitably sized for the absorbed power of the unit.
- If the electrical socket and the plug on the equipment power cord are incompatible, call technical service or your local distributor.
- The power cord set included with the appliance meets the requirements for use in the country of purchase. Use the power cord that shipped with the appliance (*Nema 5-15*). If this appliance is to be used in another country, purchase an AC power cord set that is approved for use in that country.



*The power cord must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.*

- Do not use reductions or multi-way adapters (Fig.1)



**It is important to connect the equipment correctly to an efficient earth system executed in compliance with the relevant legislation.**

- The equipment must be positioned so that plug can be easily reached (Fig. 1)



Fig. 1

***If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.***

## 2.4 SET UP OPERATIONS

To avoid errors and accidents, perform a series of checks for possible damage sustained during transport, installation and hook-up operations before starting up the unit.

### PRELIMINARY CHECKS

- Check the condition of the power cord (no cut or chaffing). Check that the door hinges and shelf support are stable.
- Check the door seals and shelves are not damaged (broken or scratched) and that the door closes and seals properly.
- Make sure all copper tubing, unions are in perfect condition.

### FOR OPTIMAL PERFORMANCE

- Do not block the motor compartment air vents. Before storing products wait until they are cold.
- Arrange the products on suitable shelves or in containers. Do not place products directly on the base or against the walls, doors, or fixed guards of the unit.
- Make sure doors are kept closed.
- Keep the defrost water drain outlet clear.
- Limit the frequency and duration of opening; each time the door is opened the internal temperature will alter.
- Load products at ambient temperature gradually to allow correct refrigeration. Perform routine maintenance regularly.

## 2.5 RE- INSTALLATION

Observe the following procedure:

- Disconnect the power cord from the electrical outlet.
- Handle the equipment in accordance with the instructions in Section 2.1.
- Follow the instructions in Section 2.2 for positioning and hook-ups in the new location.

## 2.6 SCRAPPING AND DISPOSAL

These units may contain materials, which at the end of the working life of the apparatus, must be disposed at one of the recycling centers nominated by your Local National Health Department or as

# INSTALLATION

specified by the law in force. Scrapping and disposal of the equipment must be carried out in full observance of established legislation in your country.

In particular, the apparatus may contain the following materials:

- Iron
- Copper
- Aluminium
- Non-biodegradable plastics
- Fibre glass for printed circuits
- Ferrite
- Batteries
- CFC-free refrigeration gas
- Electrical and electronic equipment (WEEE)

The manufacturer shall not be chargeable for any disposal of the apparatus at the end of its working life.



In line with EU Directive 2002/96/EC for waste electrical and electronic equipment (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of this product by returning it to your local municipal collection point for recycling.

## 3. OPERATION

Before switching ON the unit, check that the electrical connections have been made correctly and above all, that the ground connection is available and working properly.

### Please read before using this manual

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- Digital controller with defrost and fans management shall not be used for purpose different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

### Safety precautions

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding the temperature changes with high atmospheric humidity to prevent formation of condensation.



### Warning

- Disconnect all the electrical connections before any kind of maintenance.
- In case of failure or faulty operation contact technical service or Dealer.
- Consider the maximum current which can be applied to each relay.
- Ensure that the wired for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.

## 3.1 EWP974 EO CONTROLLER GENERAL DESCRIPTION

The controller is a microprocessor-based controller suitable for normal and low temperature air-ventilated application.

It has dimensions 74 x 32 x 59 mm, snap-in bracket to be fitted on the panel, four electro-mechanical relays to control the compressor, defrost hot gas valve, evaporator fan and an auxiliary relay used as a dry contact.

The controller is also provided with 2 probe inputs either NTC type: the probe "**Pb1**" defined as "*Control probe*" and used for the compressor activation, the "**Pb2**" defined as "*Evaporator probe*" and used to control the evaporator fan operation and the defrost cycle; The device has also an additional input configurable as analogue input ("*Auxiliary probe*" **Pb3**) or digital input ("*Door switch/multi-function input*")

### **Technical Data**

**Case:** Black color, self-extinguishing.

**Heat and fire resistance category:** D.

**Connections:** Fixed screws terminal blocks for wires up to 2,5 mm<sup>2</sup>; removable screw terminal blocks for wires up to 2,5 mm<sup>2</sup> (by request); Micro-MaTch connectors.

**Maximum length allowed to the connection cables:** 10 meters (32,8ft) for power supply cord; 10 meters (32,8ft) for Analogue inputs; 10 meters (32,8ft) for Digital inputs; 10 meters (32,8ft) for Digital outputs.

**Operating temperature:** from -5°C to 55°C (from 23 to 131°F)

**Operating humidity:** Relative humidity without condensate from 10 to 90%.

**Pollution status of the device:** 2.

**Power supply:** 230VA (±10%) 50/60 Hz

**Over voltage category:** II.

**Analogue input:** 2 for NTC/PTC nodes (Cabinet probe and Evaporator probe)

**Sensor range:** NTC: from -50°C to 110°C (from -58 to 230°F)

**Sensitivity:** 0,1°C (1°F)

**Digital inputs:** 1 (microport) for NO/NC contact

**Terminals:** screw/disconnectable terminals for cables with a diameter of 2.5mm<sup>2</sup>

**Connectors:** TTL for connection of Copy Card + D.I.2

**Digital outputs:** 3 electro-mechanical relays

**Compressor relay:** 12A res. @250VCA (NO contact)

**Evaporator fan relay:** 8A res @250VCA(NO contact) - 6A res @250VCA(NC contact)

**Auxiliary relay:** 5A res @250VCA


**Alarm buzzer:** Incorporated.

### **3.1.1 REGULATION**

Once set a desired temperature required for the products storage within the operational range of each models, the regulation of the cooling system is controlled by the temperature measured by the control probe with a positive differential from the set point: when the temperature rises up to the set point plus differential the compressor starts to pull down the temperature and it turns off when the desired set point is reached again.

*In case of faulty probe, the compressor activation is timed through the parameter "**Ont**" and "**Oft**"*



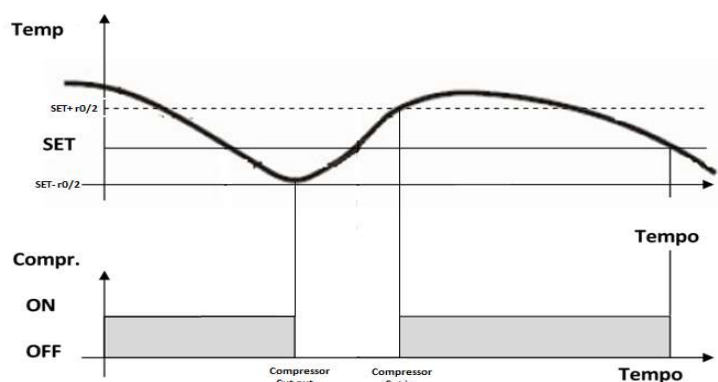








## 3.1.2 CONTROLLER USER INTERFACE AND MAIN FUNCTION



### Use of LEDs

	<b>Reduced Set/Economy Set</b> <i>Permanently ON:</i> Energy Saving ON <i>Blinking:</i> Reduced set point active <i>Rapid blinking:</i> access to level 2 password <i>OFF:</i> Otherwise		<b>Fan LED</b> <i>Permanently ON:</i> Fan active <i>OFF:</i> Otherwise
	<b>Compressor LED</b> <i>Permanently ON:</i> Compressor active <i>Blinking:</i> delay, protection or start-up blocked <i>OFF:</i> Otherwise		<b>Alarm LED</b> <i>Permanently ON:</i> alarm present <i>Blinking:</i> Alarm acknowledged <i>OFF:</i> Otherwise
	<b>Defrost LED</b> <i>Permanently ON:</i> defrost active <i>Blinking:</i> activated manually or by digital input <i>OFF:</i> Otherwise	<b>AUX</b>	<b>Auxiliary input LED</b> <i>Permanently ON:</i> Aux output active <i>Blinking:</i> deep cooling cycle active <i>OFF:</i> Otherwise
	<b>°F readout LED</b> <i>Permanently ON:</i> °F reading active (dro=1) <i>OFF:</i> Otherwise		<b>°C readout LED</b> <i>Permanently ON:</i> °C reading active (dro=0) <i>OFF:</i> Otherwise

## Use of Keys



No.	Key	Action pressing and release	Action pressing for at least 5 secs.
1		- Scrolls through menu items - Increases values	- Activates the Manual Defrost function (when outside the menus)
2		- Scrolls through menu items - Decreases values	-No use.
3		- Returns to the previous menu level - Confirms parameter value	- Activates the Standby function (when outside the menus)
4		- Displays any alarms (if active) - Opens Machine Status menu	- Opens Programming menu (User and Installer Parameters) - Confirms commands

### 3.1.3 Switching the device ON/OFF


The instrument can be switched off/on by pressing the key for longer than 5 seconds.

Switching off the device, the adjustment algorithms and defrost cycles are disabled and the text "OFF" will appear on the display. Once the device is switched on the display will show the actual air temperature read by the air probe.

### 3.1.4 "MACHINE STATUS" MENU

Access the *Machine Status* menu by pressing and releasing the key. If no alarms are active, the "SEt" label appears.

Use the keys and to scroll through all the folders in the menu:

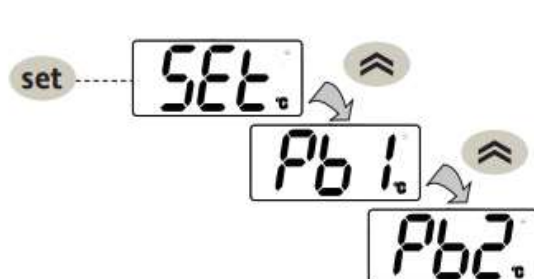

**AL:** alarms folder (only visible if an alarm is active)





**SEt:** Setpoint setting folder

**Pb1:** Air probe


**Pb2:** Evaporator probe (if H42=y)


**Pb3:** Condenser probe (only if H11=0 and H43=y)

## SETPOINT SETTING:


To display the Setpoint value press the  key when the “SE” label is displayed. The Setpoint value appears on the display. To change the Setpoint value, press the  and  keys within 15 seconds. Press  to confirm the modification.

## DISPLAYING THE PROBES

When labels Pb1, Pb2 or Pb3 are present, press the  key to view the value measured by the corresponding probe.


To quit the Machine status menu, press the  key and release.

### 3.1.5 MANUAL DEFROST CYCLE ACTIVATION

Hold down the  key for longer than 5 seconds. It is only activates if the temperature conditions are fulfilled. Otherwise, the display will flash three times to indicate that the operation will not be performed.

Propane unit performs a hot gas defrost: when the defrost cycle is active a solenoid valve opens and the compressor runs to by-pass the hot gas from the discharge line into the evaporator coil. The defrost cycle ends when the evaporator reaches the *dSt* temperature or the *dEt* time is elapsed.

### 3.1.6 DIAGNOSTICS

Alarms are always indicated by the buzzer and the alarm icon .

To switch off the buzzer, press and release any key; the corresponding icon will continue to flash.

Note that if alarm exclusion times have been set the alarm will not be signaled.

- **E1**: In the event of cold room probe faulty (Pb1), the indication “E1” will appear on the display.
- **E2**: In the event of defrost probe faulty (Pb2), the indication “E2” will appear on the display

### 3.1.7ALARMS

Label	Fault	Cause	Effects	Remedy
<b>E1</b>	Probe1 faulty (cold room)	-measured values are outside operating range -Probe faulty/short-circuited/open	-Display label E1 -Alarm icon permanently on -Disable max/min alarm controller -Compressor operation based on parameters “Ont” and “OFt”	-check probe type -check probe wiring -replace probe
<b>E2</b>	Probe2 faulty (defrost)	-measured values are outside operating range -Probe faulty/short-circuited/open	-Display label E2 Alarm icon permanently on -The Defrost cycle will end due to Timeout -The evaporator fans will work in Duty Cycle mode.	-check probe type -check probe wiring -replace probe
<b>E3</b>	Probe3 faulty (if enable)	-measured values are outside operating range -Probe faulty/short-circuited/open	-Display label E3:Alarm icon permanently on	-check probe type -check probe wiring -replace probe

<b>AH1</b>	Alarm for HIGH Pb1 temperature	value read by Pb1 > <b>HAL</b> after time of <b>tAO</b> . (see "MAX/MIN TEMPERATURE ALARMS")	-Recording of label AH1 in folder AL -No effect on regulation	-Wait until value read by Pb1 returns below <b>HAL-Afd</b>
<b>AL1</b>	Alarm for LOW Pb1 temperature	value read by Pb1 < <b>LAL</b> after time of <b>tAO</b> . (see "MAX/MIN TEMPERATURE ALARMS")	-Recording of label AL1 in folder AL -No effect on regulation	-Wait until value read by Pb1 returns above <b>LAL+Afd</b>
<b>EA</b>	External alarm	digital input activation ( $H11 = \pm 5$ )	-Recording of label EA in folder AL -Alarm icon permanently on -Regulation locked if rLO = y	-check and remove the external cause which triggered the alarm on the D.I.
<b>OPd</b>	Door open alarm	digital input activation ( $H11 = \pm 4$ ) (for longer than <b>tdO</b> )	-Recording of label Opd in folder AL -Alarm icon permanently on -Controller locked	-close the door
<b>Ad2</b>	end of defrost cycle due to timeout	end of defrost cycle due to timeout rather than due to defrost end temperature being recorded by probe Pb2	-Recording of label Ad2 in folder AL -Alarm icon permanently on	-wait for the next defrost cycle for automatic return
<b>Ad3</b>	end of defrost cycle due to timeout	activation of the defrost for temperature independently <b>dAt</b> . (active if <b>dCt</b> = 3)	-Recording of label Ad3 in folder AL -Alarm icon permanently on	-wait for the next defrost cycle for automatic return
<b>COH</b>	Over Heating alarm	Pb3 value set by parameter SA3 exceeded.	-Display label COH -Alarm icon permanently on -Regulation locked (Compressor)	-wait for the temperature to return to a value of <b>SA3</b> (Setpoint) minus <b>dA3</b> (differential).
<b>nPA</b>	General pressure switch alarm	Activation of pressure alarm by general pressure switch. ( $H11 = \pm 7$ )	-If the number N of pressure switch activations is <b>N &lt; PEn</b> : -Recording of folder nPA in folder AL, with the number of pressure switch activations -Regulation locked (Compressor and Fans)	-check and remove the cause which triggered the alarm on the D.I. (Automatic Reset)
<b>PAL</b>	General pressure switch alarm	Activation of pressure alarm by general pressure switch. ( $H11 = \pm 7$ )	-If the number <b>N</b> of pressure switch activations is <b>N = PEn</b> : -Display label <b>PAL</b> -Recording of label PA in folder AL -Alarm icon permanently on -Regulation locked (Compressor and Fans)	-Switch the device off and back on again -Reset alarms by entering the functions folder and selecting the <b>rAP</b> function (Manual Reset)

## MAX/MIN TEMPERATURE ALARMS

	Relative Temperature Value to setpoint (Att=1)	Absolute Temperature Value (Att=0)
Minimum temperature alarm	Temp. $\leq$ <b>Set + LAL *</b>	Temp. $\leq$ <b>LAL (LAL with sign)</b>
Maximum temperature alarm	Temp. $\geq$ <b>Set + HAL **</b>	Temp. $\geq$ <b>HAL (HAL with sign)</b>
Returning from minimum temperature alarm	Temp. $\geq$ <b>Set + LAL + AFd</b> or <b>Set -  LAL  + AFd (LAL &lt; 0)</b>	Temp. $\geq$ <b>LAL + AFd</b>
Returning from maximum temperature alarm	Temp. $\leq$ <b>Set + HAL - AFd (HAL &gt; 0)</b>	Temp. $\leq$ <b>HAL - AFd</b>
	<b>* if LAL is negative, Set + LAL &lt; Set</b> <b>**if HAL is negative, Set + HAL &lt; Set</b>	

## 3.1.8 CONTROLLER'S INPUT/OUTPUT

EWPlus 974 EO TERMINALS	
AUX	1-3: AUX relay
	2-3: Compressor relay
3-4	230V~ power supply input
N-L	230V~ power supply
	5-6: N.O. Fans relay
	5-7: N.C. Fans relay
8-10	Pb2 probe
9-10	Pb1 probe
11-10	Digital Input 1 (H11≠0 and H43=n) or Pb3 probe (H11=0 and H43=y)
TTL	TTL input or Digital Input 2 (H12≠0)

## 3.1.9 PARAMETERS LIST DESCRIPTION

All parameters necessary for the correct operation of the machine have already been programmed into the control panel. In the event that it becomes necessary to vary some of these parameters, please contact the manufacturer or the authorized service agent.



**CAUTION!** The modification of a level 2-parameter without authorization of the manufacturer causes the loss of guarantee.

Parameter	Description	Range	Unit of M.
<b>Compressor parameters (CP folder)</b>			
diF	Differential: Compressor relay activation differential. <b>N.B.: diF cannot be equal to 0.</b>	0,1 ... 30,0	°C/°F
HSE	Maximum value that can be assigned to the Setpoint. <b>N.B.: The two Setpoints are interdependent: HSE cannot be less than LSE and vice-versa.</b>	LSE ... 320	°C/°F
LSE	Minimum value that can be assigned to the Setpoint. <b>N.B.: The two Setpoints are interdependent: LSE cannot be higher than HSE and vice-versa.</b>	-67,0 ... HSE	°C/°F
Ont	Controller on time for faulty probe.	0 ... 250	Min

Parameter	Description	Range	Unit of M.
	- if <b>Ont</b> = 1 and <b>OFt</b> = 0, the compressor remains ON, - if <b>Ont</b> > 0 and <b>OFt</b> > 0, it runs in duty cycle mode.		
<b>OFt</b>	Controller off time for faulty probe. - if <b>OFt</b> = 1 and <b>Ont</b> = 0, the compressor remains OFF, - if <b>Ont</b> > 0 and <b>OFt</b> > 0, it runs in duty cycle mode.	0 ... 250	Min
<b>dOn</b>	Compressor relay activation delay after request.	0 ... 250	Secs
<b>dOF</b>	Delay after switching off and subsequent activation.	0 ... 250	Min
<b>dbi</b>	Delay between two consecutive compressor activations.	0 ... 250	Min
<b>OdO</b>	Delay in activating outputs after the instrument is switched on or after a power failure. <b>0 = not active</b>	0 ... 250	Min
<b>dFA</b>	Delay time in activating compressor and condenser fans after request	0 ... 255	Secs
<b>Defrost parameters (DEF folder)</b>			
<b>dtY</b>	Type of defrost. 0= electric defrost - compressor OFF during defrost cycle 1= cycle inversion defrost (hot gas) - compressor ON during defrost cycle 2= 'Free': defrosting independently of compressor	0/1/2	Num
<b>dit</b>	Interval between the start of two consecutive defrost cycles. 0 = function disabled ( <b>defrosting NEVER performed</b> )	0 ... 250	Hours
<b>dCt</b>	Selects the count mode for the defrost interval: -0 = compressor hours of operation (DIGIFROST® method); Defrost active ONLY when the compressor is on.  <b>N.B.: compressor operation time is counted separately from the evaporator probe (count active also when evaporator probe missing or faulty).</b>  -1 = appliance running hours = the defrost count is always active when the machine is on and starts at each power-on; -2 = compressor stop Every time the compressor stops, a defrost cycle is performed according to parameter dtY; -3 = temperature	0/1/2/3	Num
<b>dOH</b>	Defrost start delay time after request.	0 .. 59	Min
<b>dEt</b>	Defrost time-out; determines the maximum defrost duration.	1 .. 250	Min
<b>dSt</b>	Defrost end temperature (determined by the evaporator probe).	-67,0 ... 320	°C/°F
<b>dPO</b>	Determines whether the instrument must enter defrost mode (if the temperature measured by the evaporator allows this operation). -n = no, does not start defrosting at start-up; -y = yes, starts defrost at start-up.	n/y	Flag
<b>dSE</b>	Temperature threshold for start of defrost	-67.0 .. 320	°C/°F
<b>dtT</b>	Time for which the temperature of the evaporator must remain below dSE	0 .. 250	Min
<b>Fan regulator parameters (FAn folder)</b>			
<b>FPt</b>	Characterizes the "FSt" parameter that can be expressed or as an absolute temperature value or as a value related to Setpoint. <b>0</b> = absolute; <b>1</b> = relative	0/1	Flag
<b>FSt</b>	Fan lock temperature: if <b>Pb2</b> > <b>FSt</b> , the fans are stopped. The value is either positive or negative and, depending on parameter <b>FPt</b> , can be either the absolute temperature or the temperature relative to the Setpoint	-67,0 ... 320	°C/°F
<b>FAd</b>	Fan starting differential (see parameters <b>FSt</b> and <b>Fot</b> ).	1,0 ... 50,0	°C/°F

Parameter	Description	Range	Unit of M.																																																						
Fdt	Delay time in activating fans after a defrost operation.	0 ... 250	Min																																																						
dt	drainage time. Dripping time.	0 ... 250	Min																																																						
dFd	Allows to select the evaporator fans exclusion during defrost. <b>y</b> = yes; <b>n</b> = no.	n/y	Flag																																																						
FCO	Evaporator fans operating mode. The state of the fans will be: <table><tr><th colspan="2"></th><th colspan="2">DAY</th><th colspan="2">NIGHT</th></tr><tr><th>H42</th><th>FCO</th><th>COMPRESSOR ON</th><th>COMPRESSOR OFF</th><th>COMPRESSOR ON</th><th>COMPRESSOR OFF</th></tr><tr><td rowspan="4">H42 = y</td><td>0</td><td>Regulated by Pb2</td><td>OFF</td><td>Regulated by Pb2</td><td>OFF</td></tr><tr><td>1</td><td>Regulated by Pb2</td><td>Regulated by Pb2</td><td>Regulated by Pb2</td><td>Regulated by Pb2</td></tr><tr><td>2</td><td>Regulated by Pb2</td><td>Dutycycle Day</td><td>Regulated by Pb2</td><td>Dutycycle Night</td></tr><tr><td>3</td><td>Dutycycle Day</td><td>Dutycycle Day</td><td>Dutycycle Night</td><td>Dutycycle Night</td></tr><tr><td rowspan="4">H42 = n</td><td>0</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td></tr><tr><td>1</td><td>ON</td><td>Dutycycle Day</td><td>ON</td><td>Dutycycle Night</td></tr><tr><td>2</td><td>ON</td><td>Dutycycle Day</td><td>ON</td><td>Dutycycle Night</td></tr><tr><td>3</td><td>Dutycycle Day</td><td>Dutycycle Day</td><td>Dutycycle Night</td><td>Dutycycle Night</td></tr></table> <b>Dutycycle Day:</b> controlled by means of parameters “Fon” and “FoF”. <b>Dutycycle Night:</b> controlled by means of parameters “Fnn” and “FnF”			DAY		NIGHT		H42	FCO	COMPRESSOR ON	COMPRESSOR OFF	COMPRESSOR ON	COMPRESSOR OFF	H42 = y	0	Regulated by Pb2	OFF	Regulated by Pb2	OFF	1	Regulated by Pb2	Regulated by Pb2	Regulated by Pb2	Regulated by Pb2	2	Regulated by Pb2	Dutycycle Day	Regulated by Pb2	Dutycycle Night	3	Dutycycle Day	Dutycycle Day	Dutycycle Night	Dutycycle Night	H42 = n	0	ON	OFF	ON	OFF	1	ON	Dutycycle Day	ON	Dutycycle Night	2	ON	Dutycycle Day	ON	Dutycycle Night	3	Dutycycle Day	Dutycycle Day	Dutycycle Night	Dutycycle Night	0/1/2/3	Num
		DAY		NIGHT																																																					
H42	FCO	COMPRESSOR ON	COMPRESSOR OFF	COMPRESSOR ON	COMPRESSOR OFF																																																				
H42 = y	0	Regulated by Pb2	OFF	Regulated by Pb2	OFF																																																				
	1	Regulated by Pb2	Regulated by Pb2	Regulated by Pb2	Regulated by Pb2																																																				
	2	Regulated by Pb2	Dutycycle Day	Regulated by Pb2	Dutycycle Night																																																				
	3	Dutycycle Day	Dutycycle Day	Dutycycle Night	Dutycycle Night																																																				
H42 = n	0	ON	OFF	ON	OFF																																																				
	1	ON	Dutycycle Day	ON	Dutycycle Night																																																				
	2	ON	Dutycycle Day	ON	Dutycycle Night																																																				
	3	Dutycycle Day	Dutycycle Day	Dutycycle Night	Dutycycle Night																																																				
FdC	Evaporator fans switch-off delay after compressor disabled	0 .. 99	Min																																																						
Fon	Fans ON time in duty cycle. Fans used in duty cycle mode; valid when <b>FCO = dc</b> and <b>H42=1</b> (Pb2 probe present)	0 .. 250	secs*10																																																						
FoF	Fans OFF time in duty cycle. Fans used in duty cycle mode; valid when <b>FCO = dc</b> and <b>H42=1</b> (Pb2 probe present)	0 .. 250	secs*10																																																						
Fnn	Fans ON time in night duty cycle. Fans used in duty cycle mode; valid when <b>FCO = dc</b> and <b>H42=1</b> (Pb2 probe present)	0 .. 250	secs*10																																																						
FnF	Fans OFF time in night duty cycle. Fans used in duty cycle mode; valid when <b>FCO = dc</b> and <b>H42=1</b> (Pb2 probe present)	0 .. 250	secs*10																																																						
Alarms parameters (AL folder)																																																									
Att	Parameters <b>HAL</b> and <b>LAL</b> intended as the absolute temperature value or differential in relation to the setpoint. 0 = absolute value; 1 = relative value.  <b>N.B.: In case of relative values (para. Att=1) parameter HAL should be set to positive values, whilst parameter LAL should have only negative values (-LAL).</b>	0/1	Num																																																						
AFd	Alarm differential.	1,0 .. 50,0	°C/°F																																																						
HAL (!)	Maximum temperature alarm. Temperature value (intended either as distance from Setpoint or as an absolute value based on <b>Att</b> ) which, if exceeded in an upward direction, triggers the activation of the alarm signal.See " <b>Max/Min Temperature Alarms</b> ".	LAL to 320	°C/°F																																																						
LAL (!)	Minimum temperature alarm. Temperature value (intended as distance from the set point or as an absolute value based on <b>Att</b> ) which, when exceeded downwards, triggers the activation of the alarm signal.See " <b>Max/Min Temperature Alarms</b> ".	-67,0 to HAL	°C/°F																																																						
PAO (!)	Alarm exclusion time after instrument switch on, after a power failure. <b>This parameter refers to high/low temperature alarms only.</b>	0 .. 10	Hours																																																						
dAO	Temperature alarm exclusion time after defrost.	0 .. 999	Min																																																						



Parameter	Description	Range	Unit of M.
<b>OA0</b>	Alarm signaling delay (low and high temperature) after digital input disabling (door close).	0 .. 10	Hours
<b>tdO</b>	Alarm activation delay time open door.	0 .. 250	Min
<b>tAO</b>	Temperature alarm signal delay time. This parameter refers to high/low temperature alarms only.	0 .. 250	Min
<b>dAt</b>	Alarm for defrosting ended due to time out. <b>n</b> = alarm deactivated; <b>y</b> = alarm activated	n/y	flag
<b>rLO</b>	External alarm locks controllers. <b>n</b> = does not lock; <b>y</b> =locks	n/y	Flag
<b>AOP</b>	Alarm output polarity. <b>0</b> = alarm active and output disabled; <b>1</b> = alarm active and output enabled.	0/1	Num
<b>SA3</b>	Probe <b>Pb3</b> Alarm Setpoint.	-67,0 ... 320	°C/°F
<b>dA3</b>	Probe <b>Pb3</b> alarm activation differential	1,0 ... 50,0	°C/°F
<b>Cool protection parameters (CPr folder)</b>			
<b>CPS</b>	Cool protection setpoint	-67,0 ... 320	°C/°F
<b>CPd</b>	Cool protection differential	0,1 ... 30,0	°C/°F
<b>CPt</b>	Time that the temperature remains below the cool protection Setpoint ( <b>CPS</b> )	0 ... 255	Min
<b>LIGHTS &amp; DIGITAL INPUTS parameters(Lit folder)</b>			
<b>dOd</b>	Enable utility switch-off on activation of door switch. <b>-0</b> = disabled <b>-1</b> = disables fans <b>-2</b> = disables the compressor <b>-3</b> = disables fans and compressor	0/1/2/3	Num
<b>dAd</b>	Activation delay for digital input	0 ... 255	Min
<b>dCO</b>	Compressor deactivation delay after door opened	0 ... 255	Min
<b>dCd</b>	Fans activation delay after door closed	0 ... 250	Secs
<b>PRESSURE SWITCH parameters(PrE folder)</b>			
<b>PEn</b>	Number of errors allowed for general pressure switch input. <b>0</b> = disabled	0 ... 15	Num
<b>PEI</b>	Minimum/maximum pressure switch error count interval	1 ... 99	Min
<b>PEt</b>	Delay in activating compressor after pressure switch deactivation	0 ... 255	Min
<b>DEEP COOLING parameters(dEC folder)</b>			
<b>dCA</b>	Enable deep cooling ( <b>0</b> = disabled; <b>1</b> = manual; <b>2</b> = automatic).	0/1/2	Num
<b>dCS</b>	Deep cooling setpoint	-67,0 ... 320	°C/°F
<b>tdC</b>	Deep cooling duration	0 ... 255	Min
<b>dcc</b>	Defrost delay after deep cooling	0 ... 255	Min
<b>Sid</b>	Deep cooling start threshold	-67,0 ... 320	°C/°F
<b>toS</b>	Over-threshold time for deep cooling start	0 ... 255	Min
<b>ENERGY SAVING parameters (EnS folder)</b>			
<b>Est</b>	Energy Saving mode: <b>-0</b> = disabled; <b>-1</b> = Offset on setpoint; <b>-2</b> = Offset on differential; <b>-3</b> = Offset on setpoint and differential; <b>-4</b> = Bottle cooler open front' algorithm; <b>-5</b> = Bottle cooler glass door' algorithm; <b>-6</b> = Vertical display cabinet' algorithm	0 ... 6	Num
<b>ESA</b>	AUX output status in energy saving mode: <b>-0</b> = disabled (no effect on AUX); <b>-1</b> = AUX off; <b>-2</b> = AUX on	0/1/2	Num

Parameter	Description	Range	Unit of M.
<b>ESF</b>	Night mode activation (Energy saving) for fans. <b>n</b> = disabled; <b>y</b> =enabled if energy saving mode is active ( <b>ES<sub>t</sub> ≠ 0</b> )	n/y	Flag
<b>Cdt</b>	Door close time	0 ... 255	Min*10
<b>ESo</b>	Cumulative door open time for disabling Energy Saving mode	0 ... 10	Num
<b>OSP</b>	Offset on setpoint	-30,0 ... 30,0	°C/°F
<b>OdF</b>	Intervention differential correction	0,0 ... 30,0	°C/°F
<b>dnt</b>	Duration of night mode	0 ... 24	Hours
<b>dFt</b>	Duration of fast cooling mode	0 ... 24	Hours
<b>SPn</b>	Night mode setpoint	LSE ... HSE	°C/°F
<b>dFn</b>	Night mode offset	0,1 ... 30,0	°C/°F
<b>SPF</b>	Fast cooling setpoint	LSE ... HSE	°C/°F
<b>dFF</b>	Fast cooling offset	0,1 ... 30,0	°C/°F
<b>ESP</b>	Virtual door regulator's sensitivity	0 ... 5	Num
<b>dOt</b>	Maximum Time Door Open with virtual door switch	0 ... 255	Secs
<b>COMMUNICATION parameters (Add folder)</b>			
<b>PtS (!)</b>	Communication protocol selection ( <b>t</b> = Televis; <b>d</b> = ModBus).	t/d	Flag
<b>dEA (!)</b>	Device address: indicates the device address to the management protocol.	0...14	Num
<b>FAA (!)</b>	Family address: indicates the device family to the management protocol.	0...14	Num
<b>Pty (!)</b>	Modbus parity bit setting ( <b>n</b> = none; <b>E</b> = even; <b>o</b> = odd)	n/E/o	Flag
<b>StP (!)</b>	Modbus stop bit setting.	1b/2b	Flag
<b>DISPLAY parameters(diS folder)</b>			
<b>LOC</b>	LOCK. Setpoint change shutdown. There is still the possibility to enter into parameters programming and modify these, including the status of this parameter to permit keyboard shutdown. <b>n</b> = no; <b>y</b> = yes.	n/y	Flag
<b>PS1</b>	PAssword 1. When enabled ( <b>PS1 ≠ 0</b> ), this is the access key to level 1 parameters ( <b>User</b> ).	0...250	Num
<b>PS2</b>	PAssword 2. When enabled ( <b>PS2 ≠ 0</b> ), this is the access key to level 2 parameters ( <b>Installer</b> ).	0...250	Num
<b>ndt</b>	Display with decimal point. <b>n</b> = no (integers only); <b>y</b> = yes (displayed with decimal point).	n/y	Flag
<b>CA1</b>	Calibration 1. Positive or negative temperature value added to the value read by <b>Pb1</b> . This sum is used both for the temperature displayed and for regulation.	-12,0...12,0	°C/°F
<b>CA2</b>	Calibration 2. Positive or negative temperature value added to the value read by <b>Pb2</b> . This sum is used both for the temperature displayed and for regulation.	-12,0...12,0	°C/°F
<b>CA3</b>	Calibration 3. Positive or negative temperature value added to the value read by <b>Pb3</b> . This sum is used both for the temperature displayed and for regulation.	-12,0...12,0	°C/°F
<b>ddl</b>	Display mode during defrost. -0 = display the temperature read by <b>Pb1</b> ; -1 = locks the reading on the temperature value read by <b>Pb1</b> when defrosting starts, and until the next time the <b>SEt</b> value is reached;	0/1/2	Num

Parameter	Description	Range	Unit of M.
	-2 = displays the label deF during defrosting, and until the next time theSEt value is reached. (or until Ldd has elapsed).		
Ldd	Timeout value for display unlock - dEF label	0 ... 255	Min
dro	Select °C or °F for displaying the temperature read by probes. 0 = °C, 1 = °F. <b>NOTE: switching between °C and °F or vice-versa DOES NOT modify the SEt, diF values, etc. (e.g. Setpoint=10°C becomes 10°F).</b>	0/1	Num
ddd	Selection of type of value to be displayed. -0 = Setpoint; -1 = probe Pb1; -2 = probe Pb2; -3 = probe Pb3.	0/1/2/3	Num
<b>CONFIGURATION parameters (CnF folder)</b>			
<b>N.B.: the instrument must be switched off and then on again each time folder CnF parameter configuration is modified to prevent any malfunction of the configuration and/or current timer operations.</b>			
H08	Stand-by operating mode. -0 = display switch off; the loads are active and the device reactivates the display to signal any alarms; -1 = display switch off, loads and alarms stopped; -2 = display with OFF label, loads and alarms stopped.	0/1/2	Num
H11	Configuration of digital input 1/polarity (D.I.1). 0 = disabled; ± 1 = defrost; ± 2 = reduced SET; ± 3 = AUX; ± 4 = door switch; ± 5 = external alarm; ± 6 = stand-by (ON-OFF); ± 7 = pressure switch; ± 8 = deep cooling; ± 9 = energy saving; ± 10 = door switch + energy saving. <b>N.B.: - the “+” sign indicates that the input is active if the contact is closed- the “-” sign indicates that the input is active if the contact is open</b>	-10 ... 10	Num
H12	Configuration of digital input 2/polarity (D.I.2). Same as H11.	-10 ... 10	Num
H21	Configurability of digital output 1 (A). 0 = disabled; 1 = compressor; 2 = defrost; 3 = Fans; 4 = alarm; 5 = AUX; 6 = Stand-by; 7 = not used; 8 = condenser fan change rotation; 9 = retain valve.	0 ... 9	Num
H22	Configurability of digital output 2 (B). Analogo a H21.	0 ... 9	Num
H23	Configurability of digital output 3 (C). Analogo a H21.	0 ... 9	Num
H25	Enable/Disable buzzer. 0 = disabled; 4 = enabled; 1-2-3-5-6-7-8-9 = not used	0 ... 9	Num
H32	Configurability of DOWN key. 0 = disabled; 1 = defrost; 2 = AUX; 3 = reduced SET; 4 = Stand-by; 5 = deep cooling; 6 = energy saving	0 ... 6	Num
H33	Configurability of ESC key. Same as H32	0 ... 6	Num
H42	Evaporator probe present (Pb2). n= not present; y= present.	n/y	Flag
H43	Probe 3 present (Pb3). n= not present; y= present.	n/y	Flag
reL	reLease firmware. Device version: read-only parameter	/	/
tAb	tAbles of parameters. Reserved: read-only parameter	/	/

## 3.2 X35 CONTROLLER GENERAL DESCRIPTION

The X35 model is a digital electronic microprocessor controller that can be used typically for refrigeration applications. It has ON/OFF temperature control and defrost control at time intervals.

The instrument has up to 4 relay outputs, up to 4 inputs configurable for PTC, NTC and Pt1000 temperature probes, and 2 digital inputs. It can be also equipped with an RS485 serial communication interface with MODBUS-RTU communication protocol.

### Technical data

**Power supply:** 12 VDC, 12 ÷ 24 VAC/VDC, 100 ÷ 240 VAC ±10%;

**AC frequency:** 50/60 Hz;

**Power consumption:** about 6 VA;

**Inputs:** Up to 4 inputs for temperature probes (Pr1... Pr4):

NTC (103AT-2, 10 kW @ 25°C);

PTC (KTY 81-121, 990 W @ 25°C);

Pt1000 (1000 W @ 0°C);

up to 4 free of voltage digital inputs ((DI1... DI4 - 2 as an alternative to Pr3 and Pr4);

**Output:** Up to 4 relay outputs;

Out1 - SPST-NO - 16A - 1HP 250V

Out2 - SPDT - 8A - 1/2HP 250 V

Out3/Out 4 - SPST-NO - 5A - 1/10HP 125/250 V

**Overvoltage category:** II;

**Protection class:** Class II;

**Housing:** Self-extinguishing plastic, UL 94 V0;

**Heat and fire resistance category:** D;

**Dimensions:** 78 x 35 mm, depth 64 mm

**Weight:** about 150 g;

**Mounting:** Incorporated flush in panel in a 71 x 29 mm hole

**Protection degree:** IP65 (NEMA 3S)


**Operating temperature:** 0 ÷ 50°C;

**Operating humidity:** < 95 RH% with no condensation;

**Storage temperature:** -25 ÷ +60°C.


### 3.2.1 REGULATION

Once set a desired temperature required for the products storage within the operational range of each models, the regulation of the cooling system is controlled by the temperature measured by the control probe with a positive differential from the set point: when the temperature rises up to the set point plus differential the compressor starts to pull down the temperature and it turns off when the desired set point is reached again.

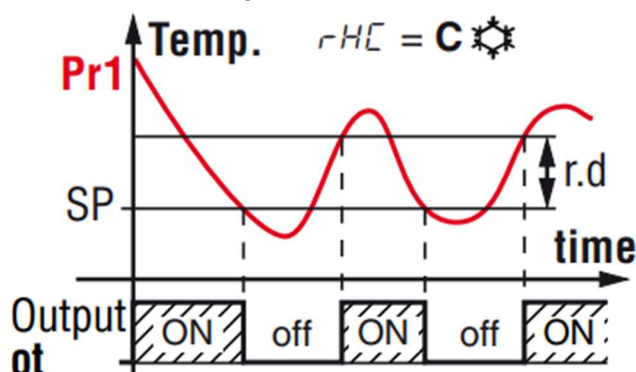


In case of faulty probe, the compressor activation is timed through the parameter “r.t1” and “r.t2”

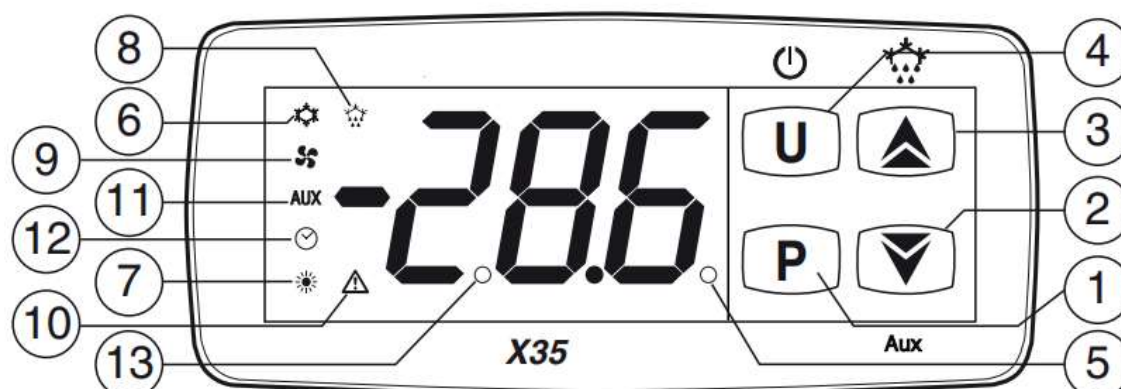


## 3.2.2 CONTROLLER USER INTERFACE AND MAIN FUNCTION




1		Used to set the <b>Set Point</b> (press and release) and to program the function parameters (pressed for 5 s). In programming mode <b>P</b> is used to enter at parameters edit mode and confirm the values. In programming mode it can be used together with the  key to change the programming level of the parameters. When the keyboard is locked <b>P</b> pressed together with the  button for 5 s (or pressed alone for 9 s) key to unlock the keyboard.
2		In programming mode is used for decreasing the values to be set and for selecting the parameters.
3		In normal mode it can be used to <b>start/stop a manual defrost</b> (pressed for 5 s). In programming mode is used to increase the value to be set and to select the parameters. In programming mode,  can be used, together with key <b>P</b> to change parameters level. Pressed together with <b>P</b> key for 5s allows the keyboard to unlock.
4		Press and release the key to display the instrument variables (measured temperatures etc.).In programming mode press  for 2 s to return in Normal mode. Hold pressed for 1 s, while in Normal mode, to carry out other functions such as turn ON/OFF (stand-by) the device.
5	Led SET	During the normal operating mode, signals that a key has been pressed. In programming mode indicates the programming level of the parameters: not protected (ON), protected (flashing).
6	- COOL	Indicates the control output status (compressor or temperature control device) when the instrument is programmed for <b>cooling</b> operation: on ( <b>on</b> ), off ( <b>off</b> ) or inhibited ( <b>flashing</b> ).
7	- HEAT	Not applicable
8		Indicates: <b>Defrost</b> in progress ( <b>on</b> ) or drainage time in progress ( <b>flashing</b> ).
9		Shows the Evaporator Fan(s) output status: on ( <b>on</b> ), off ( <b>off</b> ) or inhibited ( <b>flashing</b> ).
10		Shows the <b>Alarm</b> active status ( <b>on</b> ), off ( <b>off</b> ) and Acknowledged or Latched ( <b>flashing</b> ).
11	Aux	Shows the Auxiliary output status: on ( <b>on</b> ), off ( <b>off</b> ) or inhibited ( <b>flashing</b> )

12		Indicates that the internal clock is running. (Not applicable)
13	<b>Stand-By</b>	When the instrument is in Stand-by mode is the only lit LED

## 3.2.3 SET POINT PROGRAMMING

To program the Set Point momentarily press the  key, the display shows *SP* alternated to the programmed value. To change the value shown press the  key to increase its value or  to decrease it.

## 3.2.4 DISPLAYING MEASURED VARIABLES

In normal operation press  to display the measured values:


**PR1:** air temperature.

**PR2:** evaporator temperature.

**PR3:** condenser temperature.



**Lt:** the lowest temperature read by Pr1 (air probe).

**Ht:** the highest temperature read by Pr1 (air probe).

Browse through the variable by pressing : the screen will display the variable label (for instance *PR2*) and the associated value alternating.

To quit the procedure, do not operate on the controller for 60 seconds.

## 3.2.5 MANUAL DEFROST

To start manual a defrost cycle, press the key  and keep it pressed for about 5 secs while the instrument is in normal mode. After the key pressure, if the conditions are correct, the LED lights up and the instrument performs a defrost cycle. To stop a defrost cycle, press the key  and keep it pressed for about 5 s during the defrost cycle execution.


Propane unit performs a hot gas defrost: when the defrost cycle is active a solenoid valve opens and the compressor runs to by-pass the hot gas from the discharge line into the evaporator coil. The defrost cycle ends when the evaporator reaches the *d.tE* temperature or the *d.dE* time is elapsed.

If the temperature measured by the evaporator probe is higher than the temperature set at the parameters *d.tS* and *d.tE* defrosts are inhibited.

## 3.2.6 DIAGNOSTIC AND ALARMS

The alarm conditions of the instrument are the following:

- **Probe errors:** *E1, -E1, E2, -E2, E3, -E3, E4, -E4*;
- **Temperature alarms:** *H1, L1, H2, L2*;
- **External alarm:** *AL, PrA, HP, LP*;
- **Open door alarm:** *oP*;

During an event of alarm the LED  lights on the screen and the buzzer gets activated. To mute the buzzer press any key of the instrument.

### Probe errors


When a probe error occurs, the screen displays the label (**E**) if the probe is interrupted or (**-E**) if shorted. The probe may be also out of the reading range allowed by the controller.

In this case, check the status of the probe and the wiring connections. The probes used are NTC type (10k $\Omega$  @25°C).

### Temperature alarms


The temperature alarms work according to the air probe measurements.

The instrument has 2 temperature alarms (high temperature alarm: label **H1** and low temperature alarm: label **L1**), fully configurable with a maximum and a minimum threshold.

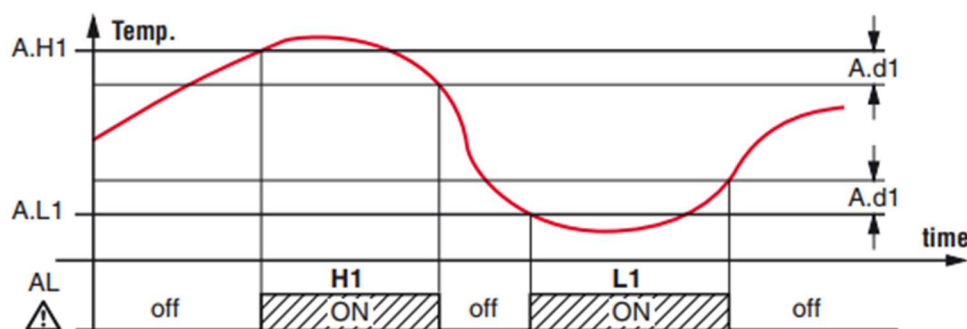

The temperature alarm is cleared only when the temperature return into the temperature alarm threshold of a certain differential.

## Temperature alarms

When the door digital input is activated the instrument shows the label **oP** alternated to the air temperature. Elapsed the delay programmed at parameter A.oA, the instrument signals the alarm activating the buzzer and lighting up the LED  while continues displaying the label **oP**.

## 4. MAINTENANCE AND REPAIR

Maintenance and repair must be carried out by qualified personnel authorized by the manufacturer.



***The manufacturer declines any responsibility for jobs carried out by unauthorized personnel or the use of non-original spare parts.***

### 4.1 ROUTINE MAINTENANCE



**Prohibited to remove the guards and safety devices:** It's strictly forbidden to remove guards or safety devices when performing routine maintenance operation. The manufacturer disclaims all liability that may arise this regulation is not observed.

#### In case of FIRE:

- Disconnect the unit from the electrical power socket.
- Do not use water to extinguish the fire.
- Use powder or foam extinguishers.

#### 4.1.1 Cleaning the interior and exterior of the appliance

The appliance is designed for the products storage so it is important to keep it clean. The equipment is thoroughly cleaned at the factory before being shipped. We recommend, however, to clean the interior cabinet before the first start up of the appliance. **Before attempt any cleaning operation make sure the power cord is disconnected.**

- Cleaning product: use soft clean cloth wet with water and neutral detergent only. **Do not use solvent or bleach.**
- Rinsing: use a cloth or sponge soaked with fresh clean water. **Do not use water jet.**
- Frequency: once a week or at different intervals in accordance with the type of product.



## TROUBLESHOOTING

### 4.1.2 Condenser cleaning

The condenser is a heat exchanger. If it is dirty or clogged the air cannot circulate freely through the same, it cannot discharge heat properly so reducing proportionally the performance and the efficiency of the refrigeration system.

**FOR THOSE REASONS IT IS IMPORTANT TO KEEP CLEAN THE CONDENSER COIL, TYPICALLY MONTHLY.**



**Always switch off the unit and disconnect power cord before cleaning, it is dangerous to do it with power ON: fan may start suddenly at any time.**

Use a convenient ladder to reach the condenser. Use an air jet or vacuum with a soft dry brush if necessary and remove any dust or fluff from the heat exchanger fins.

After cleaning, start the equipment.



**During the cleaning operation wear gloves and safety glasses to protect yourself from any injury**

## 5. TROUBLESHOOTING

The Chart shows the most frequent breakdowns, possible causes and relative remedies:

PROBLEM DESCRIPTION	POSSIBLE CAUSE	SOLUTION
The appliance does not come on	The main switch is "off" There is no tension Other	Main switch "on" Check plug, socket, electric connection Contact technical assistance
The refrigerator unit does not start	Set temperature is reached Defrosting is in operation  Control Panel is broken Other	Set new temperature Wait for end of cycle, switch off and switch back on Contact technical assistance Contact technical assistance
The refrigerator is continuously working but does not reach the set temperature	Room is too hot Condenser is dirty Refrigerant fluid is insufficient Condenser fan has stopped Door not properly closed Evaporator is frosted up Defrost valve is open	Air better Clean condenser Contact technical assistance Contact technical assistance Check door seals Manual defrosting Contact technical assistance
Refrigerator does not stop at set temperature	Control Panel is broken Temperature probe is broken Door is not airtight	Contact technical assistance Contact technical assistance Close door
Ice blocks on evaporator	Improper use Control Panel is broken	Contact technical assistance Contact technical assistance
Appliance is noisy	Appliance not levelled Contact with external bodies  Screws or nuts loose Other	Check that appliance is level. Check that no tube or ventilator fan is in contact with external bodies. Tighten Contact technical assistance
Safety DC fan does not work	Fan disconnected	Re-wire the fan to the electrical strip contact


## ***TROUBLESHOOTING***

	Stuck fan Fan motor damaged	Replace the fan Replace the fan
--	--------------------------------	------------------------------------

**IN ORDER TO GUARANTEE THE EFFICIENCY OF THE APPLIANCE AND ITS CORRECT FUNCTIONING THE MANUFACTURER'S INSTRUCTIONS MUST BE FOLLOWED AND PERIODIC SERVICING MUST BE CARRIED OUT BY PROFESSIONALLY QUALIFIED PERSONNEL.**

**(LEGAL REQUIREMENT FOR THE PREVENTION OF ACCIDENTS AT WORK AND THE INSTALLATION OF ELECTRICAL APPLIANCES)**

**IT IS OBLIGATORY TO BE IN ACCORDANCE WITH POWER SUPPLY REGULATIONS**

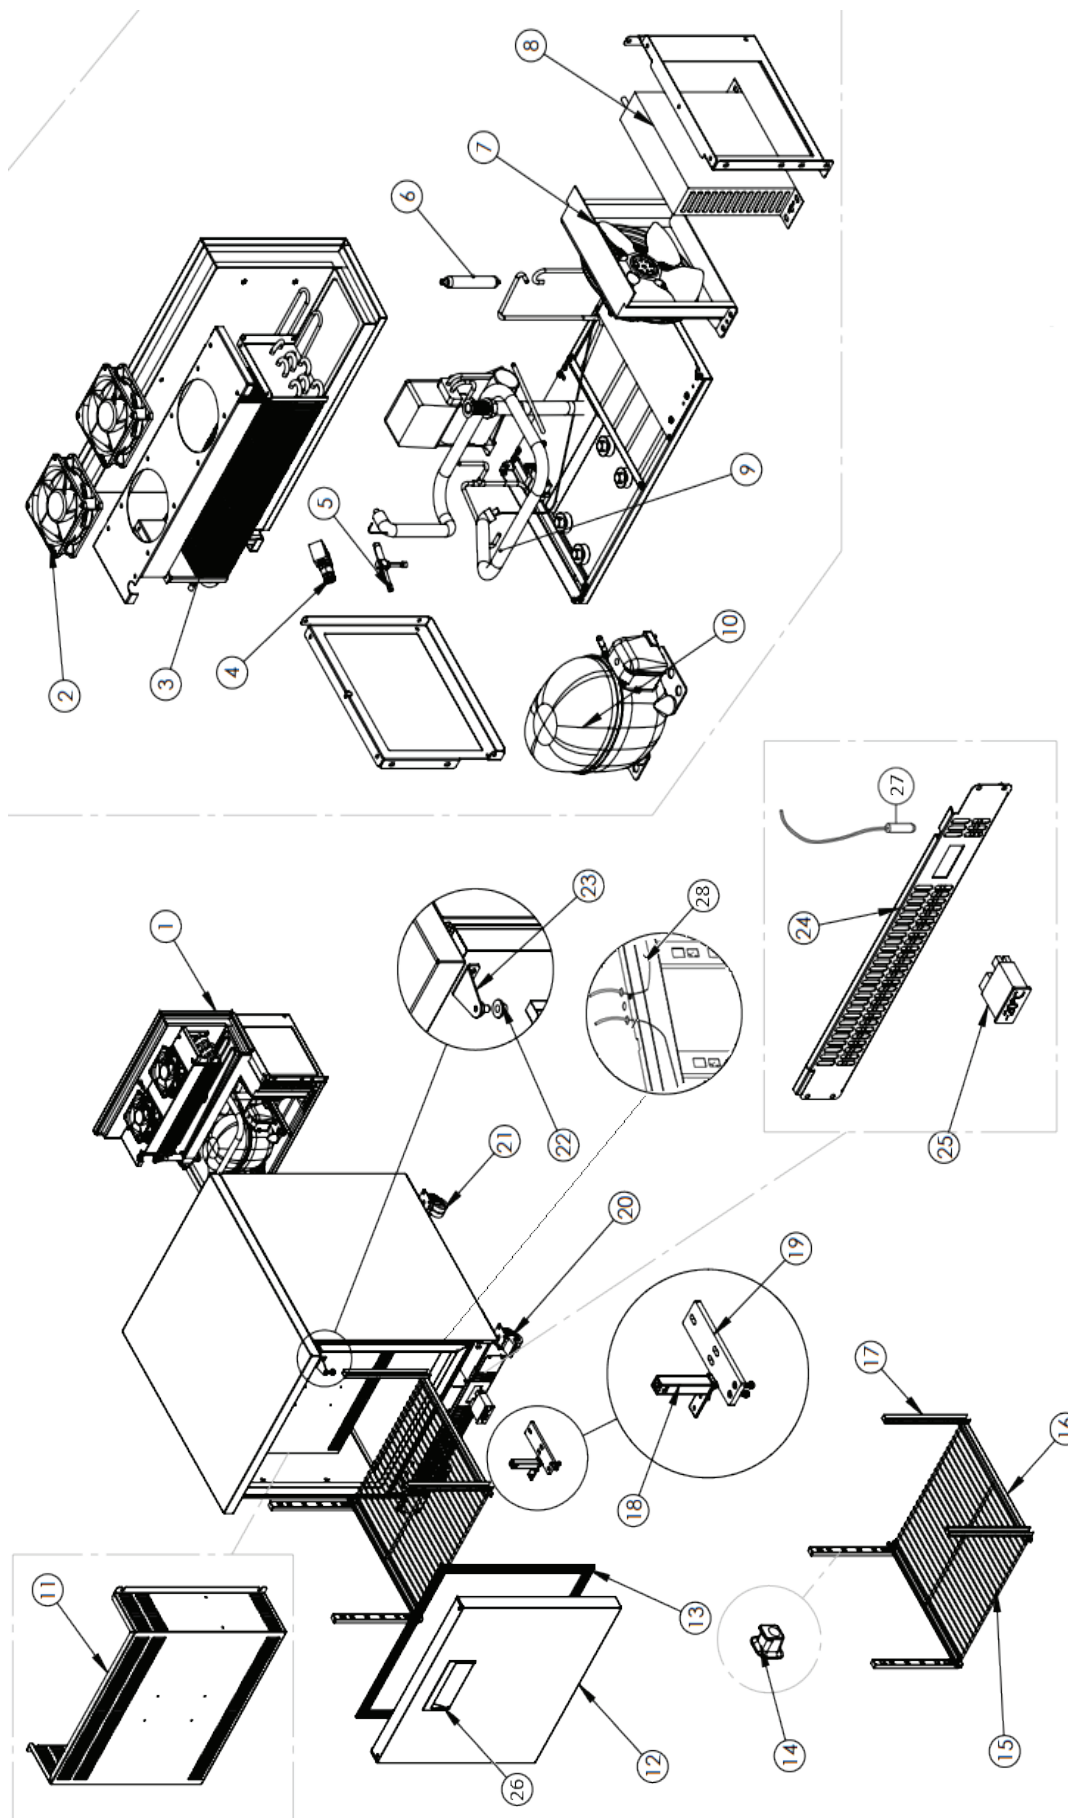

**UCFZ327-SS11A •****27" FRONT VENTING  
UNDERCOUNTER FREEZER**

1	MONOBLOCK, R290 115V/60HZ	80-55687-06
2	EVAPORATOR FAN	80-55630-00
3	EVAPORATOR COIL	80-55687-08
4	VALVE COIL, SOLENOID	80-55687-10
5	DEFROST HOT GAS VALVE	80-55687-09
6	FILTER DRIER, 19mm x 116mm	80-55681-22
7	CONDENSER FAN ASSEMBLY	80-55687-11
8	CONDENSER COIL	80-55623-02
9	SUCTION LINE W/CAPILLARY	80-55687-12
10	COMPRESSOR	80-55687-07
11	EVAPORATOR COVER	80-55687-02
12	DOOR	80-55687-16
13	DOOR GASKET, 589mm x 650mm	80-55687-05
14	PILASTER HOOKS, REAR	80-55657-48

15	SHELF GUIDE, R/L, UCRE327	80-55687-15
16	SHELF, 575MMX525MM	80-55687-14
17	GUIDE PILASTER, FRONT	80-55687-03
18	DOOR HINGE KIT	80-55627-00
19	DOOR BOTTOM BRACKET	80-55657-34
20	CASTOR, SWIVEL W/BRAKE	80-55687-17
21	CASTOR, W/O BRAKE	80-55687-18
22	UPPER HINGE BUSHING	80-55662-12
23	UPPER HINGE PIVOT	80-55687-01
24	FRONT PANEL	80-55687-04
25	CONTROLLER	80-55687-00
26	DOOR HANDLE	80-55657-50
27	TEMPERATURE PROBE	80-55643-00
28	DOOR FRAME HEATER	80-55687-13